



**TOUCHSTONE
TECHNOLOGIES**

Testing the fabric of IP communications™

WinSIP

32 Bit

Touchstone Technologies, Inc.
1500 Industry Road, Suite H,
Hatfield, Pa. 19440
Tel: 267-222-8687
Fax: 267-222-8697

www.touchstone-inc.com

Copyright 2002 - 2013

Table of Contents

Introduction	7
Installation Types	9
WinSIP on CD-ROM.....	9
WinSIP via E-Mail.....	9
WinSIP via the Internet.....	9
WinSIP Installation.....	10
Install Screen 1 - Preparing Setup Wizard	10
Install Screen 2 - Beginning the Installation	11
Install Screen 3 - Beginning the Installation	12
Install Screen 4 - End-User License Agreement	13
Install Screen 5 - Readme Information	14
Install Screen 6 - Customer Information	15
Install Screen 7 - Destination Folder	16
Install Screen 8 - Ready to Install.....	17
Install Screen 10 - Installation Complete	19
CrypKey Installation	20
WinPcap Installation.....	21
WinPCap Install Screen 1 - Welcome to the Installation Wizard.....	21
WinPcap Install Screen 2 - End-User License Agreement.....	22
WinPcap Install Screen 3 - Installation Progress	23
WinPcap Install Screen 4 - Installation Complete	24
Installation of Microsoft Visual C++ Redistributables	25
Redistributables Install Screen 1	25
Redistributables Install Screen 2	26
Redistributables Install Screen 3	26
Running WinSIP for the First Time.....	27
Obtaining the WinSIP Authorization Code.....	27
Overview	28
Edit View	28
Main View.....	29
Detail View	30
File Descriptions.....	31
Setting up WinSIP.....	31
User Interface	32
Modes of operation.....	32
Initiate Calls	32
Answer Calls.....	32
Unattended Answer Mode	33
Proxy Server	33
Registration Test.....	33
Multi-line Initiate.....	33
Multi-line Answer	34
TestML Script.....	34
The Edit View.....	35

The Main View	37
The Detail View.....	39
Call Trace Sub-View.....	40
Call Metrics Sub-View	41
Call Summary Sub-View	42
Audio Summary Sub-View	43
Audio QoS Sub-View.....	44
Video Summary Sub-View	45
Session Info Sub-View	46
WinSIP Menu Commands.....	47
File	47
Edit.....	49
Options.....	50
Tools	51
Peering Fabric.....	52
View	53
Help.....	54
Creating Call Files.....	55
Generating a Call File.....	55
General Page	57
Call Timers	59
Local Information.....	61
Authentication Information.....	63
Remote Information.....	65
DTMF Events	67
Hold/Unhold	70
Call Transfer.....	71
Generating Partner Files	73
Settings.....	74
SIP Options	74
UAC Options (Initiate modes only).....	75
UAS Options (Answer modes only)	75
UAS Authentication.....	75
PRACK	76
SDP Options	76
Dialog Timers.....	76
Session Timer.....	77
UAC Request Options	78
SIP DSCP/TOS Options	78
Call Start/Stop Limits	78
Media Options	79
General.....	80
Start Media	80
Audio Capabilities	80
Edit Audio Codecs.....	81
Edit Playlist	83

Video Capabilities	84
Edit Video Codecs.....	84
Channel Attributes	85
Media DSCP/TOS Options	86
DTMF Events.....	86
Proxy/Registrar Options	88
Proxy Server	89
Registrar	89
Proxy Options (SIMPLE).....	90
Registration Options	90
Error Injection Options.....	91
Enable Error Injection	92
Parser/Transaction Matching Errors	92
UAC Errors	92
UAS Errors.....	92
Advanced	94
Media Path Confirmation	95
Media Recording.....	96
Call Rate Optimization	97
XML Templates.....	97
Tone Detect Confirmation	98
Calls Block Option	98
Custom Headers Options	99
Custom Header.....	100
Apply to.....	100
Reports Options	101
Call Summary Report	102
Session Summary Report.....	102
Logging Options	103
Log File	104
Log Level	104
Dump Statistics every	105
File Limitations.....	105
Preferences Options.....	106
Protocol	107
Retransmission Times (t1 in milliseconds).....	107
System.....	107
Call Analysis	107
Calculate Call Rates	108
Automata	108
Multi-Line Emulation	108
Error Options	108
Auto View Switching	108
Directories Options.....	109
Support Options	111
Peer Options	113

Local Identity.....	114
Options	114
Database	115
Peering Details.....	116
Peer Filter.....	117
Add New.....	117
Configure.....	118
Subscriptions.....	118
Publications	118
Send Message	118
New TestML Script Wizard	119
TestML File Information.....	119
TestML Script Preferences	120
TestML Script Type	121
TestML Script Options.....	122
XML Script Editor	123
CODEC(s).....	124
Audio	124
Video	125
Create New CODEC	125
WinSIP Command Line Automation.....	126
"Rolling" log files	127
FAQ	128
Appendix A	133
Transferring a License.....	133
Step One - Import License, Media Initialization.....	135
Step Two - Export License.....	137
Step Three - Install exported license	141
License Transfer Instruction Chart	144
Appendix B - Installing WinSIP for Limited Users	146
Prior to Installation of any Touchstone Software	146
Procedure	146
Changing a User's Rights	147
Important Note	147
Appendix C - Choosing a Network Card	148
Custom Driver Settings	148
Appendix D - MySQL Installation	150
MySQL Install Screen 1 - Welcome to the installation Wizard.....	151
MySQL Install Screen 2 - Setup Type	152
MySQL Install Screen 3 - Ready to Install.....	153
MySQL Install Screen 4 - Installing	154
MySQL Install Screen 5 - Installing	155
MySQL Install Screen 6 - Installing	156
MySQL Install Screen 7 - Setup Wizard Complete.....	157
MySQL Install Screen 8 - Welcome to the Server service Setup.	158
MySQL Install Screen 9 - Configuration Selection	159

MySQL Install Screen 10 - Server Instance Configuration	160
MySQL Install Screen 11 - Database Type Selection	161
MySQL Install Screen 12 - Connection Configuration Selection	162
MySQL Install Screen 13 - Connection Type Selection.....	163
MySQL Install Screen 14 - Character Set Selection.....	164
MySQL Install Screen 15 - Setup Type	165
MySQL Install Screen 16 - MySQL Server Instance Configuration	166
MySQL Install Screen 17 - Execute the Configuration Settings.	167
MySQL Install Screen 18 - Configuration Progress.....	168
Installing the MySQL Tools	169
MySQL Tools Install Screen 1 - Welcome to the installation Wizard.....	170
MySQL Tools Install Screen 2 - License Agreement.....	171
MySQL Tools Install Screen 3 - Destination Folder.....	172
MySQL Tools Install Screen 4 - Setup Type Selection.....	173
MySQL Tools Install Screen 5 - Ready to Install	174
MySQL Tools Install Screen 6 - Installation Status	175
MySQL Tools Install Screen 7 - Enterprise	176
MySQL Tools Install Screen 8 - Enterprise	177
MySQL Tools Install Screen 9 - Wizard Complete	178
Post-Installation Activities	179
Configuring MySQL Schema.....	179

Introduction

The WinSIP Bulk Call Generator is a high performance SIP signaling and media load generator that is fully compliant with the IETF SIP specification RFC 3261. WinSIP is capable of generating thousands of simultaneous calls using commercial off the shelf (COTS) hardware. This allows you to determine the investment you are willing to make to achieve the performance level you desire. Using a standard single processor desktop computer, WinSIP's performance rivals that of much more expensive solutions that require highly specialized hardware to achieve similar results.

WinSIP goes one step above the others by providing real-time call flow analysis of SIP signaling, tracking errors over extended periods of testing, and allowing you to control the level of verbosity of logged events. These capabilities are invaluable in determining endpoint compliance, detecting network failures and latency and generally troubleshooting SIP network paths.

WinSIP allows you to construct test scenarios which model the real world environment by giving you the flexibility to control all aspects of your calls. WinSIP's intuitive user interface allows you to generate test scripts (call files) containing thousands of calls in less than one minute. Call files and individual call attributes can easily be modified or fine-tuned using a simple, familiar spreadsheet type interface. WinSIP call files can also be exported to your favorite spreadsheet program, which could allow advanced users to generate their own templates to further refine or model testing scenarios.

In conclusion, WinSIP is the ideal tool for generating SIP and media traffic loads without requiring special hardware investments. WinSIP can be an invaluable tool to aid in the testing and debugging of new or recently deployed SIP networks. Best of all, WinSIP users can begin generating real world scenarios within minutes of installing the software!

The WinSIP software is copy protected and is licensed for use on a single machine. Please make sure that you install WinSIP on the machine you intend to use it on. Installation of WinSIP on multiple machines is not possible without authorization from Touchstone.

The following pages will demonstrate how to install, setup, and get started with WinSIP. Please read the following pages carefully. They are the keys to your success.

Note: WinSIP is designed for the advanced 32 bit Windows operating systems. The following operating systems are supported, Windows 2000 Professional, Windows 2000 Advance Server, Windows XP Professional, Windows 2003 Server, Windows 7, Windows 2008 Server and Windows 8.

Version 4.2.0 Summary

Enhancements:

- Call capacity enhancement for Windows 7 and Windows 8.
- 64bit version of WinSIP.

Bug Fixes:

- Tone Detect Confirmation report is changed from "" to "Failed"
- Busy Here after 100 trying was not stopping "Dialog Create Timeout Timer".
- Call not starting after Call Data and Session Summary report overwrite option.
- Added %T for timestamp to Session Summary Report.
- SDP was not sent in 200Ok message if the session refresh invite does not have SDP.
- To Tag was missing for 487 Request Terminated Message.
- Remote Media IPAddress and Ports was not updating for Re-Invite message for session refresh Invite Messages.

Installation Types

WinSIP on CD-ROM

If you received WinSIP on CD-ROM, please follow the following procedure:

- Insert the WinSIP CD in your CD-ROM drive.
- The installation program should start automatically. If it does not, use Windows Explorer to browse the CD and double-click the Setup.exe file.
- Continue to the next section.

WinSIP via E-Mail

If you received WinSIP via E-Mail, please follow the following procedure:

- Double-click on the e-mail attachment.
- Select "Save to Disk" option and select a temporary folder to store the self-extracting file.
- Use Windows Explorer to browse to the folder you saved the self-extracting file in.
- Double-click the self-extracting file. Select a folder to extract the files to.
- Use Windows Explorer to browse to the folder you extracted the files in and double-click the Setup.exe file.
- Continue to the next section in this document.

WinSIP via the Internet

If you downloaded WinSIP via the internet, please use the following procedure:

- WinSIP's setup.exe is compressed using WinZip. Download winsip.zip and extract the setup.exe to a temporary location on the destination computer.
- Double-click on the Setup.exe file.
- Continue to the next section in this document.


WinSIP Installation

Note: To install WinSIP with a “Limited User” account please follow instructions in Appendix A.

The following screens will appear during the installation process. Please follow the directions carefully using the “Next” button to navigate forward and the “Back” button to return to a previous page.

Install Screen 1 - Preparing Setup Wizard

Wait for the wizard to complete or press the “Cancel” to quit the installation.

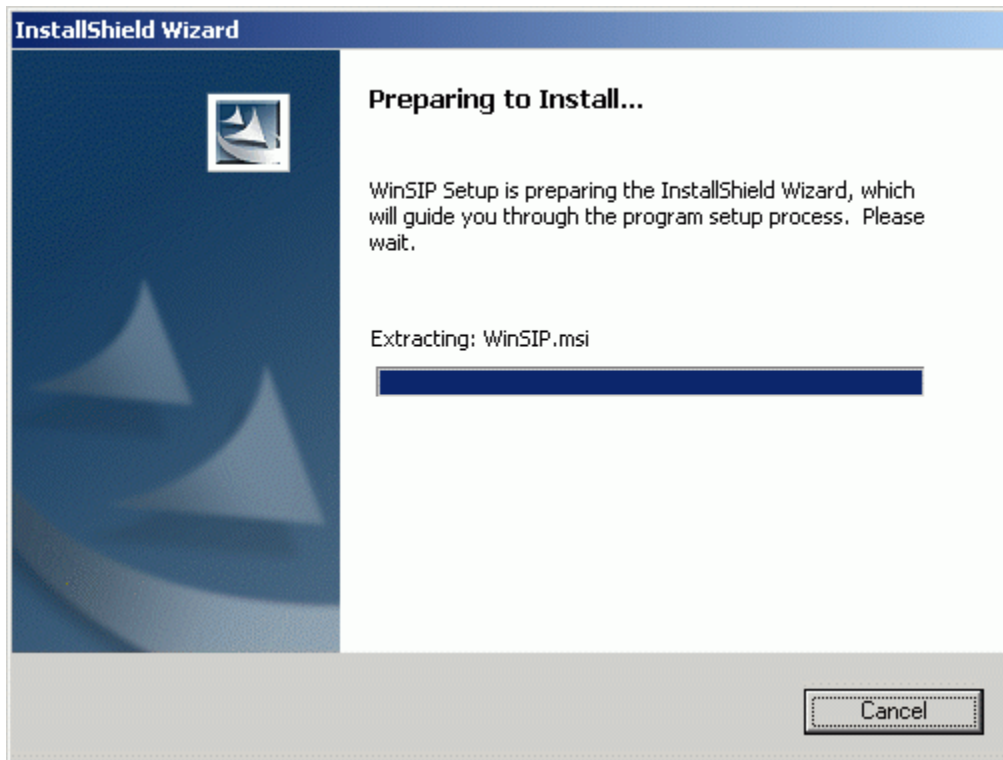


Install Screen 2 - Beginning the Installation

Press the “Next” button to continue the installation or “Cancel” to quit.



Install Screen 3 - Beginning the Installation


Press the “Next” button to continue the installation or “Cancel” to quit.

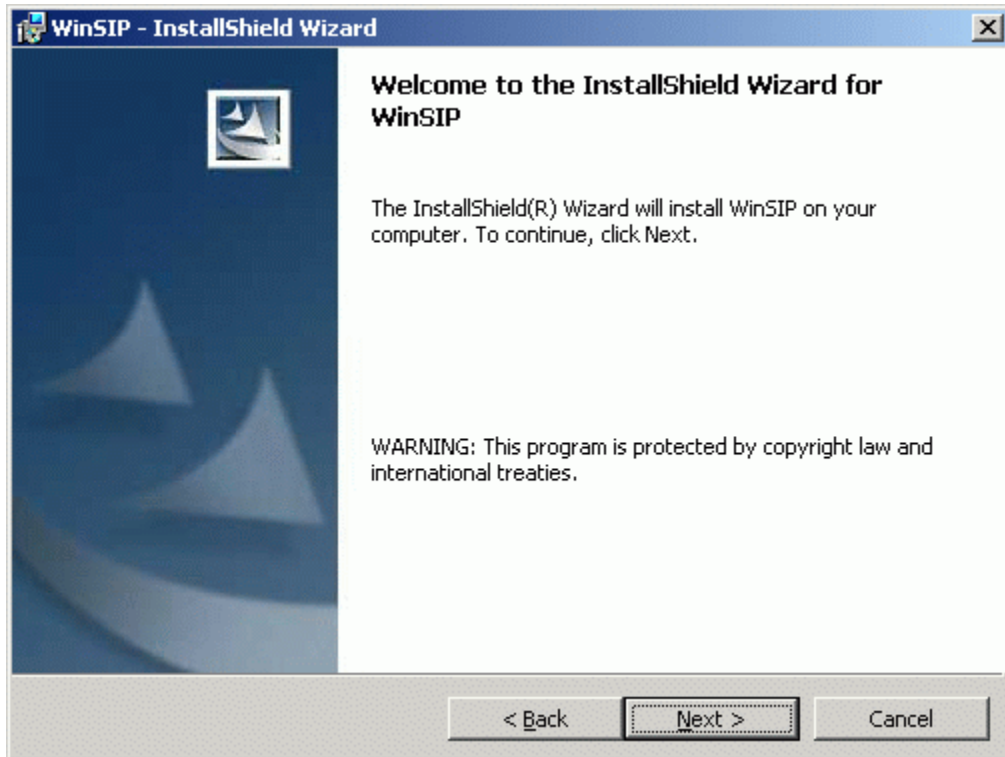

Install Screen 4 - End-User License Agreement


Carefully read the End-User License Agreement. If you accept the terms, select the "I Accept" option, if you do not; select the "I do not accept" option.

Press the "Next" button to continue the installation or "Cancel" to quit.

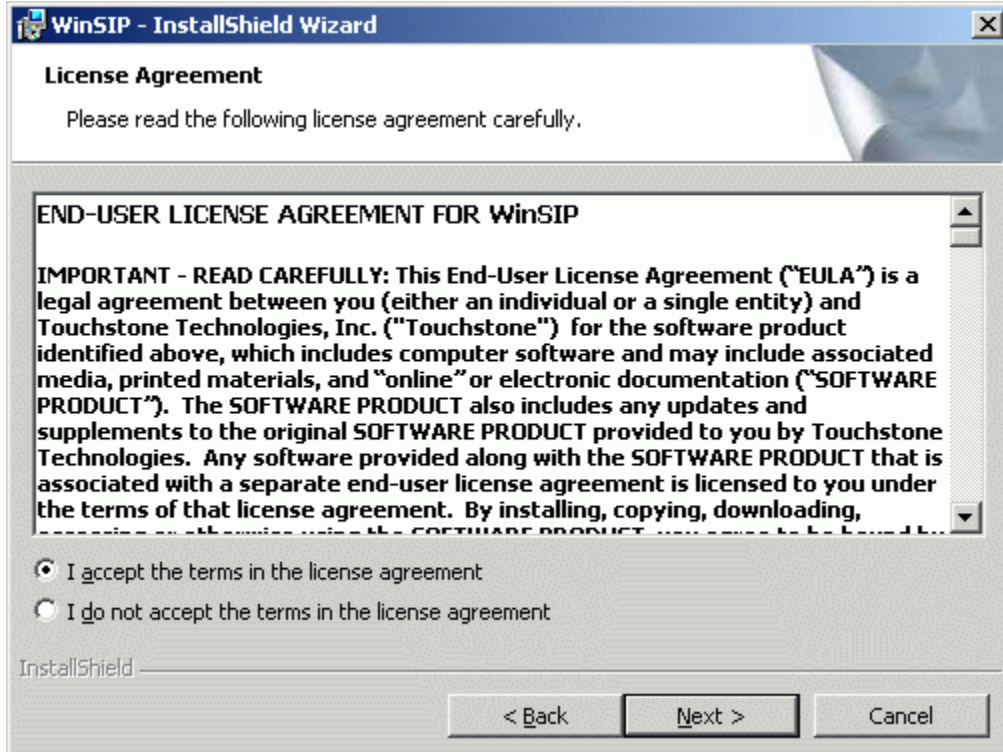

Install Screen 5 - Readme Information


Press the “Next” button to continue the installation or “Cancel” to quit.

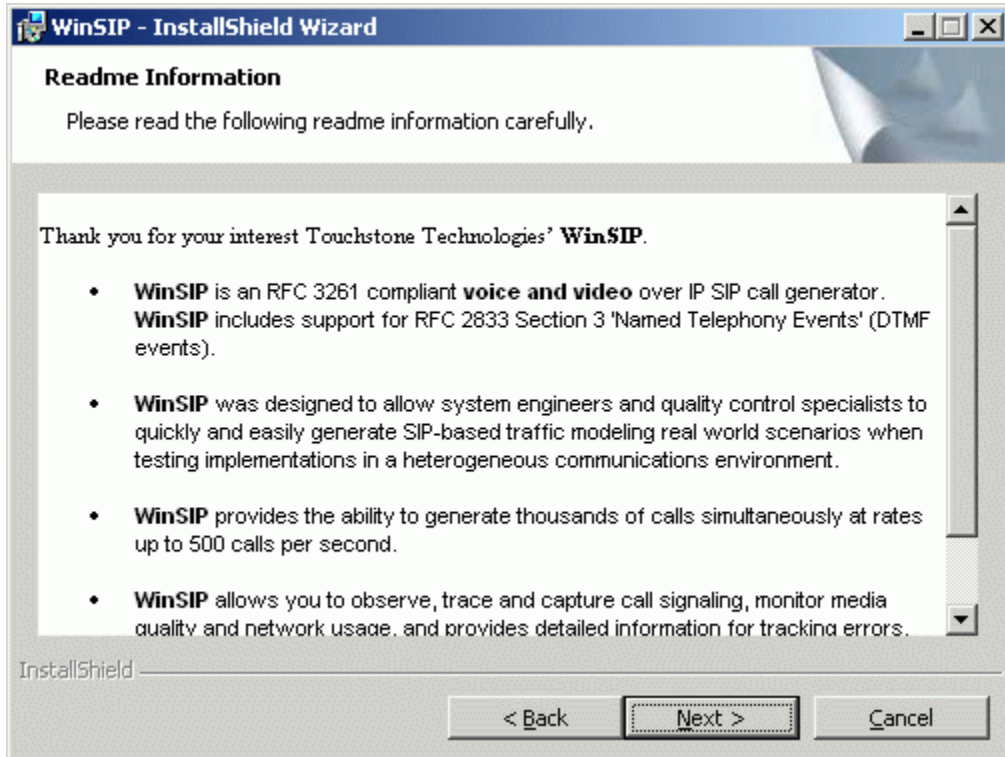

Install Screen 6 - Customer Information

Please fill in your customer information.

Press the “Next” button to continue the installation or “Cancel” to quit.

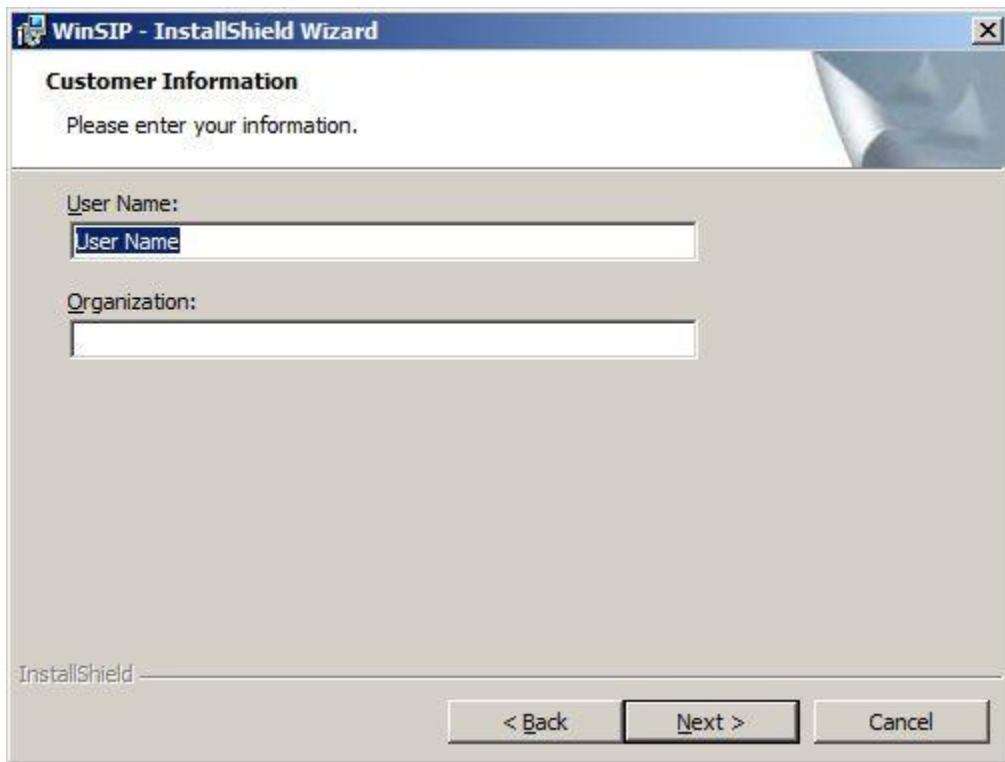


The image shows a screenshot of the 'WinSIP - InstallShield Wizard' window. The title bar is blue with the text 'WinSIP - InstallShield Wizard' and a close button. The main window has a light gray background. At the top, there is a section titled 'Customer Information' with a small graphic of a pen writing on a document. Below this, the text 'Please enter your information.' is displayed. There are two input fields: the first is labeled 'User Name:' and contains the text 'User Name'; the second is labeled 'Organization:' and is empty. At the bottom of the window, there is a progress bar labeled 'InstallShield' and three buttons: '< Back', 'Next >', and 'Cancel'.

Install Screen 7 - Destination Folder


Please select the folder that you would like to install WinSIP and its components in.

Press the “Next” button to continue the installation or “Cancel” to quit.

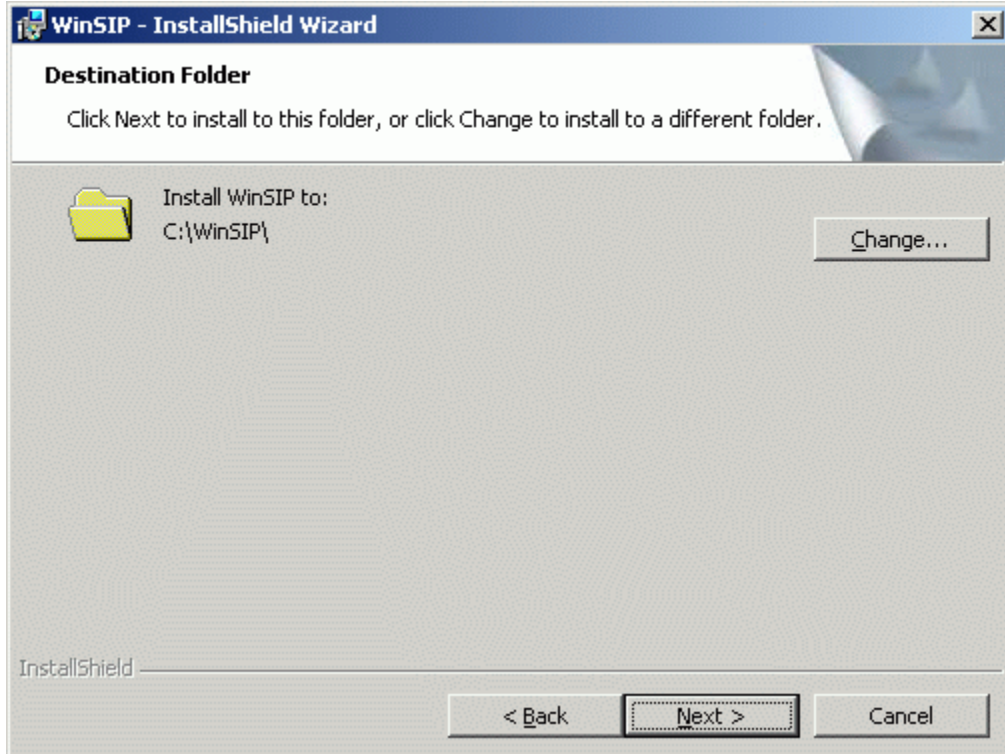


Install Screen 8 - Ready to Install

Press the Install button to continue the installation or Cancel to quit.

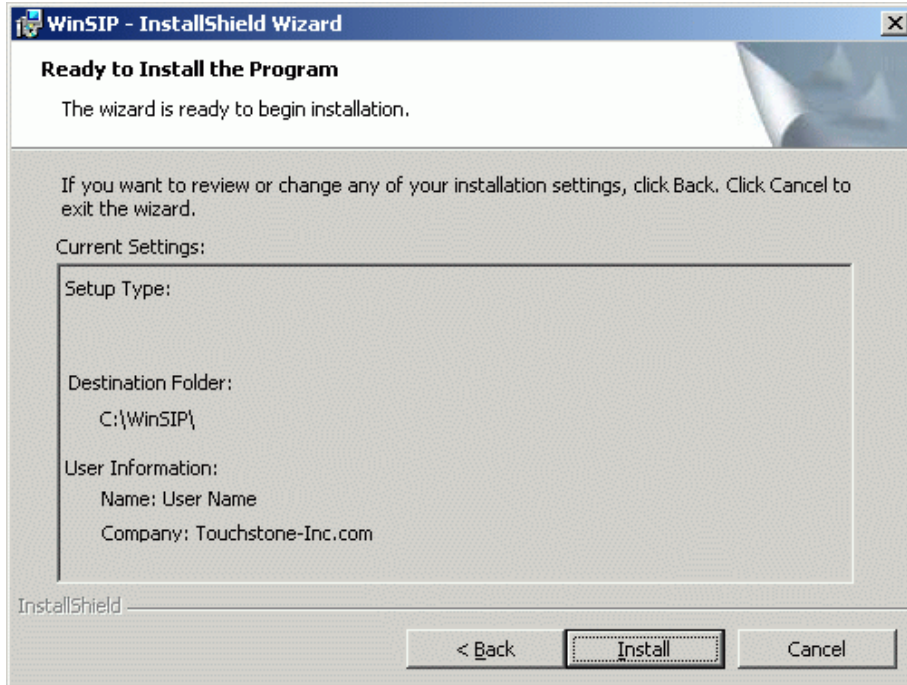


For Windows 7 or Server 2008, the screen below will appear. Please select “All Users” and press Install.

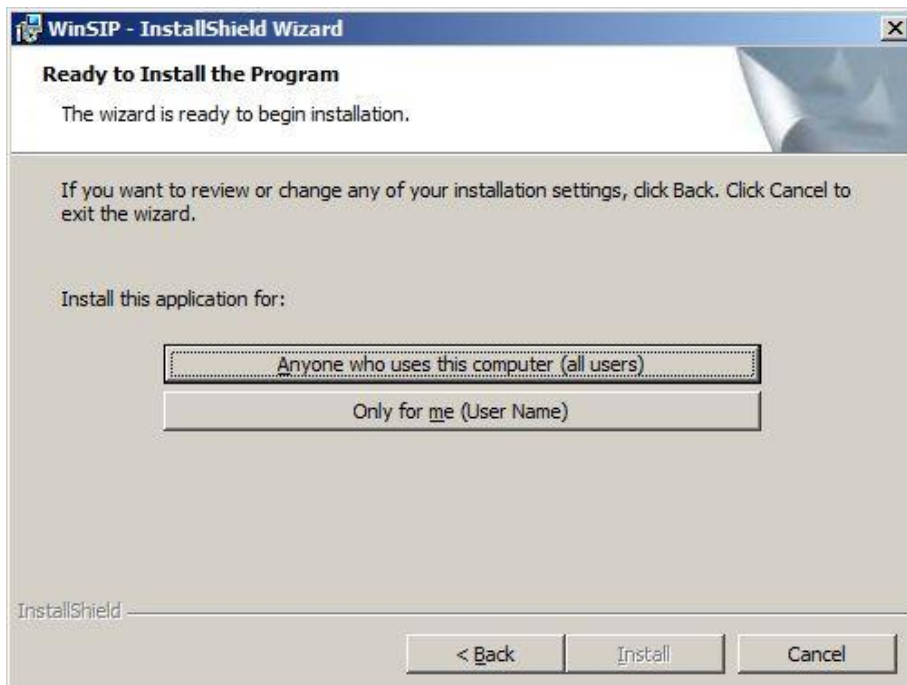

Install Screen 9 - Installing WinSIP


This screen will appear during the installation to inform you of the progress. Typically, this screen will only appear for a very brief period of time.

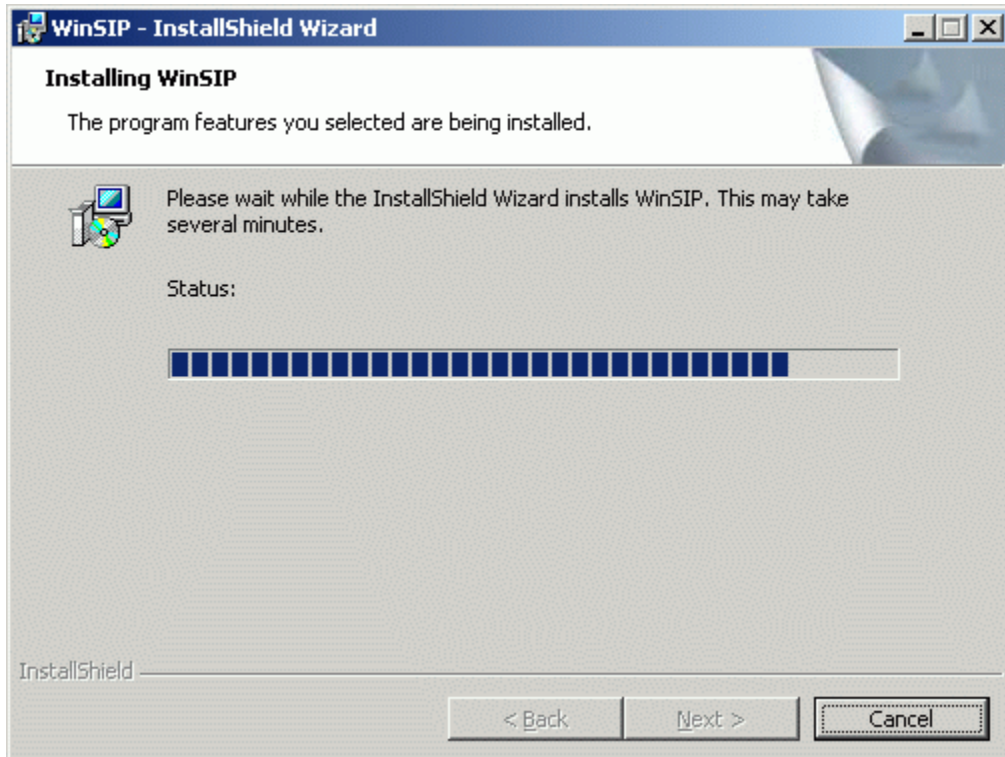

Install Screen 10 - Installation Complete

This screen will appear at the completion of the installation process. Any errors that may have occurred will be reported at this time. Should you encounter any errors, please contact Touchstone for technical assistance at +267.222.8687 or support@touchstone-inc.com.

Press the “Finish” button to complete the installation.

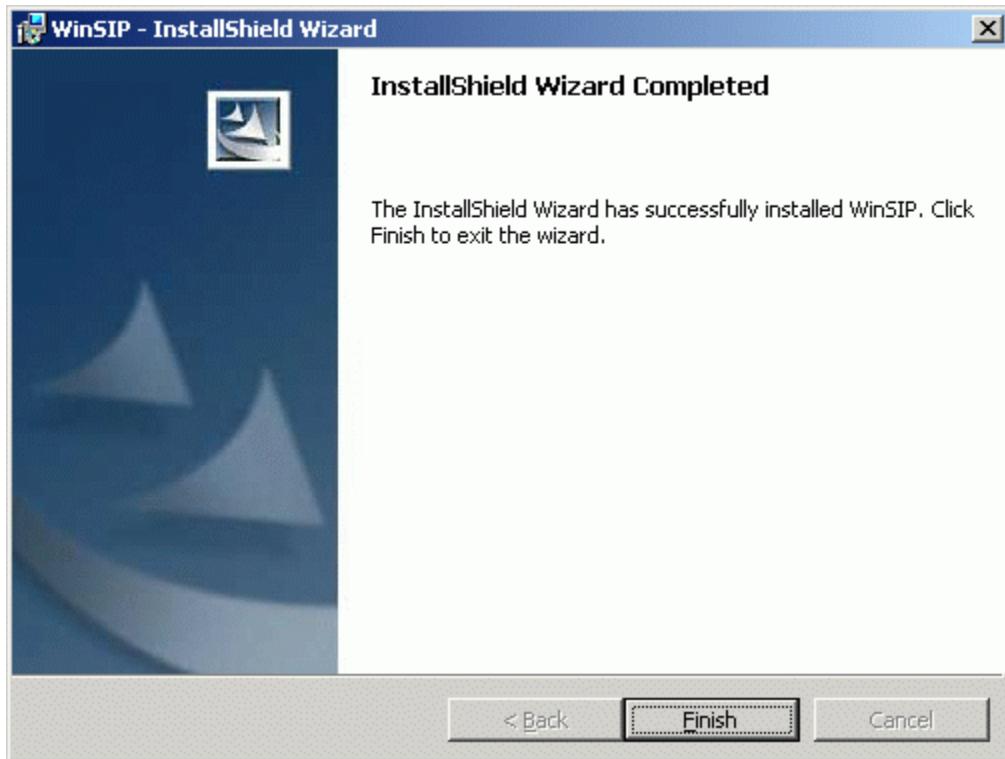

CrypKey Installation

After you press Finish button, CrypKey will automatically get installed your machine. Once it gets installed below screen will popup. Hit OK to Proceed.




In future, if you want to transfer the license to another machine, please see Appendix A, which gives you the step by step procedure for the license transfer.

WinPcap Installation


Before the installation is complete, it is necessary to install the WinPcap driver. If you have installed other products that use this driver (such as Ethereal), you will probably need to restart the computer after installation. The following screens will appear during the WinPcap installation process. Please follow the directions carefully using the “Next” button to navigate forward and the “Back” button to return to a previous page.

If you get below pop up, please press OK to force install the WinPcap Driver.

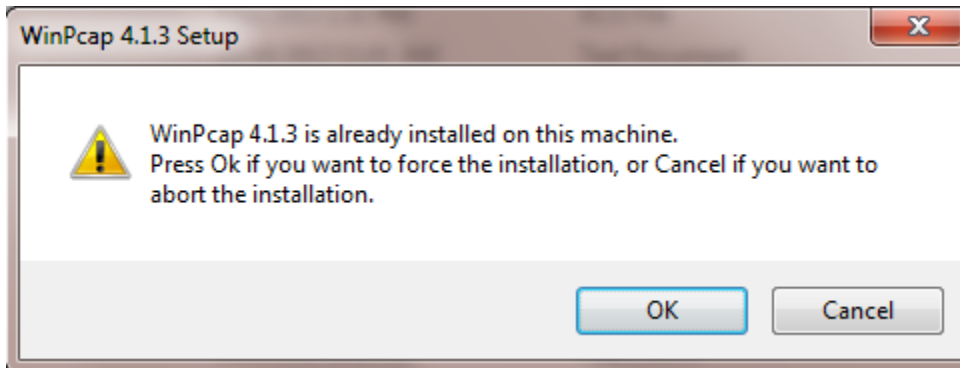


WinPcap Install Screen 1 - Welcome to the Installation Wizard

Press the “Next” button to continue or the “Cancel” to quit the installation.

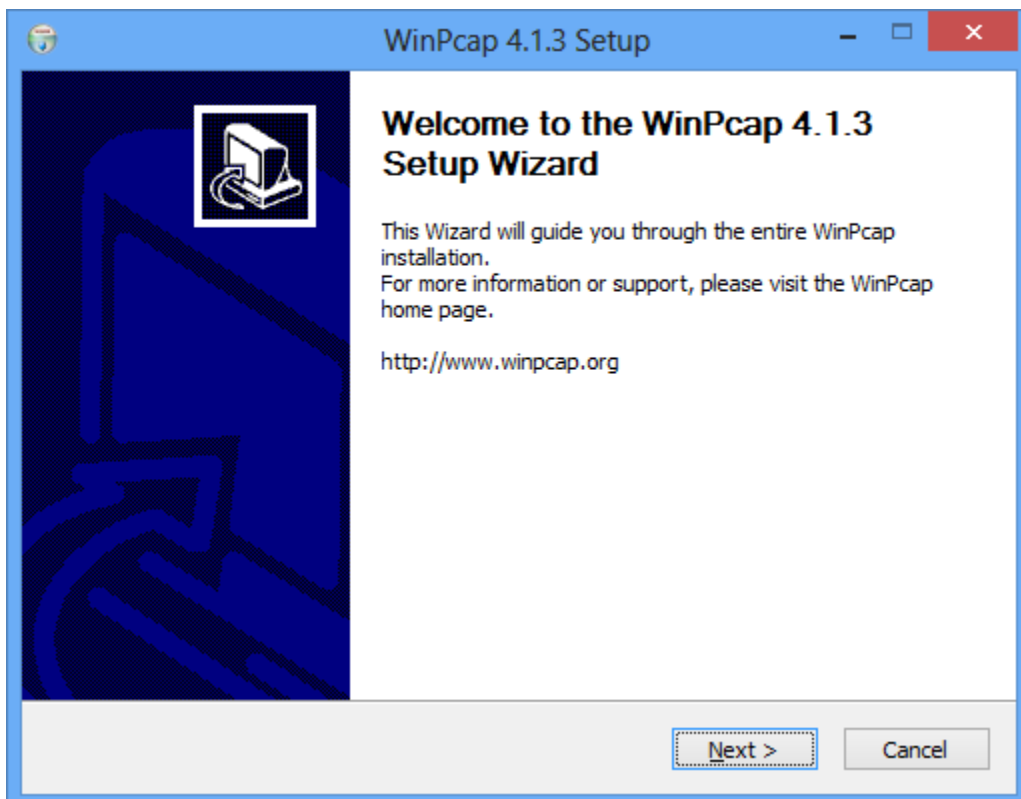

WinPcap Install Screen 2 - End-User License Agreement


Carefully read the License Agreement. If you accept the terms, press the “I Agree” button, if you do not, press the “Cancel” button.

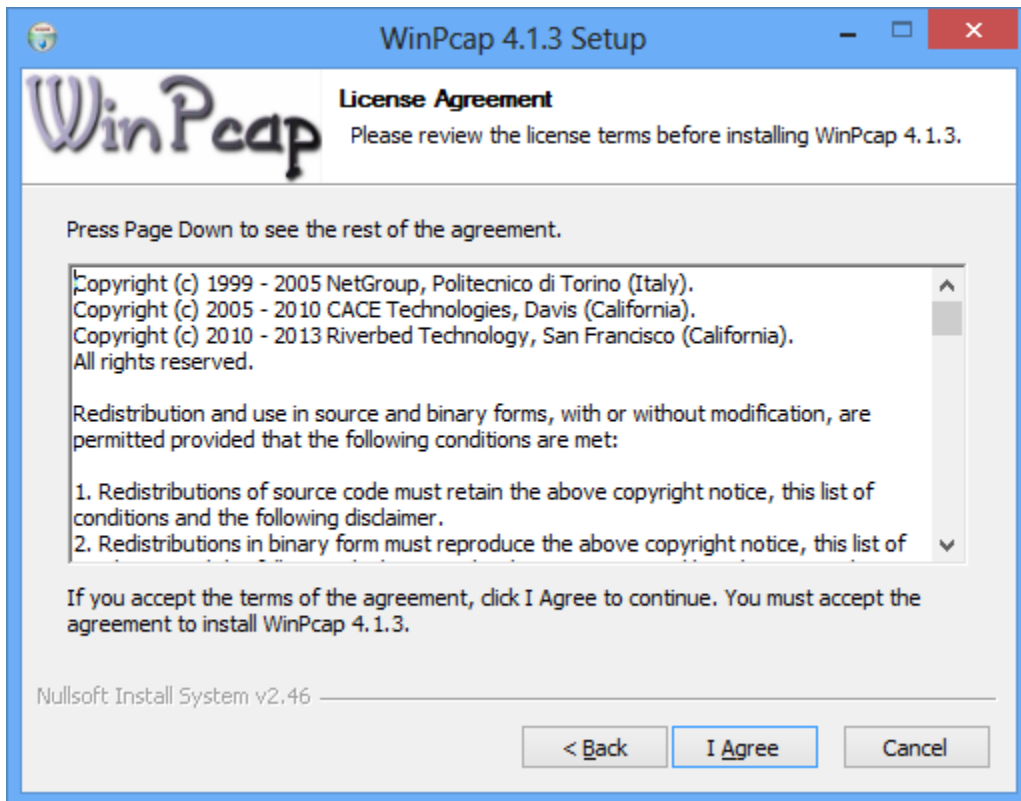

Press the “Next” button to continue the installation or “Cancel” to quit.


WinPcap Install Screen 3 - Installation Progress

This screen will appear during the installation process.

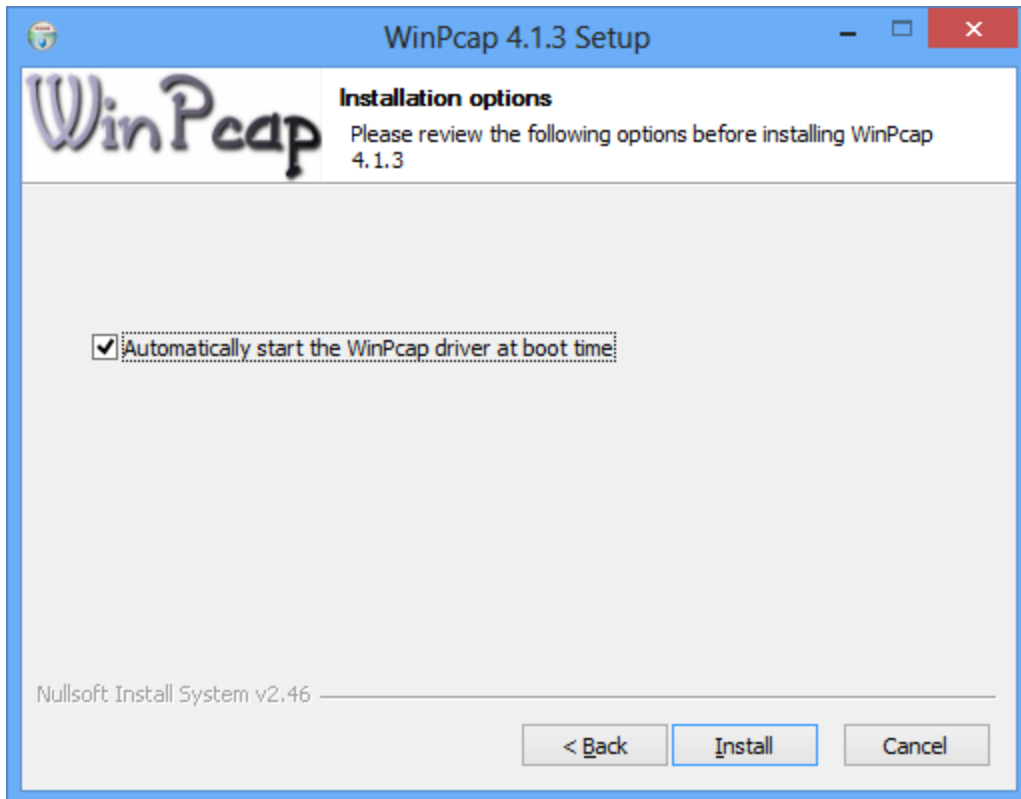

WinPcap Install Screen 4 - Installation Complete

The following screen will appear at the completion of the WinPcap installation.

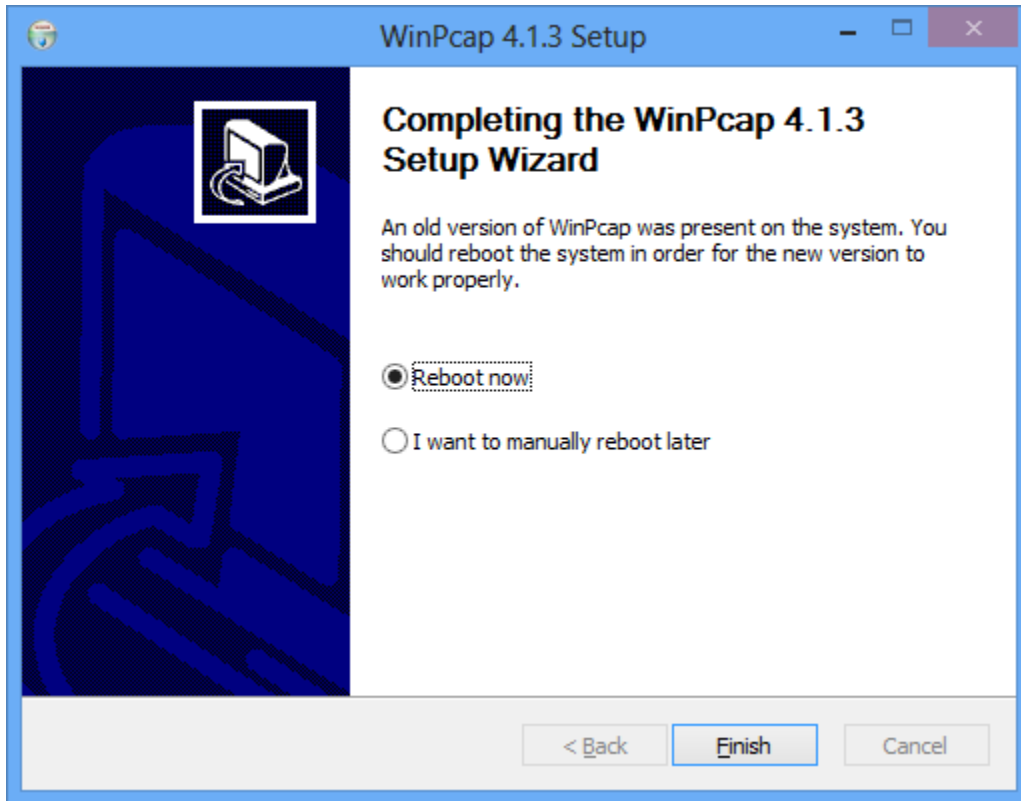


Press the Finish button to complete the installation.

Installation of Microsoft Visual C++ Redistributables

After the WinSIP installation has finished a pop-up window will be display prompting for the installation of the Microsoft Visual C++ Redistributables.


Redistributables Install Screen 1

Make sure the check box to accept the terms is checked then click on the “Install” button.

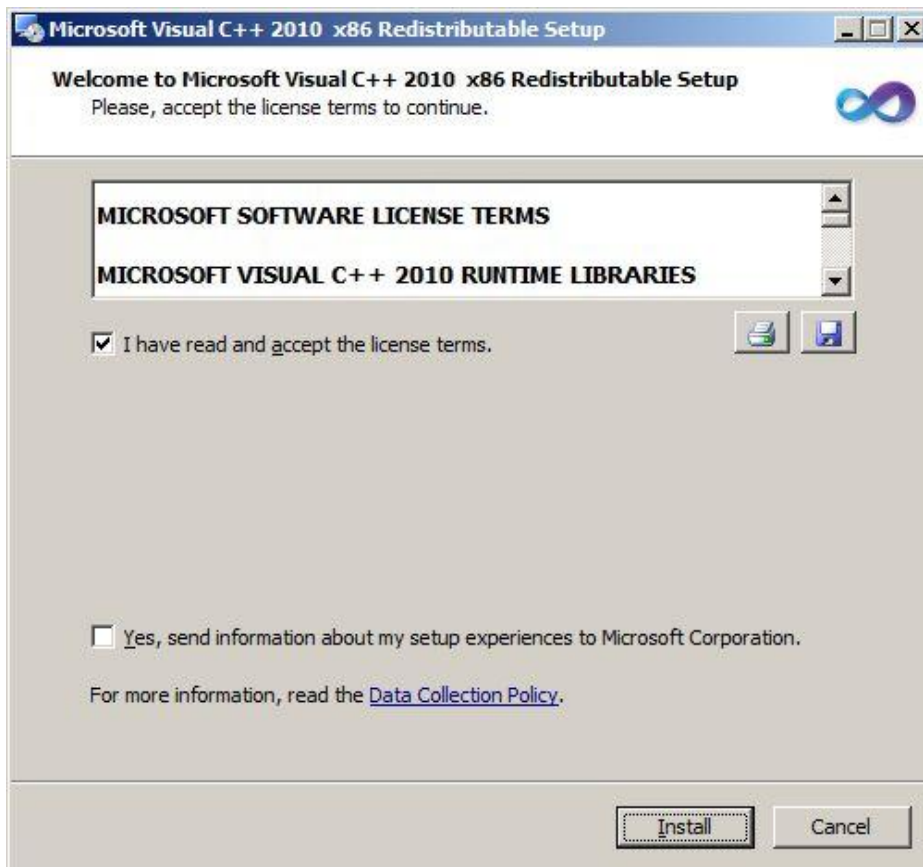

Redistributables Install Screen 2

Installation Progress window is now displayed.

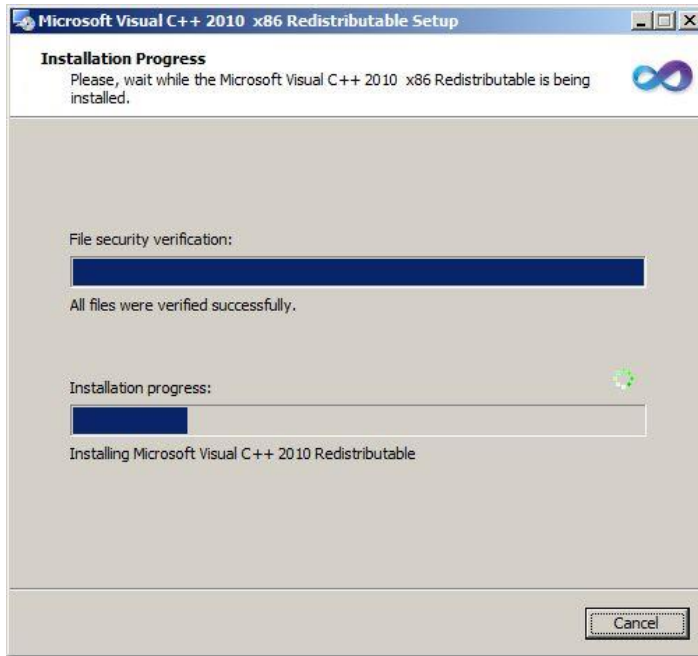

Redistributables Install Screen 3

Click the "Finish" button to continue.




Running WinSIP for the First Time

WinSIP software is copy protected and is licensed for use on a single machine. The first time you run WinSIP, you will be provided with a site code. You must contact Touchstone in order to obtain the authorization code to enable the software.

Once the software is authorized, it may not be installed on any other machines without a new authorization code from Touchstone. If you have installed the software on a machine in error, do not authorize that installation. Re-install it on the appropriate machine prior to contacting Touchstone for the authorization code.

Obtaining the WinSIP Authorization Code

When you first run WinSIP the following authorization dialog will appear:

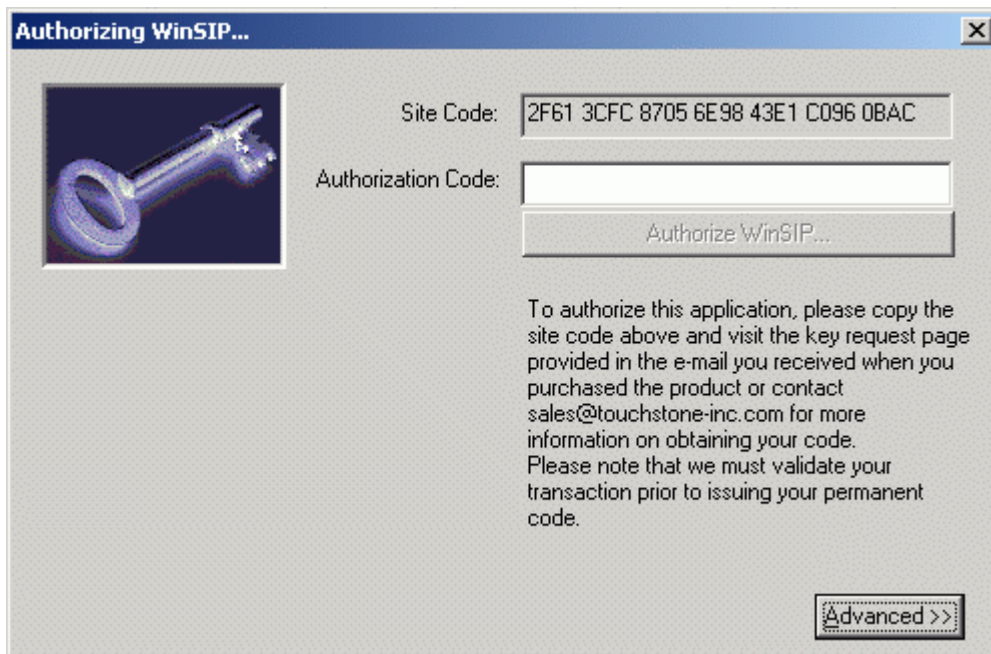

In the field labeled “Site Code” a series of numbers and letters will appear. To authorize the application, contact Touchstone with the **exact** value of the site code field. Touchstone will provide the code to enter in the “Authorization Code” field. You must enter this **exactly** as it is provided to you in order to enable the software. Once you have enabled the software, you are just moments away from being able to construct your first test scenarios!

Overview

WinSIP's main user-interface is divided into three main components:

- Edit View
- Main View
- Detail View

Edit View

This spreadsheet-like view allows quick, intuitive editing of fields, columns or blocks of data.

The screenshot displays the WinSIP application window in 'Edit View' mode. The window has a menu bar (File, Edit, Options, Tools, Peering Fabric, View, Help) and a toolbar with various icons. Below the toolbar is a 'Mode' dropdown set to 'Initiate Calls' and an 'Enable Profiling' checkbox. The main area is a spreadsheet with columns: Call, Status, Local ID/Number, Local Address, Loc. Port, Local Alias, Username, Password, Remote ID/Number, Remote Address, Rem. Port, Remote Alias, and Frequency. The spreadsheet contains 49 rows of call data, each with a 'Ready' status and a 'Repeating' frequency. At the bottom, there is a status bar with fields for 'Registers' (0), 'Invites' (0), 'Acks' (0), 'Byes' (0), 'Total Calls: 100', and 'NUM'.


Call	Status	Local ID/Number	Local Address	Loc. Port	Local Alias	Username	Password	Remote ID/Number	Remote Address	Rem. Port	Remote Alias	Frequency
Call 1	Ready	20000	192.168.1.111	5060	WinSIP	test	password	10000	192.168.1.113	5060	"Device 1"	Repeating
Call 2	Ready	20001	192.168.1.111	5060	WinSIP	test	password	10001	192.168.1.113	5060	"Device 2"	Repeating
Call 3	Ready	20002	192.168.1.111	5060	WinSIP	test	password	10002	192.168.1.113	5060	"Device 3"	Repeating
Call 4	Ready	20003	192.168.1.111	5060	WinSIP	test	password	10003	192.168.1.113	5060	"Device 4"	Repeating
Call 5	Ready	20004	192.168.1.111	5060	WinSIP	test	password	10004	192.168.1.113	5060	"Device 5"	Repeating
Call 6	Ready	20005	192.168.1.111	5060	WinSIP	test	password	10005	192.168.1.113	5060	"Device 6"	Repeating
Call 7	Ready	20006	192.168.1.111	5060	WinSIP	test	password	10006	192.168.1.113	5060	"Device 7"	Repeating
Call 8	Ready	20007	192.168.1.111	5060	WinSIP	test	password	10007	192.168.1.113	5060	"Device 8"	Repeating
Call 9	Ready	20008	192.168.1.111	5060	WinSIP	test	password	10008	192.168.1.113	5060	"Device 9"	Repeating
Call 10	Ready	20009	192.168.1.111	5060	WinSIP	test	password	10009	192.168.1.113	5060	"Device 10"	Repeating
Call 11	Ready	20010	192.168.1.111	5060	WinSIP	test	password	10010	192.168.1.113	5060	"Device 11"	Repeating
Call 12	Ready	20011	192.168.1.111	5060	WinSIP	test	password	10011	192.168.1.113	5060	"Device 12"	Repeating
Call 13	Ready	20012	192.168.1.111	5060	WinSIP	test	password	10012	192.168.1.113	5060	"Device 13"	Repeating
Call 14	Ready	20013	192.168.1.111	5060	WinSIP	test	password	10013	192.168.1.113	5060	"Device 14"	Repeating
Call 15	Ready	20014	192.168.1.111	5060	WinSIP	test	password	10014	192.168.1.113	5060	"Device 15"	Repeating
Call 16	Ready	20015	192.168.1.111	5060	WinSIP	test	password	10015	192.168.1.113	5060	"Device 16"	Repeating
Call 17	Ready	20016	192.168.1.111	5060	WinSIP	test	password	10016	192.168.1.113	5060	"Device 17"	Repeating
Call 18	Ready	20017	192.168.1.111	5060	WinSIP	test	password	10017	192.168.1.113	5060	"Device 18"	Repeating
Call 19	Ready	20018	192.168.1.111	5060	WinSIP	test	password	10018	192.168.1.113	5060	"Device 19"	Repeating
Call 20	Ready	20019	192.168.1.111	5060	WinSIP	test	password	10019	192.168.1.113	5060	"Device 20"	Repeating
Call 21	Ready	20020	192.168.1.111	5060	WinSIP	test	password	10020	192.168.1.113	5060	"Device 21"	Repeating
Call 22	Ready	20021	192.168.1.111	5060	WinSIP	test	password	10021	192.168.1.113	5060	"Device 22"	Repeating
Call 23	Ready	20022	192.168.1.111	5060	WinSIP	test	password	10022	192.168.1.113	5060	"Device 23"	Repeating
Call 24	Ready	20023	192.168.1.111	5060	WinSIP	test	password	10023	192.168.1.113	5060	"Device 24"	Repeating
Call 25	Ready	20024	192.168.1.111	5060	WinSIP	test	password	10024	192.168.1.113	5060	"Device 25"	Repeating
Call 26	Ready	20025	192.168.1.111	5060	WinSIP	test	password	10025	192.168.1.113	5060	"Device 26"	Repeating
Call 27	Ready	20026	192.168.1.111	5060	WinSIP	test	password	10026	192.168.1.113	5060	"Device 27"	Repeating
Call 28	Ready	20027	192.168.1.111	5060	WinSIP	test	password	10027	192.168.1.113	5060	"Device 28"	Repeating
Call 29	Ready	20028	192.168.1.111	5060	WinSIP	test	password	10028	192.168.1.113	5060	"Device 29"	Repeating
Call 30	Ready	20029	192.168.1.111	5060	WinSIP	test	password	10029	192.168.1.113	5060	"Device 30"	Repeating
Call 31	Ready	20030	192.168.1.111	5060	WinSIP	test	password	10030	192.168.1.113	5060	"Device 31"	Repeating
Call 32	Ready	20031	192.168.1.111	5060	WinSIP	test	password	10031	192.168.1.113	5060	"Device 32"	Repeating
Call 33	Ready	20032	192.168.1.111	5060	WinSIP	test	password	10032	192.168.1.113	5060	"Device 33"	Repeating
Call 34	Ready	20033	192.168.1.111	5060	WinSIP	test	password	10033	192.168.1.113	5060	"Device 34"	Repeating
Call 35	Ready	20034	192.168.1.111	5060	WinSIP	test	password	10034	192.168.1.113	5060	"Device 35"	Repeating
Call 36	Ready	20035	192.168.1.111	5060	WinSIP	test	password	10035	192.168.1.113	5060	"Device 36"	Repeating
Call 37	Ready	20036	192.168.1.111	5060	WinSIP	test	password	10036	192.168.1.113	5060	"Device 37"	Repeating
Call 38	Ready	20037	192.168.1.111	5060	WinSIP	test	password	10037	192.168.1.113	5060	"Device 38"	Repeating
Call 39	Ready	20038	192.168.1.111	5060	WinSIP	test	password	10038	192.168.1.113	5060	"Device 39"	Repeating
Call 40	Ready	20039	192.168.1.111	5060	WinSIP	test	password	10039	192.168.1.113	5060	"Device 40"	Repeating
Call 41	Ready	20040	192.168.1.111	5060	WinSIP	test	password	10040	192.168.1.113	5060	"Device 41"	Repeating
Call 42	Ready	20041	192.168.1.111	5060	WinSIP	test	password	10041	192.168.1.113	5060	"Device 42"	Repeating
Call 43	Ready	20042	192.168.1.111	5060	WinSIP	test	password	10042	192.168.1.113	5060	"Device 43"	Repeating
Call 44	Ready	20043	192.168.1.111	5060	WinSIP	test	password	10043	192.168.1.113	5060	"Device 44"	Repeating
Call 45	Ready	20044	192.168.1.111	5060	WinSIP	test	password	10044	192.168.1.113	5060	"Device 45"	Repeating
Call 46	Ready	20045	192.168.1.111	5060	WinSIP	test	password	10045	192.168.1.113	5060	"Device 46"	Repeating
Call 47	Ready	20046	192.168.1.111	5060	WinSIP	test	password	10046	192.168.1.113	5060	"Device 47"	Repeating
Call 48	Ready	20047	192.168.1.111	5060	WinSIP	test	password	10047	192.168.1.113	5060	"Device 48"	Repeating
Call 49	Ready	20048	192.168.1.111	5060	WinSIP	test	password	10048	192.168.1.113	5060	"Device 49"	Repeating

Press Alt + Left Mouse Button To Edit Fields

Registers 0 Invites 0 Acks 0 Byes 0 Total Calls: 100 NUM

Main View

This multi-column view is the main control panel for defining the contents of a session (i.e. selecting the calls to be run) and launching additional or stopping calls within that session.

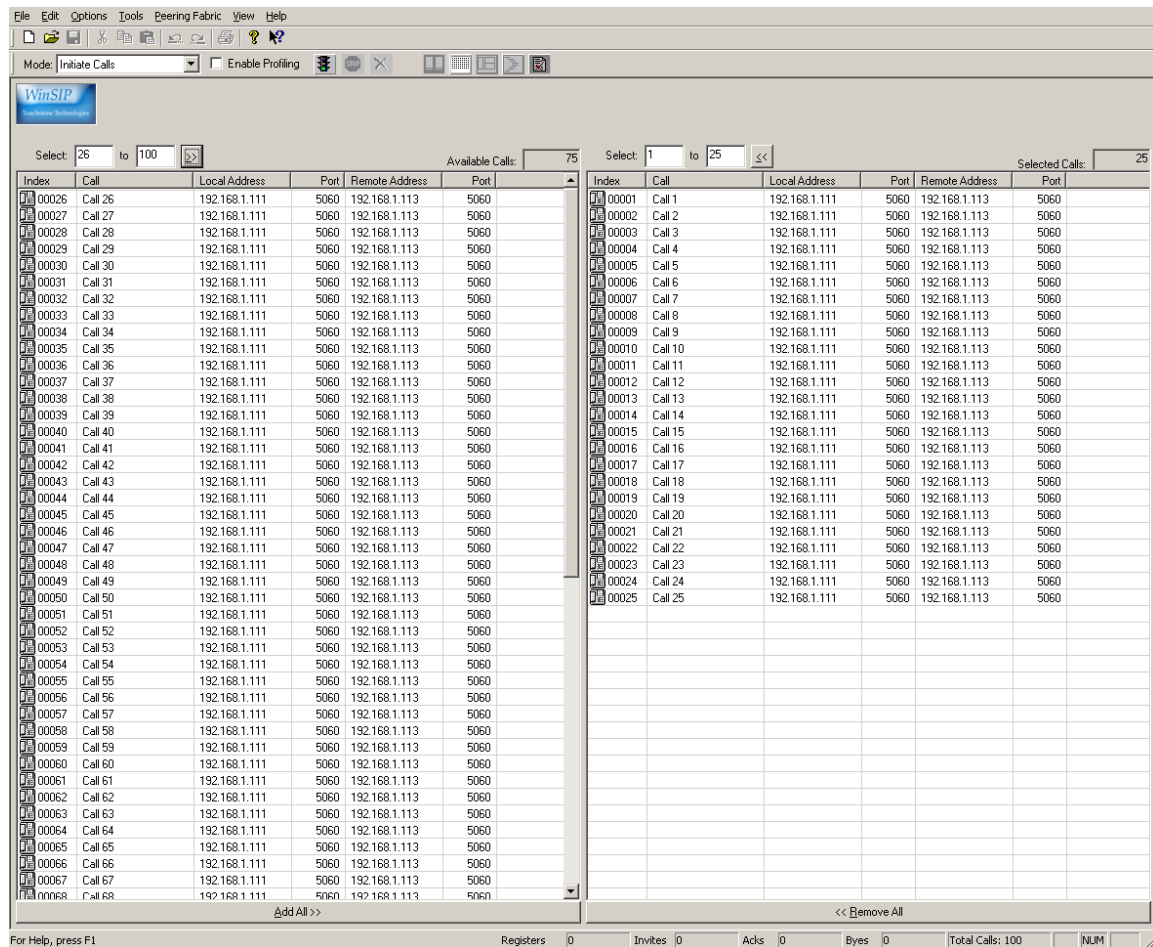

Detail View

This view presents the session detail information. Active calls, call flows and media stream QoS details are provided within its tabular style interface.

WinSIP File Edit Options Tools Peering Fabric View Help

Mode: Initiate Calls ☐ Enable Profiling

Completed: 0 Channels Available: 25 of 25 (100.00%) Lowest Rate: 0.00 calls/hour
 Successful: 0 Currently Connected: 25 of 25 (100.00%) Highest Rate: 0.00 calls/hour
 Unsuccessful: 0 Errors Detected: 0 Current Rate: 0.00 calls/hour

Call Rate Optimization: Per Hour, Per Second, Average, Instantaneous

Status	Call Name	User ID	Passed	Failed	Started	Duration	Audio	Video	Call ID
Connected	Call 1	20000			12:37:07	00:00:16	Tx/Rx		4941-45427216-0001-Call1
Connected	Call 2	20001			12:37:07	00:00:16	Tx/Rx		4d42-45427216-0001-Call2
Connected	Call 3	20002			12:37:07	00:00:16	Tx/Rx		750f-45427216-0001-Call3
Connected	Call 4	20003			12:37:07	00:00:16	Tx/Rx		f87b-45427216-0001-Call4
Connected	Call 5	20004			12:37:07	00:00:16	Tx/Rx		2b02-45427216-0001-Call5
Connected	Call 6	20005			12:37:07	00:00:16	Tx/Rx		0c7c-45427216-0001-Call6
Connected	Call 7	20006			12:37:07	00:00:16	Tx/Rx		1f6-45427216-0001-Call7
Connected	Call 8	20007			12:37:07	00:00:16	Tx/Rx		debc-45427216-0001-Call8
Connected	Call 9	20008			12:37:07	00:00:16	Tx/Rx		7210-45427216-0001-Call9
Connected	Call 10	20009			12:37:07	00:00:16	Tx/Rx		facb-45427232-0001-Call10
Connected	Call 11	20010			12:37:07	00:00:16	Tx		1cal-45427232-0001-Call11
Connected	Call 12	20011			12:37:07	00:00:16	Tx		8056-45427232-0001-Call12
Connected	Call 13	20012			12:37:07	00:00:16	Tx		d4a7-45427232-0001-Call13
Connected	Call 14	20013			12:37:07	00:00:16	Tx		bd8c-45427232-0001-Call14

Session Information: Started: 01/06/11 12:37:07, Stopped: , Registered: 0, Presentation Rate (cps): 1.56

Call Rate Optimization: Current Rate: Disabled, Status: Disabled

..... Results for the current rate
 Calls Monitored: N/A
 Errors Detected: N/A

Call Trace | Call Metrics | Call Summary | Audio Summary | Audio QoS | Video Summary | Session Info

Method	Type	Seq. #	Code	Text	Protocol	Offset	Time
← INVITE	Request	1			UDP	00:00:00:000000	12:3
→ INVITE	Response	1	100	Trying	UDP	00:00:00:069728	12:3
→ INVITE	Response	1	180	Ringing	UDP	00:00:00:071431	12:3
→ INVITE	Response	1	200	OK	UDP	00:00:00:072436	12:3
← ACK	Request	1			UDP	00:00:00:073168	12:3

For Help, press F1

Registers: 0 Invites: 25 Acks: 25 Bytes: 0 Active Calls: 25 NUM

File Descriptions

Call Files: Typically, call files are generated and edited via the Edit View. WinSIP call files are ASCII text files with field value separated by tab characters. This format allows users desiring so to use commercial spreadsheets, word processors or scripting tools such as PERL to generate call files that match their specific scenario requirements. Call files represent the individually controllable attributes of calls within a session.

Parameter Files: Parameter files contain the system settings that are common from call to call. The attributes of the parameter file in conjunction with the call file determine the characteristics of a session.

Session Settings: These settings include the session and user-defined preferences as well as application state information.

Setting up WinSIP

WinSIP's factory defaults are set to allow you to get up-and-running quickly in point-to-point mode. You should review these settings by accessing the Options | Settings menu option and reviewing each of the tabs. The online help provides specific information on the each of the fields. We highly recommend that you run calls between two WinSIPs to ensure that the network connections are functioning and that the settings are configured properly.

In order to run WinSIP with a proxy server (or device providing proxy-type services), you will need to configure the Proxy/Registration settings from the Options | Settings menu. In addition, the remote address of the call file should coincide with the initial target, not the eventual endpoint.

When you enter WinSIP for the first time or when you select "New Call File", WinSIP provides the call generation screens to allow you to define the call file properties. This is the quickest and easiest way to enter thousands of calls in just a few minutes. You may of course, cancel out of this screen and enter the information freeform if desired.

User Interface

Modes of operation

The first step in preparing to run WinSIP is to determine which mode you would like to operate in.

WinSIP offers the following modes of operation:

Initiate Calls

This mode initiates (places) calls during the session. The selected calls are placed in a start queue which can have a 'garden hose' effect on call start-up. This queue can run wide-open, without putting any limit on the number of calls which can start simultaneously or it can let a prescribed number start in any given second.

Calls may also have their own individual start delays to form a more random pattern, simulating real-world conditions.

In initiate mode, each call will run its prescribed amount of repetitions (or indefinitely until stopped by the user) for the duration you have entered.

You may stop or terminate the calls at any time.

Answer Calls

This mode responds to inbound calls during the session. The selected calls are started immediately and look for inbound INVITEs with IDs that match the scripted Local ID field.

In answer mode, each call will run its prescribed amount of repetitions (or indefinitely until stopped by the user) for the duration you have entered.

You may stop or terminate the calls at any time.

Unattended Answer Mode

This mode responds to unscripted inbound calls arriving on the well-know port for the currently selected IP address. No scripted calls may be selected during this time.

You may stop or terminate the calls at any time.

Proxy Server

This mode serves as a simple proxy server/registrar on the well-known port for the currently selected IP address.

Registration Test

In registration test mode, each call will register/unregister its prescribed amount of repetitions (or indefinitely until stopped by the user) for the duration you have entered.

Multi-line Initiate

This mode initiates (places) calls during the session. The selected calls are placed in a start queue which can have a 'garden hose' effect on call start-up. This queue can run wide-open, without putting any limit on the number of calls which can start simultaneously or it can let a prescribed number start in any given second.

Calls may also have their own individual start delays to form a more random pattern, simulating real-world conditions.

In multi-line initiate mode, each call will run its prescribed amount of repetitions (or indefinitely until stopped by the user) for the duration you have entered.

This mode allows both the answer and initiate side to have the same Call ID's. Also, calls going through multi-line initiate/answer use a proxy serve and only the first call is registered.

You may stop or terminate the calls at any time.

Multi-line Answer

This mode responds to inbound calls during the session. The selected calls are started immediately and look for inbound INVITEs with IDs that match the scripted Local ID field.

In multi-line answer mode, each call will run its prescribed amount of repetitions (or indefinitely until stopped by the user) for the duration you have entered.

This mode allows both the answer and initiate side to have the same Call ID's. Also, calls going through multi-line initiate/answer use a proxy serve and only the first call is registered.


You may stop or terminate the calls at any time.

TestML Script

This mode selects the TestML scripting engine instead of the internal engine. This mode does not have the concept of "Initiator" or "Answerer" but rather relies on the script for statefulness and awareness.

The Edit View

This is the view designed to facilitate editing individual call parameters and manipulating call files. This view has a spreadsheet style interface.

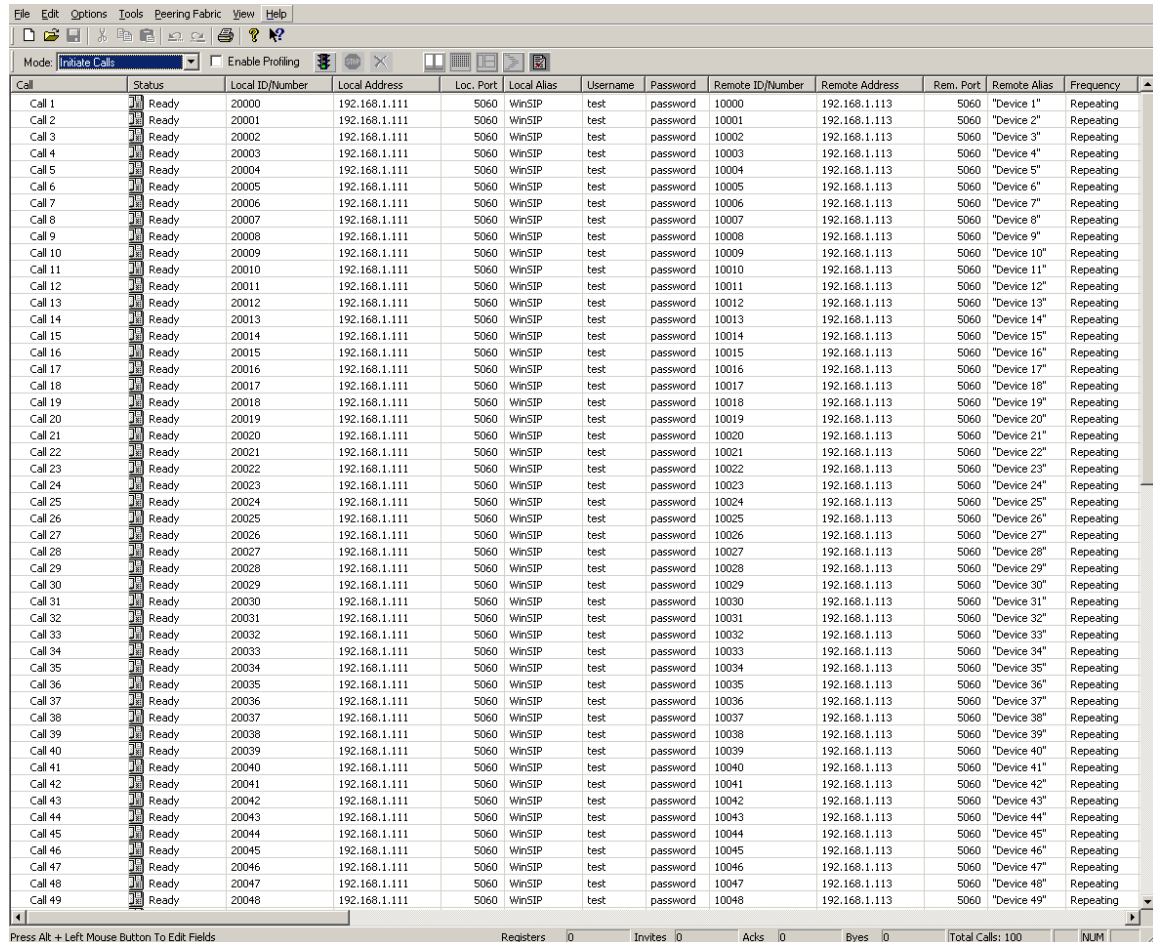

The screenshot shows the WinSIP application window in 'Edit View' mode. The window has a menu bar (File, Edit, Options, Tools, Peering Fabric, View, Help) and a toolbar. Below the toolbar is a 'Mode' dropdown set to 'Initiate Calls' and an 'Enable Profiling' checkbox. The main area is a spreadsheet with columns: Call, Status, Local ID/Number, Local Address, Loc. Port, Local Alias, Username, Password, Remote ID/Number, Remote Address, Rem. Port, Remote Alias, and Frequency. The data shows 49 calls, all with status 'Ready', local address '192.168.1.111', and local port '5060'. The remote addresses are '192.168.1.113' and the remote ports are '5060'. The remote aliases are 'Device 1' through 'Device 49'. The frequency for all calls is 'Repeating'. At the bottom, there is a status bar with fields for Registers (0), Invites (0), Acks (0), Byes (0), Total Calls (100), and NUM.

Call	Status	Local ID/Number	Local Address	Loc. Port	Local Alias	Username	Password	Remote ID/Number	Remote Address	Rem. Port	Remote Alias	Frequency
Call 1	Ready	20000	192.168.1.111	5060	WinSIP	test	password	10000	192.168.1.113	5060	"Device 1"	Repeating
Call 2	Ready	20001	192.168.1.111	5060	WinSIP	test	password	10001	192.168.1.113	5060	"Device 2"	Repeating
Call 3	Ready	20002	192.168.1.111	5060	WinSIP	test	password	10002	192.168.1.113	5060	"Device 3"	Repeating
Call 4	Ready	20003	192.168.1.111	5060	WinSIP	test	password	10003	192.168.1.113	5060	"Device 4"	Repeating
Call 5	Ready	20004	192.168.1.111	5060	WinSIP	test	password	10004	192.168.1.113	5060	"Device 5"	Repeating
Call 6	Ready	20005	192.168.1.111	5060	WinSIP	test	password	10005	192.168.1.113	5060	"Device 6"	Repeating
Call 7	Ready	20006	192.168.1.111	5060	WinSIP	test	password	10006	192.168.1.113	5060	"Device 7"	Repeating
Call 8	Ready	20007	192.168.1.111	5060	WinSIP	test	password	10007	192.168.1.113	5060	"Device 8"	Repeating
Call 9	Ready	20008	192.168.1.111	5060	WinSIP	test	password	10008	192.168.1.113	5060	"Device 9"	Repeating
Call 10	Ready	20009	192.168.1.111	5060	WinSIP	test	password	10009	192.168.1.113	5060	"Device 10"	Repeating
Call 11	Ready	20010	192.168.1.111	5060	WinSIP	test	password	10010	192.168.1.113	5060	"Device 11"	Repeating
Call 12	Ready	20011	192.168.1.111	5060	WinSIP	test	password	10011	192.168.1.113	5060	"Device 12"	Repeating
Call 13	Ready	20012	192.168.1.111	5060	WinSIP	test	password	10012	192.168.1.113	5060	"Device 13"	Repeating
Call 14	Ready	20013	192.168.1.111	5060	WinSIP	test	password	10013	192.168.1.113	5060	"Device 14"	Repeating
Call 15	Ready	20014	192.168.1.111	5060	WinSIP	test	password	10014	192.168.1.113	5060	"Device 15"	Repeating
Call 16	Ready	20015	192.168.1.111	5060	WinSIP	test	password	10015	192.168.1.113	5060	"Device 16"	Repeating
Call 17	Ready	20016	192.168.1.111	5060	WinSIP	test	password	10016	192.168.1.113	5060	"Device 17"	Repeating
Call 18	Ready	20017	192.168.1.111	5060	WinSIP	test	password	10017	192.168.1.113	5060	"Device 18"	Repeating
Call 19	Ready	20018	192.168.1.111	5060	WinSIP	test	password	10018	192.168.1.113	5060	"Device 19"	Repeating
Call 20	Ready	20019	192.168.1.111	5060	WinSIP	test	password	10019	192.168.1.113	5060	"Device 20"	Repeating
Call 21	Ready	20020	192.168.1.111	5060	WinSIP	test	password	10020	192.168.1.113	5060	"Device 21"	Repeating
Call 22	Ready	20021	192.168.1.111	5060	WinSIP	test	password	10021	192.168.1.113	5060	"Device 22"	Repeating
Call 23	Ready	20022	192.168.1.111	5060	WinSIP	test	password	10022	192.168.1.113	5060	"Device 23"	Repeating
Call 24	Ready	20023	192.168.1.111	5060	WinSIP	test	password	10023	192.168.1.113	5060	"Device 24"	Repeating
Call 25	Ready	20024	192.168.1.111	5060	WinSIP	test	password	10024	192.168.1.113	5060	"Device 25"	Repeating
Call 26	Ready	20025	192.168.1.111	5060	WinSIP	test	password	10025	192.168.1.113	5060	"Device 26"	Repeating
Call 27	Ready	20026	192.168.1.111	5060	WinSIP	test	password	10026	192.168.1.113	5060	"Device 27"	Repeating
Call 28	Ready	20027	192.168.1.111	5060	WinSIP	test	password	10027	192.168.1.113	5060	"Device 28"	Repeating
Call 29	Ready	20028	192.168.1.111	5060	WinSIP	test	password	10028	192.168.1.113	5060	"Device 29"	Repeating
Call 30	Ready	20029	192.168.1.111	5060	WinSIP	test	password	10029	192.168.1.113	5060	"Device 30"	Repeating
Call 31	Ready	20030	192.168.1.111	5060	WinSIP	test	password	10030	192.168.1.113	5060	"Device 31"	Repeating
Call 32	Ready	20031	192.168.1.111	5060	WinSIP	test	password	10031	192.168.1.113	5060	"Device 32"	Repeating
Call 33	Ready	20032	192.168.1.111	5060	WinSIP	test	password	10032	192.168.1.113	5060	"Device 33"	Repeating
Call 34	Ready	20033	192.168.1.111	5060	WinSIP	test	password	10033	192.168.1.113	5060	"Device 34"	Repeating
Call 35	Ready	20034	192.168.1.111	5060	WinSIP	test	password	10034	192.168.1.113	5060	"Device 35"	Repeating
Call 36	Ready	20035	192.168.1.111	5060	WinSIP	test	password	10035	192.168.1.113	5060	"Device 36"	Repeating
Call 37	Ready	20036	192.168.1.111	5060	WinSIP	test	password	10036	192.168.1.113	5060	"Device 37"	Repeating
Call 38	Ready	20037	192.168.1.111	5060	WinSIP	test	password	10037	192.168.1.113	5060	"Device 38"	Repeating
Call 39	Ready	20038	192.168.1.111	5060	WinSIP	test	password	10038	192.168.1.113	5060	"Device 39"	Repeating
Call 40	Ready	20039	192.168.1.111	5060	WinSIP	test	password	10039	192.168.1.113	5060	"Device 40"	Repeating
Call 41	Ready	20040	192.168.1.111	5060	WinSIP	test	password	10040	192.168.1.113	5060	"Device 41"	Repeating
Call 42	Ready	20041	192.168.1.111	5060	WinSIP	test	password	10041	192.168.1.113	5060	"Device 42"	Repeating
Call 43	Ready	20042	192.168.1.111	5060	WinSIP	test	password	10042	192.168.1.113	5060	"Device 43"	Repeating
Call 44	Ready	20043	192.168.1.111	5060	WinSIP	test	password	10043	192.168.1.113	5060	"Device 44"	Repeating
Call 45	Ready	20044	192.168.1.111	5060	WinSIP	test	password	10044	192.168.1.113	5060	"Device 45"	Repeating
Call 46	Ready	20045	192.168.1.111	5060	WinSIP	test	password	10045	192.168.1.113	5060	"Device 46"	Repeating
Call 47	Ready	20046	192.168.1.111	5060	WinSIP	test	password	10046	192.168.1.113	5060	"Device 47"	Repeating
Call 48	Ready	20047	192.168.1.111	5060	WinSIP	test	password	10047	192.168.1.113	5060	"Device 48"	Repeating
Call 49	Ready	20048	192.168.1.111	5060	WinSIP	test	password	10048	192.168.1.113	5060	"Device 49"	Repeating

To enter 'edit mode', position your cursor over a data cell (any cell except 'Status'), hold down the 'Alt' key and press the left mouse button. You may now edit the value within that field. To move between fields, you may use the following keys:

Tab: This moves one column to the right (wrapping to the next line at the end).

Shift + Tab: This moves one column to the left (wrapping to the previous line at the beginning).

Down Arrow: This moves one row down (wrapping to the first line at the end).

Up Arrow: This moves one row up (wrapping to the last line at the top).

Any of the previous actions validate (and if successful, update) the data in the current cell prior to navigation.

To exit edit mode and validate and update the data, press the enter key.

To exit edit mode and discard the data, press the escape (Esc) key.

To edit an entire column of data, press the column-heading button. To edit selected values within a column, select the desired rows and press the column-heading button.

To insert a new row, highlight a row that you want the new row inserted BEFORE and press the insert (Ins) key.

To delete a row or rows, highlight the item(s) to be deleted and press the delete (Del) key.


All editing actions are supported by full multi-level undo and redo functions.

The following menu of options is available by right-clicking the mouse anywhere within the spreadsheet:

Generate Call File...	
Generate Partner File...	
Cut	Shift + Del
Copy	Ctrl + Ins
Paste	Shift + Ins
Delete	Del
Insert Blank Call Before	
Insert Blank Call After	
Import Calls...	
Export Calls...	
Preview INVITE...	
Ping Remote...	
Trace Route to Remote...	
Properties...	

The Main View

This is the view designed to facilitate starting and stopping call sessions. This view has two main columns, available calls and selected calls. When you first load WinSIP, all calls in the call file will be in the left most column (available calls).

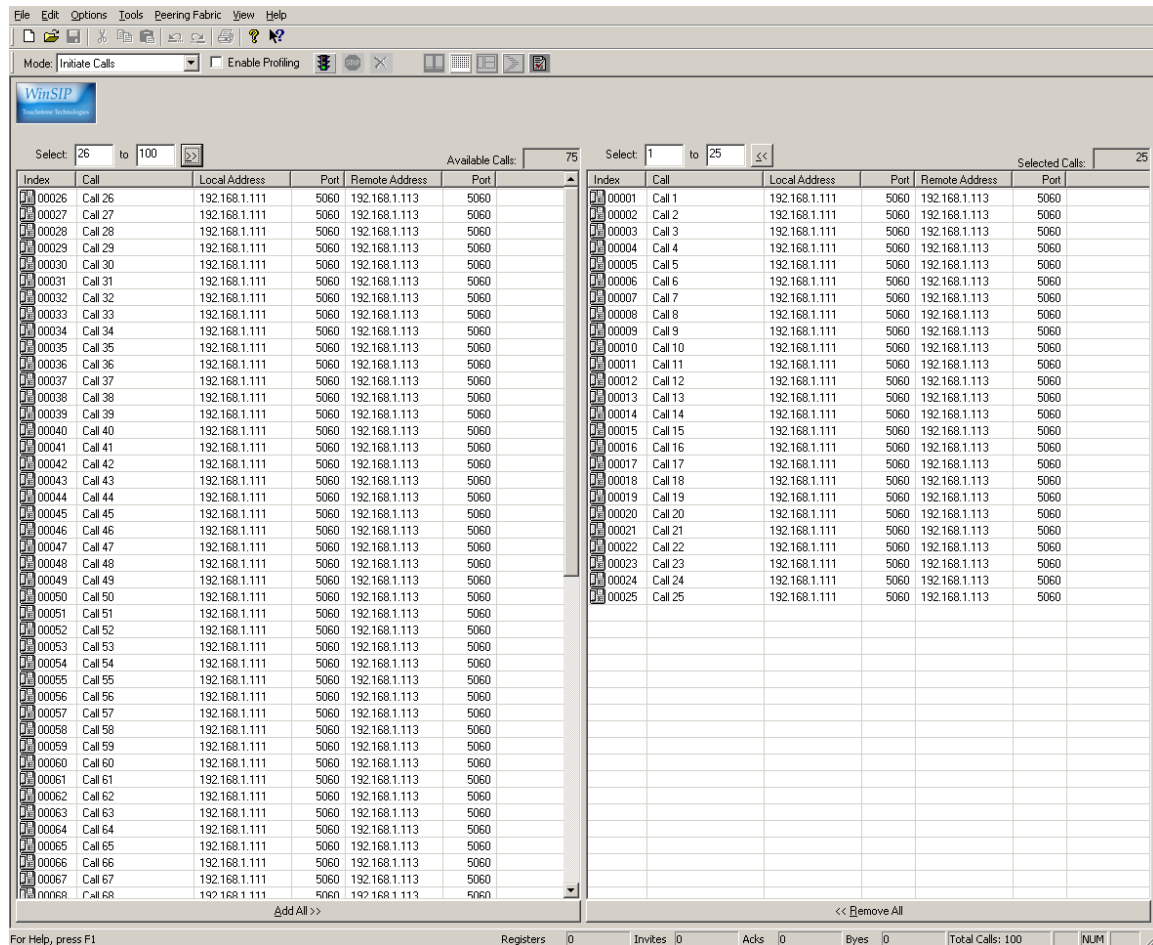

To move all calls to the selected column, you may simply press the [>>] or [Add All] buttons. There are a number of ways to move individual or groups of calls, each user will have their own personal preference, but here they are.


Drag and Drop: Select one or more calls from either list and 'drag and drop' them onto the target list.

Double click the selected calls: This moves the entire group to the opposing list.


Select a sequence of calls: Enter the call range you would like to move in the 'Select: [x] to [y]' fields and press the [>>] or [<<] buttons.

Both columns offer extended selection (i.e. you may select a disjoint group of calls by holding down the control (Ctrl) key and pressing the left mouse button). When you have the appropriate calls for your session in the selected list and have set the application mode to 'Initiate' or 'Answer', you are ready to begin your session.

The available calls column offers the following options when you right click within it:

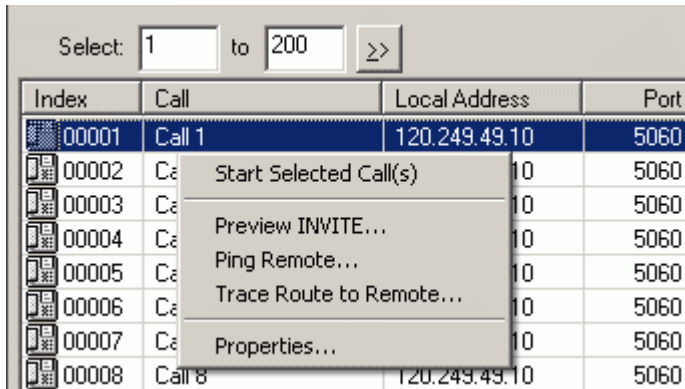

The selected calls column offers the following options when you right click within it:

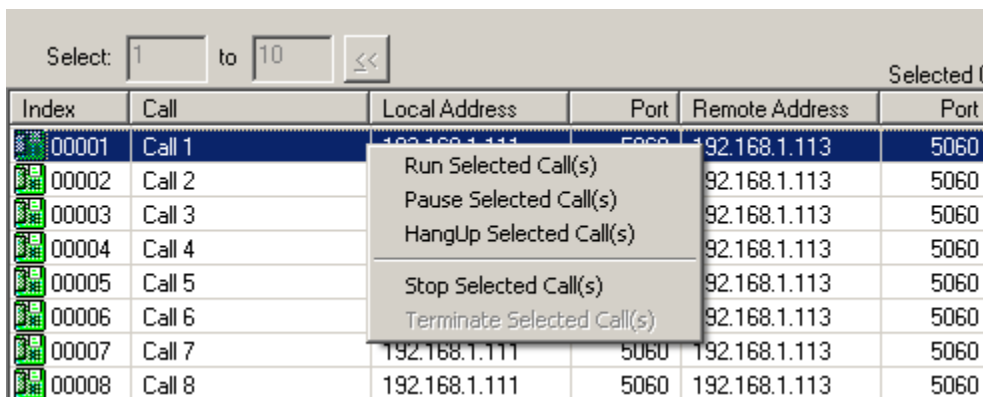

The Detail View

This is the view designed to facilitate monitoring individual call elements and overall session status. To view the details on a specific call click on the desired call and the details will then be displayed in the lower half of the window. The values on this screen are updated once every second.

The screenshot displays the WinSIP software interface in the Detail View. The top section shows overall session statistics: Completed: 0, Successful: 0, Unsuccessful: 0, Channels Available: 25 of 25 (100.00%), Currently Connected: 25 of 25 (100.00%), Errors Detected: 0. Call rates are shown as 0.00 calls/hour for Lowest, Highest, and Current rates. The middle section is a table of active calls with columns for Status, Call Name, User ID, Passed, Failed, Started, Duration, Audio, Video, and Call ID. The bottom section shows a detailed call trace for a selected call, including SIP messages and packet details.











Status	Call Name	User ID	Passed	Failed	Started	Duration	Audio	Video	Call ID
Connected	Call 1	20000			12:37:07	00:00:16	Tx/Rx		4941-45427216-0001-Call1
Connected	Call 2	20001			12:37:07	00:00:16	Tx/Rx		4d42-45427216-0001-Call2
Connected	Call 3	20002			12:37:07	00:00:16	Tx/Rx		791f-45427216-0001-Call3
Connected	Call 4	20003			12:37:07	00:00:16	Tx/Rx		f87b-45427216-0001-Call4
Connected	Call 5	20004			12:37:07	00:00:16	Tx/Rx		2b02-45427216-0001-Call5
Connected	Call 6	20005			12:37:07	00:00:16	Tx/Rx		0c7c-45427216-0001-Call6
Connected	Call 7	20006			12:37:07	00:00:16	Tx/Rx		1f16-45427216-0001-Call7
Connected	Call 8	20007			12:37:07	00:00:16	Tx/Rx		debc-45427216-0001-Call8
Connected	Call 9	20008			12:37:07	00:00:16	Tx/Rx		7210-45427216-0001-Call9
Connected	Call 10	20009			12:37:07	00:00:16	Tx/Rx		fabc-45427232-0001-Call10
Connected	Call 11	20010			12:37:07	00:00:16	Tx		1caf-45427232-0001-Call11
Connected	Call 12	20011			12:37:07	00:00:16	Tx		8056-45427232-0001-Call12
Connected	Call 13	20012			12:37:07	00:00:16	Tx		d4a7-45427232-0001-Call13
Connected	Call 14	20013			12:37:07	00:00:16	Tx		bd8c-45427232-0001-Call14

Method	Type	Seq.#	Code	Text	Protocol	Offset	Time
← INVITE	Request	1			UDP	00:00:00:000000	12:3
→ INVITE	Response	1	100	Trying	UDP	00:00:00:069728	12:3
→ INVITE	Response	1	180	Ringing	UDP	00:00:00:071431	12:3
→ INVITE	Response	1	200	OK	UDP	00:00:00:072436	12:3
← ACK	Request	1			UDP	00:00:00:073168	12:3

The main display sheet shows the calls currently being run. The call name, user ID, physical address, address of record, successful calls, unsuccessful call attempts audio packets sent/received and video packets sent/received. Also, it shows the highest, lowest, and average call rate. This can be set to display in hourly mode or up to the second as well as an instantaneous or cumulative view.

The tabs below are individual call elements, such as SIP messages sent/received, audio media jitter and packet/frame/byte counts and video media jitter and packet/picture/byte counts. Also included is a call monitor, which is a graphical representation of the calls active at each time 'sampling'.

The following menu of options is available by right-clicking the mouse anywhere within the grid:

Status	Call Name	User ID	Passed	Failed
 Connected	Call 1	20000		
 Connected	Call 2	20001		
 Connected	Call 3	20002		
 Connected	Call 4	20003		
 Connected	Call 5	20004		
 Connected	Call 6	20005		
 Connected	Call 7	20006		
 Connected	Call 8	20007		
 Connected	Call 9	20008		
 Connected	Call 10	20009		

Run Selected Call
Pause Selected Call
HangUp Selected Call

Stop Selected Call
Terminate Selected Call

Send Instant Message...
Hold/Unhold

Ping Remote...
Trace Route to Remote...

Call Trace Sub-View

This sub-view allows the user to view the request and response messages sent and received by the selected call.

Method	Type	Seq.#	Code	Text	Protocol	Offset	Time	
INVITE	Request	1			UDP	00:00:00:000000	10:3	INVITE sip:20003@120.249.5.11:5060;transport=UDP SIP/2.0
→ INVITE	Response	1	180	Ringing	UDP	00:00:00:021023	10:3	Via: SIP/2.0/UDP 120.249.47.151:5060;branch=z9hG4bK12d4c784e242433f6d505b4ac5defe
→ INVITE	Response	1	200	OK	UDP	00:00:00:022090	10:3	Max-Forwards: 70
← ACK	Request	1			UDP	00:00:00:022455	10:3	From: "WinSIP 4" <sip:10003@120.249.47.151:5060>;tag=949f4bd6-8eb7-0fe9 To: "Device 4" <sip:20003@120.249.5.11:5060> User-Agent: WinSIP/4.0 Call-ID: c62e-37961581-0002-Call4 CSeq: 1 INVITE Contact: "WinSIP 4" <sip:10003@120.249.47.151:5060;transport=UDP> Allow: INVITE,ACK,BYE,CANCEL,OPTIONS,UPDATE,REFER,SUBSCRIBE,NOTIFY,MESSAGE Accept: application/sdp Accept-Language: en Content-Type: application/sdp Content-Disposition: session Content-Length: 203 v=0 o=10003 37961581 1 IN IP4 120.249.47.151 s=WinSIP Media i=Media Data c=IN IP4 120.249.47.151 t=0 0 m=audio 40012 RTP/AVP 18 a=rtpmap:18 G723/8000 a=sendrecv a=ptime:60 a=fmp:18 annexb=no

Call Metrics Sub-View

This sub-view displays the various durations and delays regarding audio, video, ring time, time to answer, time to register, response time, etc.

Call Trace Call Metrics Call Summary Audio Summary Audio QoS Video Summary Session Info	
Metric	Value
Time To Register	
First Response Time	00:00:00:022659
Post-Dial Delay	00:00:00:022722
Ring Duration	00:00:00:001179
Time To Answer	00:00:00:001179
Time To Connect	00:00:00:024728
Inbound Audio Delay	00:00:00:024142
Outbound Audio Delay	00:00:00:000000
Outbound Audio Duration	00:00:15:270760
Inbound Video Delay	
Outbound Video Delay	
Outbound Video Duration	
Tear-down Time	
Time Connected	00:00:15
Signaling Latency	00:00:00:022722
End-to-End Time	
Time To Un-Register	
Media Path Confirmation	N/A

The following metrics are displayed in this sub-view:

- Time To Register
- First Response Time
- Post-Dial Delay
- Ring Duration
- Time To Answer
- Time To Connect
- Inbound Audio Delay
- Outbound Audio Delay
- Outbound Audio Duration
- Inbound Video Delay
- Outbound Video Delay
- Outbound Video Duration
- Tear-Down Time
- Time Connected
- Signaling Latency
- End-to-End Time
- Time To Un-Register
- Media Path Confirmation

Call Summary Sub-View

This sub-view displays the quantities and types of requests and responses sent, received, and retransmitted.


Call Trace	Call Metrics	Call Summary	Audio Summary	Audio QoS	Video Summary	Session Info							
	INVITE	ACK	BYE	REGISTER	PRACK	CANCEL	MESSAGE	UPDATE	INFO	OPTIONS	SUBSCRIBE	NOTIFY	
Requests Received	0	0	0	0	0	0	0	0	0	0	0	0	
Requests Sent	1,025	1,024	1,024	0	0	0	0	0	0	0	0	0	
1xx Responses	1,024		0	0	0	0	0	0	0	0	0	0	
2xx Responses	1,024		1,024	0	0	0	0	0	0	0	0	0	
3xx Responses	0		0	0	0	0	0	0	0	0	0	0	
4xx Responses	0		0	0	0	0	0	0	0	0	0	0	
5xx Responses	0		0	0	0	0	0	0	0	0	0	0	
6xx Responses	0		0	0	0	0	0	0	0	0	0	0	
Req. Retransmits	0	0	0	0	0	0	0	0	0	0	0	0	
Rsp. Retransmits	0		0	0	0	0	0	0	0	0	0	0	

The following transmissions are quantified in this sub-view:

- Requests Received
- Requests Sent
- Responses (1xx, 2xx, . . . , 6xx)
- Request Retransmits
- Response Retransmits

Audio Summary Sub-View

This sub-view displays a variety of information regarding the audio transmissions including jitter; inter-packet interval; packets sent, received, and lost; audio frames; path configuration; codec type; bytes transmitted; stream address; status and bandwidth.

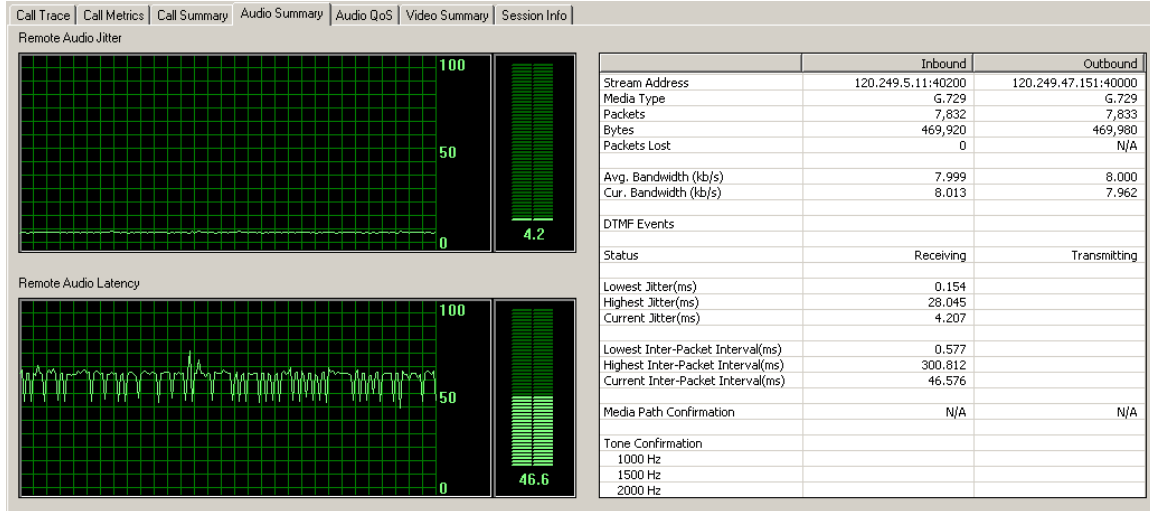


The following metrics are listed for both inbound and outbound transmissions:

- Stream Address
- Media Type
- Packets
- Bytes
- Packets Lost
- Average Bandwidth
- Current Bandwidth
- DTMF Events
- Status
- Lowest, Highest, and Current Jitter
- Lowest, Highest, and Current Inter-Packet Interval
- Media Path Confirmation
- Tone Confirmation

Audio QoS Sub-View

This sub-view provides a real-time display of the R-factor and MOS scores for each stream. The R-factor/MOS scoring feature is a non-intrusive measurement technique available for the WinSIP Application. WinSIP passively measures the characteristics of live VoIP calls and reports quality scores in real-time. The algorithm used to obtain the R-Factor/MOS quality scores accurately models the way that time-varying impairments, most notably burst packet loss and possible jitter buffer discards, affect perceived speech quality.

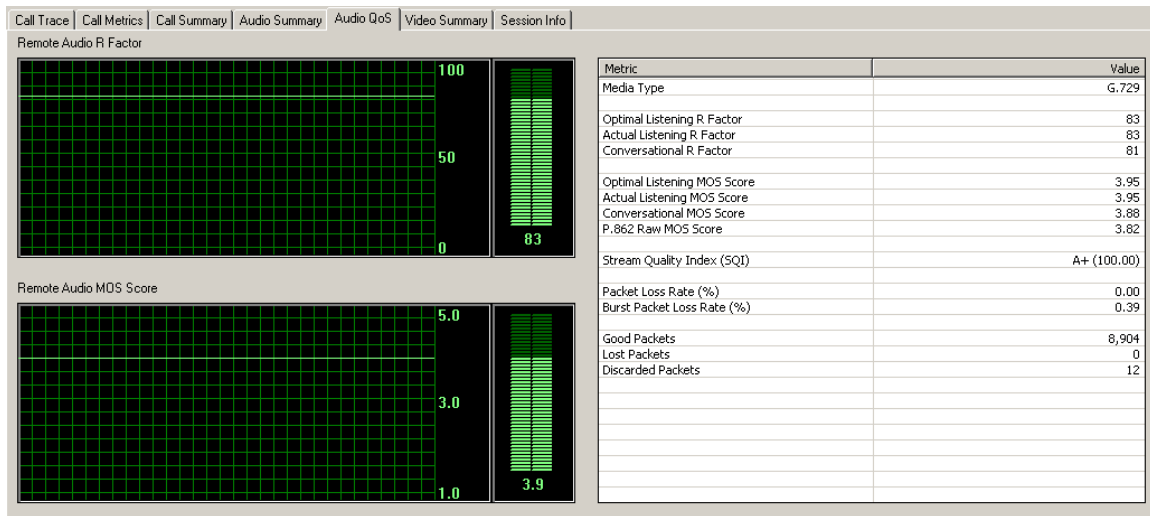


The following transmissions are quantified in this sub-view:

- Media Type
- Optimal Listening R Factor
- Actual Listening R Factor
- Conversational R Factor
- Optimal Listening MOS Score
- Actual Listening MOS Score
- Conversational MOS Score
- P.862 Raw MOS Score
- Stream Quality Index (SQI)
- Packet Loss Rate
- Burst Packet Loss Rate
- Good Packets
- Lost Packets
- Discarded Packets

Video Summary Sub-View

This sub-view displays a variety of information regarding the video transmissions including jitter; latency; packets sent, received, and lost; video pictures; path configuration; codec type; bytes transmitted; status and bandwidth.

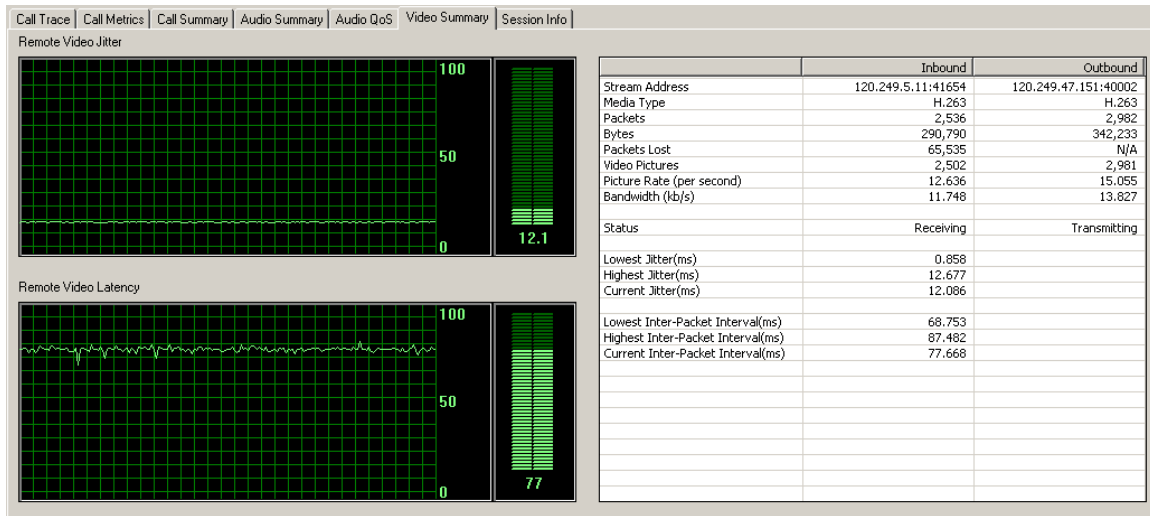


The following metrics are listed for both inbound and outbound transmissions:

- Stream Address
- Media Type
- Packets
- Bytes
- Packets Lost
- Video Pictures
- Picture Rate
- Bandwidth
- Status
- Lowest, Highest, and Current Jitter
- Lowest, Highest, and Current Inter-Packet Interval

Session Info Sub-View

This sub-view allows the user to view a summary of the session regarding all of the calls.

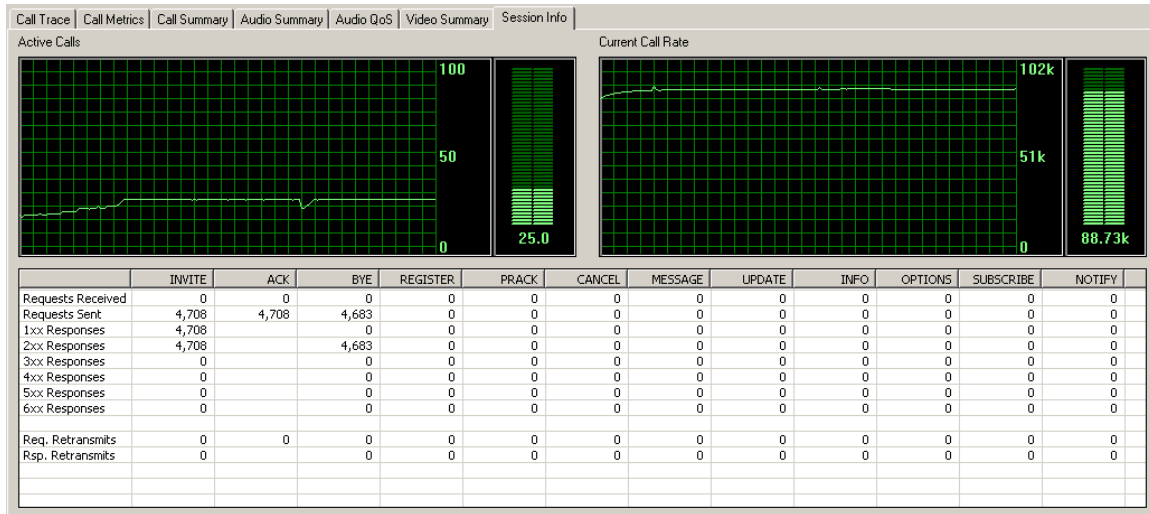


The following quantifications and metrics are displayed in this sub-view:

- Active Calls
- Current Calls
- Requests Received
- Requests Sent
- Responses (1xx, 2xx, . . . , 6xx)
- Request Retransmits
- Response Retransmits

WinSIP Menu Commands

File

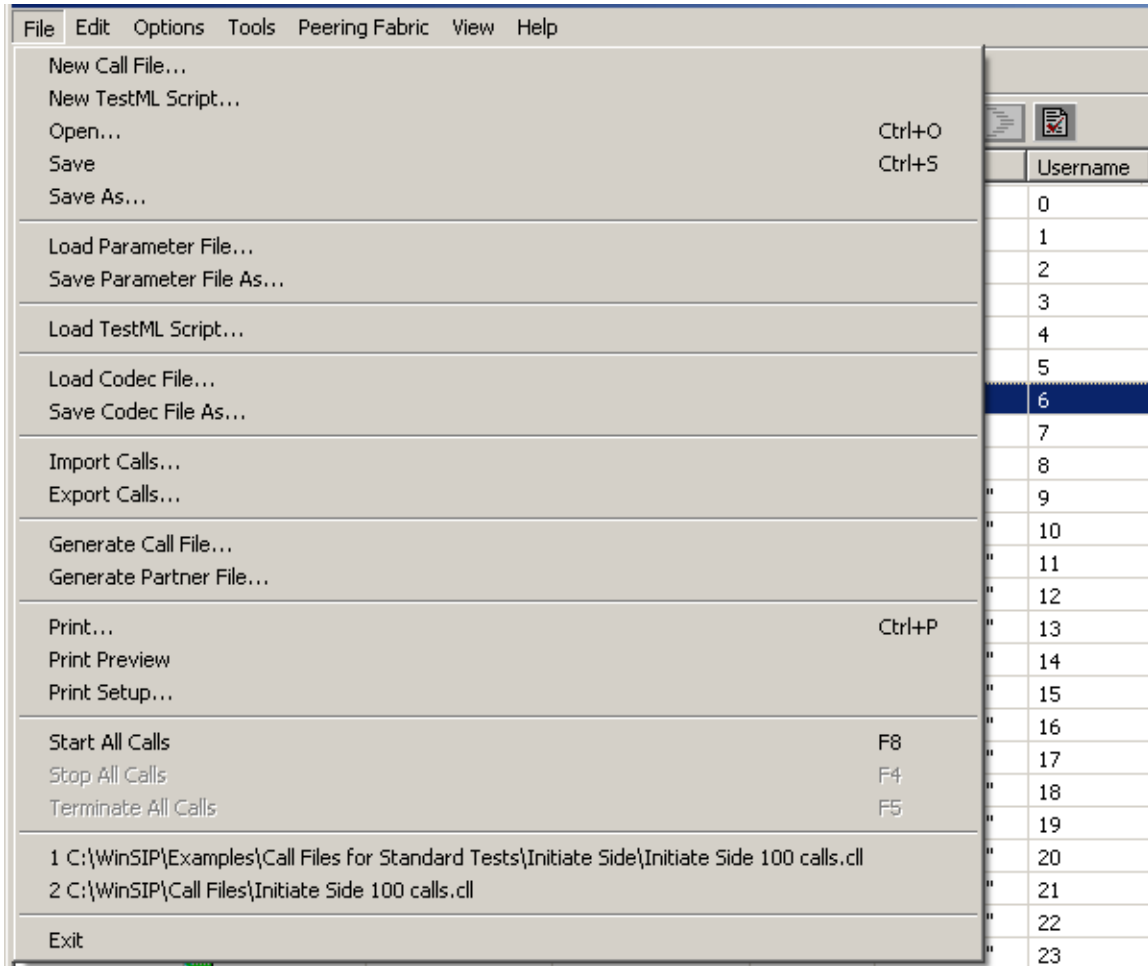

The File menu offers the following commands:

New Call File: Creates a new, empty WinSIP call file.

New TestML Script: Opens TestML wizard to create new XML scripts.

Open: Opens an existing WinSIP call file.

Save: Saves the current WinSIP call file using the same file name.

Save As: Saves the current WinSIP call file to a specified file name.

Load Parameter File: Loads an existing WinSIP parameter file.

Save Parameter File As: Saves the current WinSIP parameter file to a specified file name.

Load TestML Script: Loads a previously saved TestML script.

Load Codec File: Loads a previously saved codec file.

Save Codec File As: Saves the current codec file under a different name.

Import Calls: Imports calls from a WinSIP call file or exchange file into the current call file.

Export Calls: Exports calls from the current WinSIP call file to an exchange or call file.

Generate Call File: Generates a new, populated WinSIP call file.

Generate Partner File: Generates a new, mirror-image WinSIP call file to be used by another WinSIP application.

Print: Prints a WinSIP call file.

Print Preview: Displays the WinSIP call file on the screen as it would appear printed.

Print Setup: Selects a printer and printer connection.

Start All Calls: Starts all selected calls


Stop All Calls: Stops all active calls, gracefully.

Terminate All Calls: Terminates all active calls, abruptly.

Recent File List: Displays the name and number of the sixteen (16) most recently used files. Select one of these entries to open that file.

Exit: Exits WinSIP.

Edit

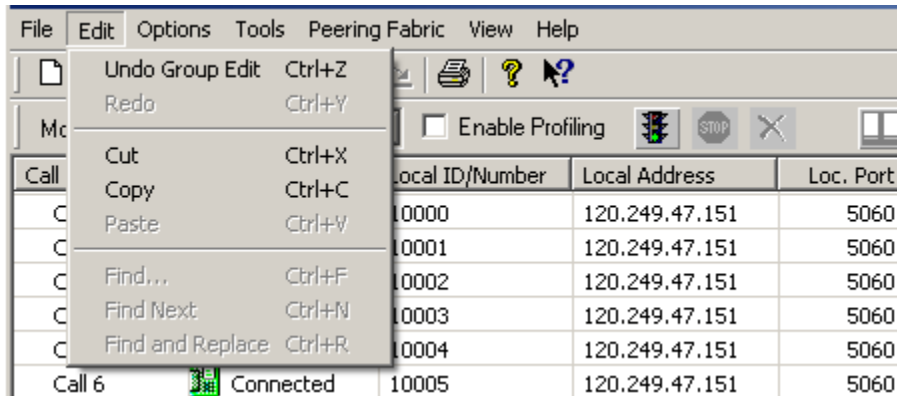

The Edit menu offers the following commands:

Undo: Reverse previous editing operation. This is a full, multi-level undo.


Redo: Reverse previous undo operation. This is a full, multi-level redo.

Cut: Deletes data from the document and moves it to the clipboard.

Copy: Copies data from the document to the clipboard.

Paste: Pastes data from the clipboard into the document.

Options

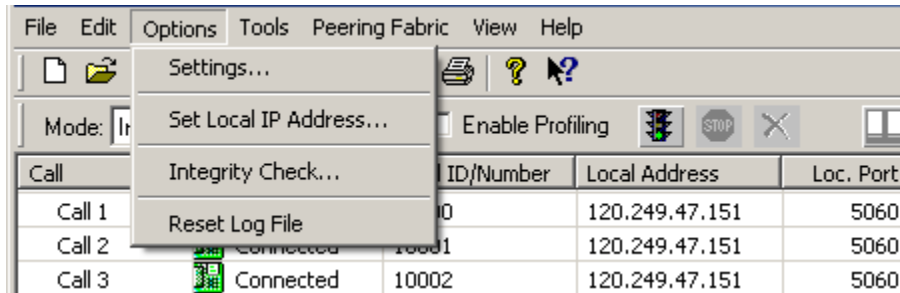

The Options menu offers the following commands:


Settings: Change or review the current WinSIP settings.

Set Local IP Address: Change or review the current local IP Address.

Integrity Check: Checks the call and parameter files for integrity.

Reset Log File: Deletes the current contents of the log file.

Tools

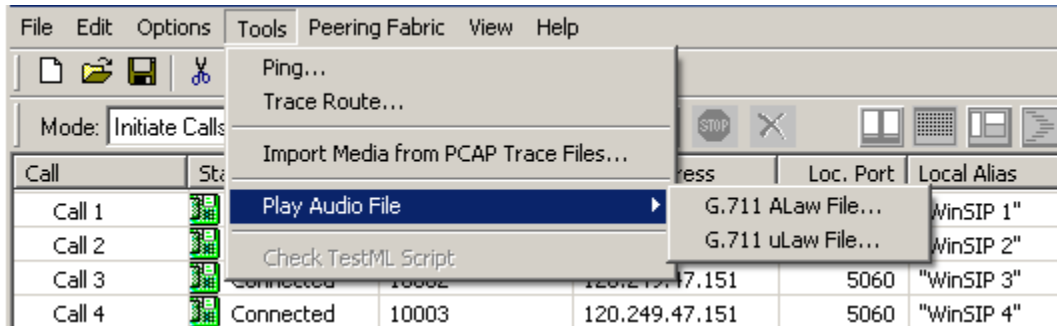

The Tools menu offers the following commands:

Ping: Allows you to run a ping utility to test line-of-sight availability of a device or address on the network.

TraceRoute: Allows you to run a TraceRoute test to a device or address on the network.

Import Media from PCAP Trace Files: This utility allows you to “RIP” media streams from a WinPCAP (Ethereal/WireShark) capture file for later replay by the generator.


Play Audio File:

G.711 ALaw File: This tool allows you to convert G.711 ALaw file to WAV file and automatically starts playing in Windows Media Player.

G.711 ULaw File: This tool allows you to convert G.711 ULaw file to WAV file and automatically starts playing in Windows Media Player.

Check TestML Script: This tool will check the current loaded XML script and report if there are any errors in the scripting.

Peering Fabric

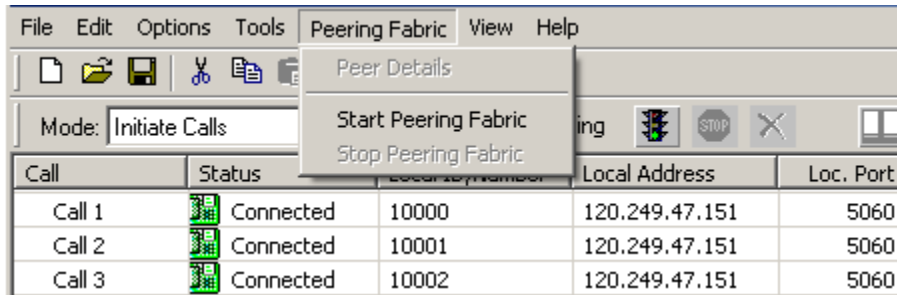


The Peering Fabric menu offers the following commands:

Peer Details: View the details of peer statuses.

Start Peering Fabric: Enables/starts WinSIP communications with other Touchstone products (e.g. remotely control other WinSIP/WinEyeQ instances).

Stop Peering Fabric: Disables peer communications with other Touchstone products.

View

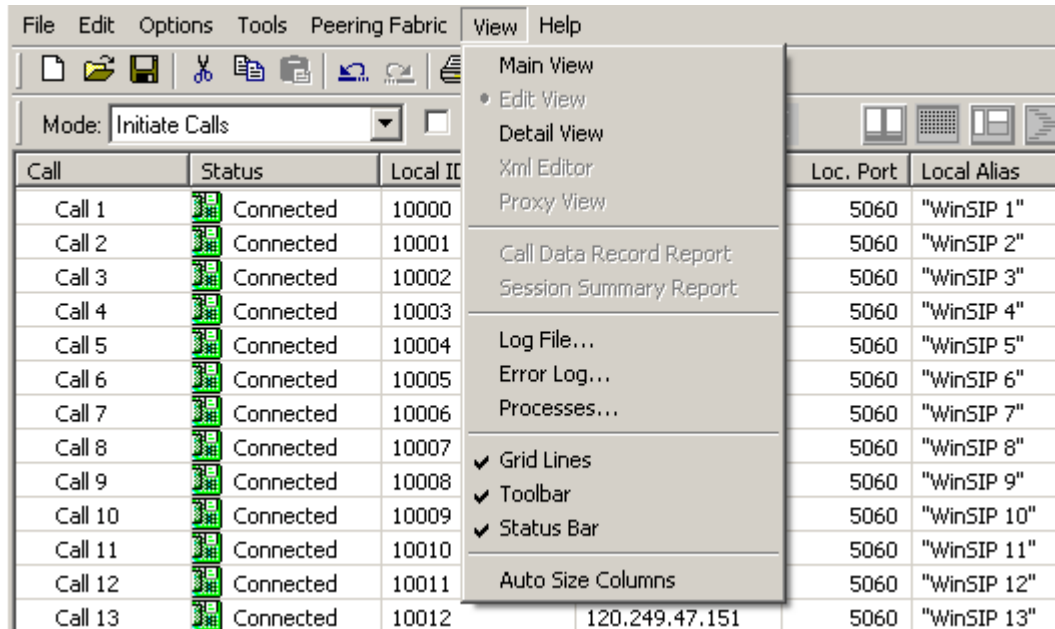

The View menu offers the following commands:

Main View: Switches the current view to the main view.

Edit View: Switches the current view to the edit view.

Detail View: Switches the current view to the detail.

Xml Editor: Switches the current view to the Xml editor.

Proxy View: Switches the current view to the proxy view.

Call Data Record Report: View the CDR report (if it exists).

Session Summary Report: View the Session Summary report (if it exists).

Log File: Displays the current WinSIP log file.

Error Log: Displays the current WinSIP error log file.

Processes: Displays the current WinSIP processes information.


Grid Lines: Shows or hides the gridlines on the edit view.

Toolbar: Show or hide the tool bar.

Status Bar: Show or hide the status bar.

Auto Size Columns: Automatically sizes the columns to the optimum size for the data or restores them to their pre-defined sizes.

Help

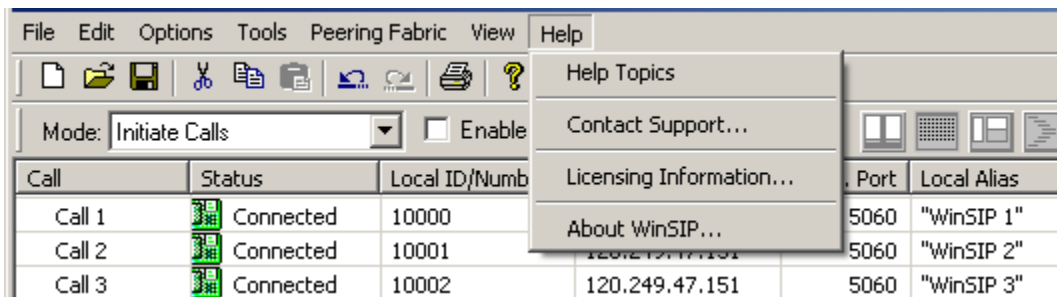

The Help menu offers the following commands, which provide you assistance with this application:

Help Topic: Offers you an index to topics on which you can get help.

Contact Support: With this option you can contact support with your questions.

Licensing Information: Displays the status of your current license.

About WinSIP: Displays the version number of this application.


Creating Call Files

When running in initiate or answer mode, it is necessary to create a call file and select one or more calls to run. The simplest way of creating a call file is to use the generate call file option. Call files may be created by hand if so desired. This would be accomplished via the edit view.

Generating a Call File

WinSIP provides an easy, fill-in-the-blank method of generating large test files quickly.

When this option is selected from the file menu or the edit view, the following dialog will appear:

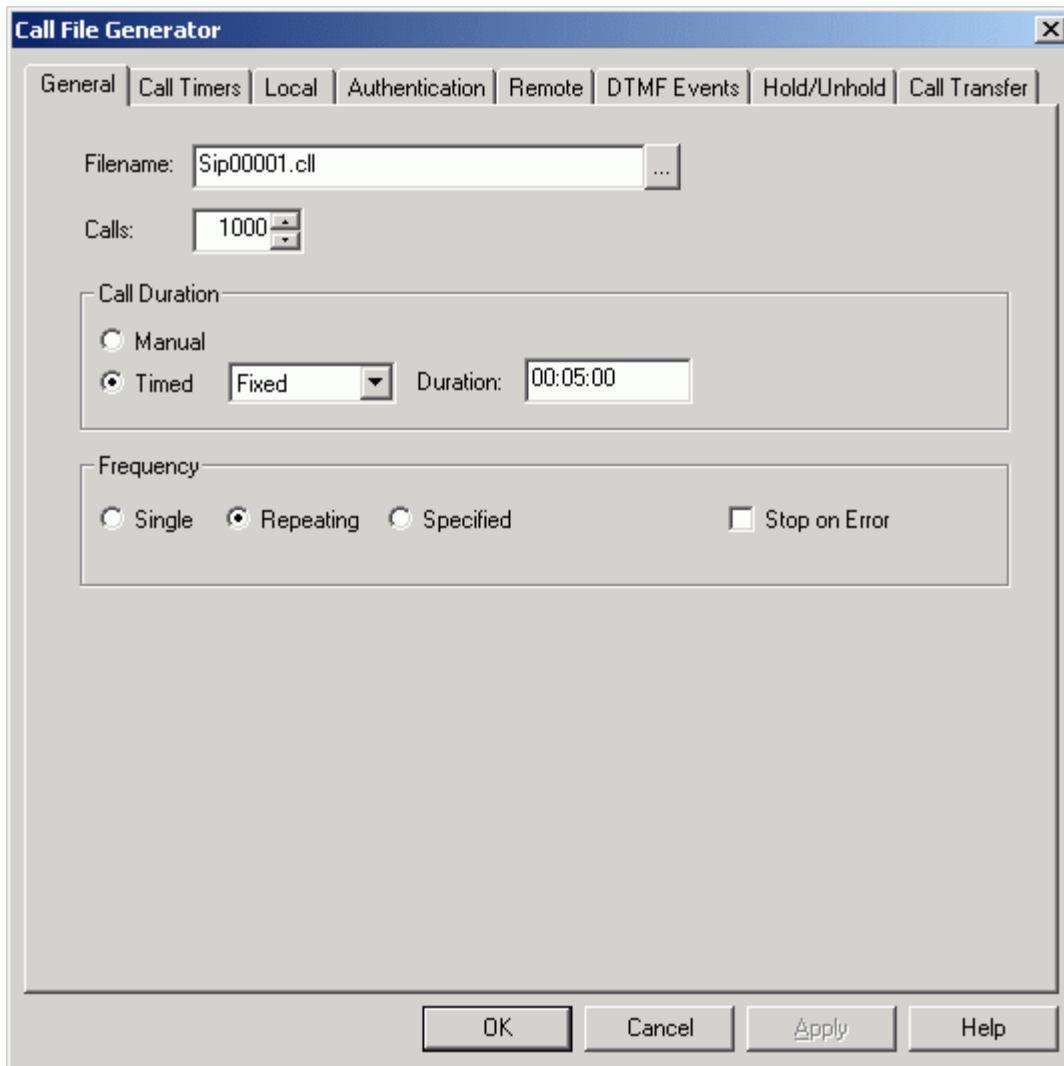

The image shows a Windows-style dialog box titled "Call File Generator". It has a tabbed interface with the following tabs: General, Call Timers, Local, Authentication, Remote, DTMF Events, Hold/Unhold, and Call Transfer. The "General" tab is currently selected. Inside the dialog, there is a "Filename:" label followed by a text box containing "Sip00001.cll" and a browse button "...". Below this is a "Calls:" label followed by a spin box set to "1000". The "Call Duration" section contains two radio buttons: "Manual" and "Timed". The "Timed" radio button is selected. Next to it is a dropdown menu set to "Fixed" and a "Duration:" text box containing "00:05:00". The "Frequency" section contains three radio buttons: "Single", "Repeating", and "Specified". The "Repeating" radio button is selected. To the right of these is a checkbox labeled "Stop on Error" which is currently unchecked. At the bottom of the dialog are four buttons: "OK", "Cancel", "Apply", and "Help".

This screen contains eight (8) pages, each of which corresponds to a section of fields within the call file.

These pages include:

- General Page
- Call Timers Page
- Local Page
- Authentication Page
- Remote Page
- DTMF Events Page
- Hold/Unhold Page
- Call Transfer Page

All fields on these pages must be completed. Default values are provided in the fields for which they are appropriate.

General Page

The screenshot shows the 'Call File Generator' dialog box with the 'General' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Call Timers', 'Local', 'Authentication', 'Remote', 'DTMF Events', 'Hold/Unhold', and 'Call Transfer'. The 'General' tab contains the following fields and controls:

- Filename:** A text field containing 'Sip00001.cll' and a 'Browse' button (three dots) to its right.
- Calls:** A spin box set to '1000'.
- Call Duration:** A group box containing:
 - ☐ Manual
 - ☒ Timed
 - Fixed:** A dropdown menu currently showing 'Fixed'.
 - Duration:** A text field containing '00:05:00'.
- Frequency:** A group box containing:
 - ☐ Single
 - ☒ Repeating
 - ☐ Specified
 - ☐ Stop on Error

At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

This screen contains the information pertaining to the general properties of the test script.

The fields included on the general page are:

Filename: Fill in the name of the file or use the 'Browse' button located on the right side of the field to select an existing file to overwrite.

Calls: Enter the number of calls you would like this script to contain.

Call Duration: This field may be one of two settings, either manual or timed. If you select timed, you may generate the values as fixed, incremental or random. The appropriate fields will appear as the selection changes. All visible fields must be filled out.

Frequency: This determines how many times the calls will be run. The choices are: Single, Repeating and Specified. If the choice is anything other than single, the stop on error field will become visible. Check the stop on error field only if you do not want WinSIP to continue trying calls that have failed for any reason.

Call Timers

There are five call timers available to model real-world scenarios. Each of these fields has two or more of the following options to define the values within the call file:

None: Not used.

Fixed: All calls will use the stated value

Incremental: Calls will use an increasing value based upon the initial value and a specified increment

Random: Calls will use random values between a specified floor (minimum) and ceiling (maximum).

The screenshot shows the 'Call File Generator' dialog box with the 'Call Timers' tab selected. The dialog has several tabs: General, Call Timers, Local, Authentication, Remote, DTMF Events, Hold/Unhold, and Call Transfer. The 'Call Timers' tab contains five sections for configuring call timers:

- Initial Start Delay**: A dropdown menu set to 'Fixed' and a text box containing '00:00:01'.
- Post-Dial Delay**: A dropdown menu set to 'Incremental', a 'Delay' text box with '00:00:01', and an 'Increment' text box with '00:00:10'.
- Ring Time**: A dropdown menu set to 'Incremental', a 'Delay' text box with '00:00:01', and an 'Increment' text box with '00:00:10'.
- Inter-Call Restart Delay**: A dropdown menu set to 'Random', a 'From' text box with '00:00:05', and a 'To' text box with '00:00:15'.
- Post-Error Restart Delay**: A dropdown menu set to 'None'.

At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

The fields included on the call timers page are:

Initial Start Delay: This is the delay, on a per-call basis, that will occur prior to sending the initial INVITE transaction (first call iteration only).

Post Dial Delay (Answer mode only): This is the delay, on a per-call basis, that will occur prior to sending the 180 Ringing or 200 OK transactions.

Ring Time (Answer mode only): This is the delay, on a per-call basis, that will occur between the 180 Ringing responses and the 200 OK response.

Inter-Call Restart Delay: This is the delay, on a per-call basis, that will occur prior to sending the INVITE transaction (second and subsequent successful call iterations).

Post-Error Restart Delay: This is the delay, on a per-call basis, that will occur prior to sending the INVITE transaction (second and subsequent failed call iterations).

Local Information

This screen contains the information pertaining to the local properties of the test script. Each of these fields has two or more of the following options to define the values within the call file:

Fixed: All calls will use the stated value

Incremental: Calls will use an increasing value based upon the initial value and a specified increment

Random: Calls will use random values between a specified floor (minimum) and ceiling (maximum).

The screenshot shows the 'Call File Generator' dialog box with the 'Local' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Call Timers', 'Local', 'Authentication', 'Remote', 'DTMF Events', 'Hold/Unhold', and 'Call Transfer'. The 'Local' tab is active, displaying several input fields and dropdown menus. The 'ID/Number' field contains '10000' and has a dropdown menu set to 'Incremental'. The 'Address' field contains '120.249.49.11' and has a dropdown menu set to 'Fixed'. The 'Port' field contains '5060' and has a dropdown menu set to 'Fixed'. The 'Display Name' field contains 'WinSIP 1' and has a dropdown menu set to 'Incremental'. The 'Audio Codec' field is a dropdown menu set to 'G.711 aLaw'. The 'Video Codec' field is a dropdown menu set to 'None Selected'. The 'Local URI' field contains 'sip:10000@120.249.49.11:5060'. At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

Field	Value	Option
ID/Number	10000	Incremental
Address	120.249.49.11	Fixed
Port	5060	Fixed
Display Name	WinSIP 1	Incremental
Audio Codec	G.711 aLaw	
Video Codec	None Selected	
Local URI	sip:10000@120.249.49.11:5060	

The fields included are:

ID/Number: Fill in the value of the local ID. Choose incremental to generate incremental value (e.g. Local1, Local2, etc.), fixed to set all ID's to the same value (not a good idea, but possible) or random to generate a random ID for each call.

Address: Enter the address to be used for the calls. This may be either fixed or incremental.

Port: Enter the port that you would like to use for the calls. This may be either fixed or incremental.

Audio Codec: Select the audio codec to be used for this call or "none" for no audio. This list represents the currently advertised codecs in the Options | Settings | Media audio section.

Video Codec: Select the video codec to be used for this call or "none" for no video. This list represents the currently advertised codecs in the Options | Settings | Media video section.

Display Name: Enter the display name for the call. This may be fixed, incremental, or random.

Local URL: This is a display-only field that previews the formatting of the SIP URL.

Authentication Information

Each of these fields has two or more of the following options to define the values within the call file:

Fixed: All calls will use the stated value

Incremental: Calls will use an increasing value based upon the initial value and a specified increment

Random: Calls will use random values between a specified floor (minimum) and ceiling (maximum).

The screenshot shows the 'Call File Generator' dialog box with the 'Authentication' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Call Timers', 'Local', 'Authentication', 'Remote', 'DTMF Events', 'Hold/Unhold', and 'Call Transfer'. The 'Authentication' tab is active, showing two input fields: 'Username:' with the text 'Username_1' and a dropdown menu set to 'Incremental'; and 'Password:' with the text 'Password_1' and a dropdown menu also set to 'Incremental'. At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

The fields included are:

Username: Set a username for a call ID or you leave it blank.

Password: Set a password to access the call ID or you leave it blank.

Remote Information

This screen contains the information pertaining to the remote properties of the test script. Each of these fields has two or more of the following options to define the values within the call file:

Fixed: All calls will use the stated value

Incremental: Calls will use an increasing value based upon the initial value and a specified increment

Random: Calls will use random values between a specified floor (minimum) and ceiling (maximum).

The screenshot shows the 'Call File Generator' dialog box with the 'Remote' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Call Timers', 'Local', 'Authentication', 'Remote', 'DTMF Events', 'Hold/Unhold', and 'Call Transfer'. The 'Remote' tab is active, showing the following fields and options:

- ID/Number:** Text box containing '20000' and a dropdown menu set to 'Incremental'.
- Address:** Text box containing '181.10.10.10' and a dropdown menu set to 'Fixed'. A 'Ping...' button is located to the right of the dropdown.
- Port:** Spin box containing '5060' and a dropdown menu set to 'Fixed'.
- Display Name:** Text box containing 'Device 1' and a dropdown menu set to 'Incremental'.
- Target URI:** Text box containing 'sip:20000@181.10.10.10:5060'.

At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

The fields included are:

ID/Number: Fill in the value of the remote ID. Choose incremental to generate incremental value (e.g. Remote1, Remote2, etc.), fixed to set all ID's to the same value (not a good idea, but possible) or random to generate a random ID for each call.

Address: Enter the address to be used for the calls. This may be either fixed or incremental.

Port: Enter the port that you would like to use for the calls. This may be either fixed or incremental.

Display Name: Enter the display name for the call. This may be fixed, incremental, or random.

Target URL: This is a display-only field that previews the formatting of the SIP URL.


DTMF Events

This screen contains the information pertaining to the DTMF properties of the test script. Each of these fields has two or more of the following options to define the values within the call file:

Fixed: All calls will use the stated value

Incremental: Calls will use an increasing value based upon the initial value and a specified increment

Random: Calls will use random values between a specified floor (minimum) and ceiling (maximum).

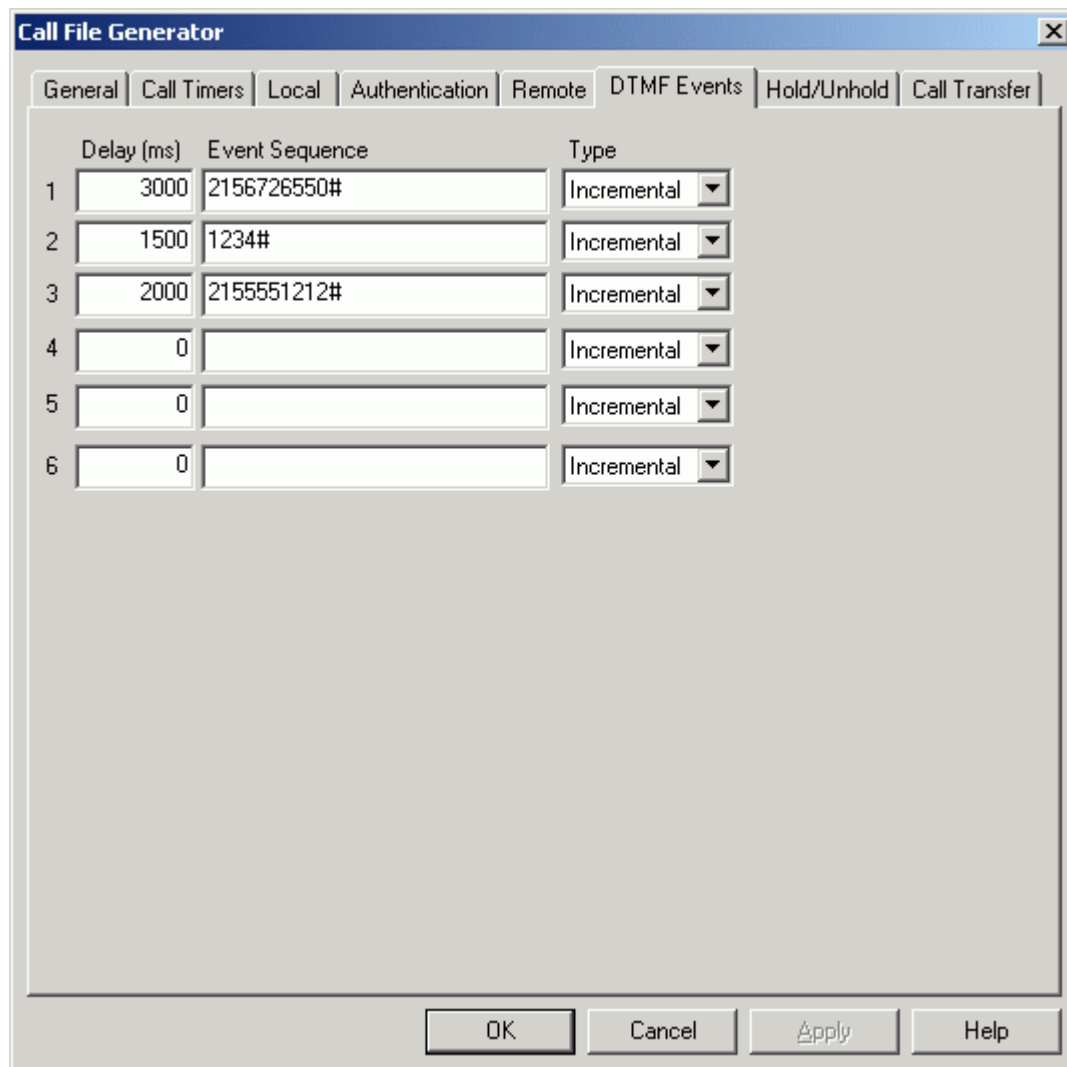

The image shows a screenshot of the 'Call File Generator' dialog box, specifically the 'DTMF Events' tab. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with the following tabs: General, Call Timers, Local, Authentication, Remote, DTMF Events (selected), Hold/Unhold, and Call Transfer. The main area contains a table with three columns: Delay (ms), Event Sequence, and Type. There are six rows of data. The first three rows have pre-filled values, while the last three rows have empty fields. The 'Type' column for all rows has a dropdown menu set to 'Incremental'. At the bottom of the dialog are four buttons: OK, Cancel, Apply, and Help.

	Delay (ms)	Event Sequence	Type
1	3000	2156726550#	Incremental
2	1500	1234#	Incremental
3	2000	2155551212#	Incremental
4	0		Incremental
5	0		Incremental
6	0		Incremental

The fields included are:

Delay (6): Fill in the delay of the event sequence in milliseconds. Use zero (0) to send the sequence immediately. This delay occurs prior to sending the sequence.

Event Sequence (6): The DTMF event sequence to be sent. Valid values are any combination of the following characters: 0-9, A,B,C,D, F(Flash), * and #.

Type (6): You may select from fixed or incremental (note: incremental only affects the sequences, not the delay values).

Using the value from the scenario above, the following DTMF event sequences would be generated:

```
P3000;2156726550#;P1500;1234#;P2000;2155551212
P3000;2156726551#;P1500;1234#;P2000;2155551213
```

```
P3000; 2156726558#;;P1500;1234#;P2000;2155551220
P3000; 2156726559#;;P1500;1234#;P2000;2155551221
```

The DTMF events field indicates the DTMF events that should be sent during this call.

This field has no effect if the enable DTMF events option is not selected in the media preferences page.

The syntax employed in WinSIP for DTMF events is as follows:

```
P[xxxx]      Pause for [xxxx] milliseconds
;           Event sequence delimiter
0-9,A,B,C,D,F,*, #
```

Note: F signifies the 'Flash' function

DTMF events are transmitted a configurable number of times each. The number of transmissions, power, duration, and packet type are configurable on the media preferences page.

Examples of DTMF event strings:

```
P3000;2156726550#;P1500;1234#;P2000;2155551212
```

This command pauses for 3000 milliseconds (3 seconds) then sends the sequence 2156726550#, pauses for 1500 milliseconds (1.5 seconds) then sends

the sequence 1234# and pauses for 2000 milliseconds (2 seconds) then sends the sequence 2155551212.

The actual events sent based upon three (3) transmissions per event would be:
222111555666777222666555555000###111222333444###2221115555555555
55111222111222

Up to 6 event sequences may be scripted for each call.

This implementation is in accordance with RFC 2833, Section 3, 'Named Telephony Events'.

Hold/Unhold

The screenshot shows the 'Call File Generator' dialog box with the 'Hold/Unhold' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Call Timers', 'Local', 'Authentication', 'Remote', 'DTMF Events', 'Hold/Unhold', and 'Call Transfer'. The 'Hold/Unhold' tab contains three main sections: 'Hold/Unhold Sequences During Call' with a dropdown menu set to 'Single'; 'Interval Until/Between Sequences' with a dropdown menu set to 'Fixed' and an 'Interval' text box containing '00:00:10'; and 'Hold Duration' with a dropdown menu set to 'Fixed' and a 'Duration' text box containing '00:00:30'. At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

The fields included are:

Hold/Unhold Sequences During Call: This option you set the sequence of hold and unhold. Repeating mode will repeat the hold process and the single mode will place the call on hold only once.

Interval Until/Between Sequences: This is the time intervals between 2 hold sequences.

Hold Duration: This option is the specific time the call is placed on hold.

Call Transfer

The screenshot shows the 'Call File Generator' dialog box with the 'Call Transfer' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with tabs for 'General', 'Call Timers', 'Local', 'Authentication', 'Remote', 'DTMF Events', 'Hold/Unhold', and 'Call Transfer'. The 'Call Transfer' tab is active, showing the following fields:

- Type:** A dropdown menu set to 'Blind (on Ringing)'.
- ID/Number:** A text box containing '30000' and a dropdown menu set to 'Incremental'.
- Address:** A text box containing '181.10.10.10' and a dropdown menu set to 'Fixed'.
- Port:** A text box containing '5060' and a dropdown menu set to 'Fixed'.
- Target URI:** A text box containing 'sip:30000@181.10.10.10:5060'.

At the bottom of the dialog are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'.

The fields included are:

Type: Sets the call transfer type to do so when ringing (blind), transfer after the answer (Consultative), or not transfer at all (None).

ID/Number: Fill in the value of the remote ID. Choose incremental to generate incremental value (e.g. Remote1, Remote2, etc.), fixed to set all ID's to the same value (not a good idea, but possible) or random to generate a random ID for each call.

Address: Enter the address to be used for the calls. This may be either fixed or incremental.

Port: Enter the port that you would like to use for the calls. This may be either fixed or incremental.

Target URL: This is a display-only field that previews the formatting of the SIP URL.

Note: For call transfer to work properly the Hold values must be manually entered into the call file. Values that must be entered are:

- Hold Frequency

Value must be set to "Single"

- Hold Interval

Value entered in seconds.


- Hold Duration

Value entered in seconds.

Generating Partner Files

WinSIP provides an automated method of generating a 'mirror-image' of the test script for use by another WinSIP endpoint. This file is usually referred to as a 'partner file'.


When this option is selected from the file menu or the edit view you will be presented with the "Save As" dialog box:

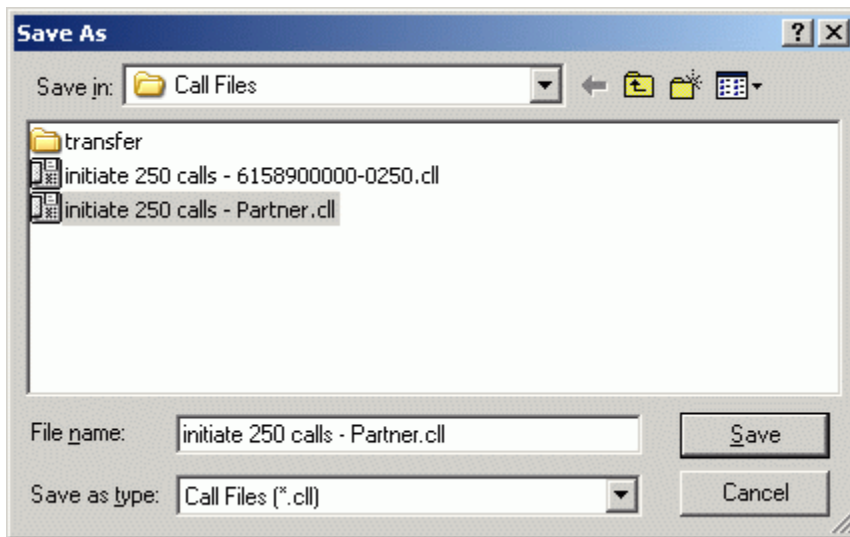

WinSIP will automatically swap the following fields:

- Local and remote addresses
- Local and remote ports
- Local and remote IDs
- Local and remote aliases

You will then be given the opportunity to load the partner file for use or viewing:

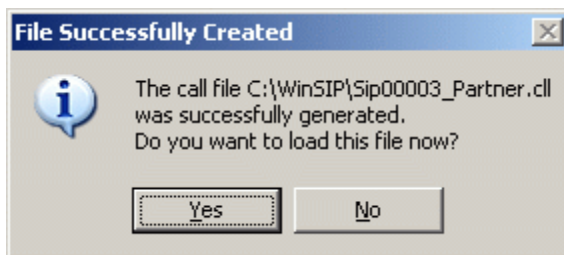

Settings

WinSIP provides parameter file editing through the Options | Settings menu choice. The following section describes these screens and settings in detail.

SIP Options

Use this command to view or change the global SIP settings. The following dialog will appear:

The WinSIP Settings dialog box is divided into several tabs: Logging, Preferences, Directories, Support, Peer Options, and Database. The Preferences tab is active, showing sub-tabs for SIP Options, Media, Proxy/Registrar, Error Injection, Advanced, Custom Headers, and Reports. The SIP Options sub-tab is selected, displaying the following settings:

- UAC Options:**
 - ☒ SDP offer in INVITE
- PRACK:**
 - ☐ Support PRACK
 - ☐ Require PRACK
- SDP Option:**
 - ☐ Increment SDP Version
- UAS Options:**
 - ☒ Send 100 Trying
 - ☒ Send 180 Ringing
 - ☐ Send 183 Session Progress
 - ☐ SDP in 18x Response
 - ☒ Allow Re-Invite
 - ☐ Ignore Re-Invite
- UAS Authentication:**
 - ☐ Authenticate REGISTER
 - ☐ 401 Unauthorized
 - ☐ 407 Proxy Authenticate
 - ☐ Authenticate INVITE
 - ☐ 401 Unauthorized
 - ☐ 407 Proxy Authenticate
 - ☐ Authenticate BYE
 - ☐ 401 Unauthorized
 - ☐ 407 Proxy Authenticate
 - ☒ Include Algorithm Parameter in challenge responses
- UAC Request Options:**
 - ☒ Send Port In Request URI
 - ☒ Send Port In To/From Headers
- SIP DSCP/TOS Options:**
 - Default (0)
- Call Start/Stop Limits:**
 - Maximum Call Start Rate: 1 - 1,000 (zero to disable)
 - 0 Calls/Second
 - Maximum Call Stop Rate: 1 - 1,000 (zero to disable)
 - 0 Calls/Second
- DialogTimers:**
 - Dialog creation idle timeout: 60 seconds. (zero to disable).
 - Dialog close idle timeout: 60 seconds. (zero to disable).
 - No answer timeout: 0 seconds. (zero to disable).
- Session Timer:**
 - ☐ Support Session Timer
 - ☐ Require Session Timer
 - ☐ Initiate Session Timer
 - ☐ Suppress Supported Line
 - Session Interval: 3600 seconds
 - Minimum SE Interval: 60 seconds
 - Refresh Lead Time: 15 seconds
 - Refresher:
 - ☒ Don't Specify
 - ☐ Specify Local
 - ☐ Specify Remote
 - Refresh Mechanism:
 - ☒ Re-Invite
 - ☐ Update
 - ☐ Renegotiate Refresher Roles Every Transaction
- Home Port:** 5060

At the bottom of the dialog are buttons for OK, Cancel, Apply, and Help.

The fields included are:

UAC Options (Initiate modes only)

SDP offer in INVITE: This option enables/disables the offering SDP in the initial INVITE request from WinSIP.

UAS Options (Answer modes only)

Send 100 Trying: If enabled, WinSIP will send a 100 Trying response to inbound INVITE requests.

Send 180 Ringing: If enabled, WinSIP will send a 180 Ringing response to inbound INVITE requests.

Send 183 Session Progress: If enabled, WinSIP will send a 183 Session progress response to inbound INVITE requests.

SDP in 180 Ringing: If checked, WinSIP will respond with of an SDP offer or answer in the 180 ringing when a PRACK is expected.

Allow Re-Invite: This option allows re-invite handling.

Ignore Re-Invite: If checked, it simply drops the re-INVITE request. If not checked, and Allow Re-Invite is not checked, it responds with a 488 Not Acceptable Here.

Home Port: This determines which port on the selected adapter WinSIP is homed on (listening port).

UAS Authentication

Authenticate REGISTER: If checked, WinSIP will send your preference of 401 Authentication Required or 407 Proxy Authentication Required to inbound REGISTER requests (Proxy mode only).

Authenticate INVITE: If checked, WinSIP will send your preference of 401 Authentication Required or 407 Proxy Authentication Required to inbound INVITE requests.

Authenticate BYE: If checked, WinSIP will send your preference of 401 Authentication Required or 407 Proxy Authentication Required to inbound BYE requests.

Include Algorithm Parameter in challenge response: This option forces inclusion of the “algorithm=md5” parameter in the authorization response.

PRACK

Support PRACK: Enable this option to add a Supported: header with the 100rel value to the INVITE request.

Require PRACK: Enable this option to add a Require: header with the 100rel value to the INVITE request.

SDP Options

Increment SDP Version: By enabling this option, you can increment the SDP version number by 1 in each outgoing Re-Invites.

Dialog Timers

Dialog Creation Idle Timeout: This field specifies the number of seconds to wait before the dialog create timeout occurs. A value of zero (0) specifies an indefinite period. A value between five (5) and thirty-six hundred (3,600 seconds/1 hour) activates a timer for that period. The timer begins (for the UAC/Initiator), when the first non-final response is received (codes 100–199) and ends when a final response (200 or greater) is received. For the UAS (answerer) it begins when the INVITE request is responded to with a 100-299 code and ends when an ACK is received.

Dialog Close Idle Timeout: This field specifies the number of seconds to wait before the dialog close timeout occurs. A value of zero (0) specifies an indefinite period. A value between five (5) and thirty-six hundred (3,600 seconds/1 hour) activates a timer for that period. The timer begins when a BYE message is sent and ends when a final (200 or greater) response is received.

No Answer Timer: Initiate mode only, this field specifies the number of seconds to wait before the dialog is cancelled when an endpoint is alerting but not answered. A value of zero (0) specifies an indefinite period. A value between five (1) and thirty-six hundred (3,600 seconds/1 hour) activates a timer for that period. The timer begins when a 180 Ringing response message is received and ends when a final (200 or greater) response is received.

Session Timer

Support Session Timer: This field enables or disables Session Timer support. If this option is enabled, the following options are available:

Require Session Timer: Enable this option to add a Require: header with the 'timer' value to the INVITE request.

Initiate Session Timer: This option forces the inclusion of Session-Expires: and Min-SE: headers in INVITE requests.

Suppress Supported Line: This option suppresses the "Supported: timer" header while still maintaining support for all timer functions.

Session Interval: The session interval in seconds. This corresponds to the value of the duration field of the Session-Expires: header.

Minimum SE Interval: The minimum session interval in seconds. This value must be ten (10) or greater (up to the Session Interval value), this field adds a Min-SE: header with the desired duration value.

Refresh Lead Time: The number of seconds prior to session expiration the application should try to refresh the session. This value must be between 5 and one half of the Min-SE value.

Refresher: This field determines whether the local or the remote machine should play the role of session refresher.

Refresher Mechanism: This field determines which method (re-INVITE or UPDATE) the local machine will use to initiate session refreshes.

Renegotiation Refresher Roles Every Transaction: When enabled, this option does not add the 'refresher=' parameter on the Session-Expires: header, allowing for the other endpoint to determine whether it wishes to assume the role of refresher. When two WinSIPs are "back-to-back" enabling this option on both sides creates a "ping-pong" refresher effect.

UAC Request Options

Send Port in Request URI: If enabled, this option always adds the port number in the Request URI.

Send Port In To/From Header: If enabled, this option always adds the port number in the To/From Header.

SIP DSCP/TOS Options

This option allows you to set value for the DSCP/TOS (Type of Service) for sending the signaling packets.

Call Start/Stop Limits

Maximum Call Start Rate: Allows you to control the call start rate via a 'garden hose' effect. A value of zero (0) starts the calls as fast as possible. A value between one (1) and one thousand (1,000) will allow **up to** the specified number of calls per second to start.

Note: This field represents the maximum call start rate. The actual call presentation rate may be lower depending upon the call signaling, latency of the unit under test, call durations, programmed delays, hardware limitations, and the current call load.

Maximum Call Stop Rate: Allows you to control the call stop rate via a 'garden hose' effect. A value of zero (0) hangs up the calls as fast as possible. A value between one (1) and one thousand (1,000) will hang-up **up to** the specified number of calls per second.

Note: This field represents the maximum call stop rate. The actual call stop rate may be lower depending upon the latency of the unit under test, call signaling, programmed delays, hardware limitations, and the current call load.

Media Options

Use this command to view or change the global media settings. The following dialog will appear:

WinSIP Settings

Logging | Preferences | Directories | Support | Peer Options | Database
 SIP Options | **Media** | Proxy/Registrar | Error Injection | Advanced | Custom Headers | Reports

General
☒ RTP Enabled ☐ Mirror Inbound Streams First RTP Port: 40000 First RTCP Port: 40001

Start Media ...
 UAC: ACK UAS: ACK

Audio Capabilities
 Available: Tones Test (G.711), G.722 Mode 1, G.723 5.3k, G.723 6.3k, G.728, AMR NM, iLBC 15.2 Mode 1, iLBC 15.2 Mode 2, iLBC 13.3 Mode 1, iLBC 13.3 Mode 2
 Selected: G.711 uLaw, G.711 aLaw, G.729
 Edit Codecs...

Channel Attributes
 Transmit on: All channels
 Receive on: 10 channels
 Goal:
☐ Perfect Media Streams
☐ Maximum Connections
☒ Best Balance
 RTCP Enabled: ☒ RTCP attribute in SDP: ☐

Video Capabilities
 Available: MPEG4, H.263+, H.264
 Selected: H.261, H.263
 Edit Codecs...

Media DSCP/TOS Options
 Audio RTP: Default (0)
 Audio RTCP: Default (0)
 Video RTP: Default (0)
 Video RTCP: Default (0)

DTMF Events
☐ Enable Events
☒ Send RTP during DTMF Events
☒ RFC 2833 - Section 3
☐ SIP INFO Method
 Duration: 1500 ms
 RFC 2833 - Section 3:
 Power: 0 dBm0 Packet Type: 101
 Transmissions: 3 End Bit Transmissions: 1
 Sequence:
☒ Incremental
☐ Duplicate
 SIP INFO Method:
 Interval: 100 ms (between INFO messages)

OK Cancel Apply Help

The fields included are:

General

RTP Enabled: This option enables/disables the sending of RTP media.

Mirror Inbound Streams: This option does not generate media, but “mirrors” or “echoes” data received on the inbound channel.

First RTP Port: This option specifies the RTP first port to be used when opening RTP channels. The values may be between forty thousand (40,000) and sixty thousand (60,000). The values below forty thousand are reserved for WinSIP SIP protocol messages.

First RTCP Port: This option specifies the RTP first port to be used when opening RTCP channels. The values may be between forty thousand (40,001) and sixty thousand (60,000). The values below forty thousand are reserved for WinSIP SIP protocol messages.

Start Media

UAC: This Block gives an option to start media after a particular message is received. For example if you want to start media as soon as you get 180 Ringing Response, you have to select the 180 Ringing option in the UAC box.

UAS: This Block gives an option to start media after a particular message is sent. For example if you want to start media as soon as you send 100 Trying Response, you have to select the 180 Trying option in the UAS box.


Audio Capabilities

Available: This indicates which audio capabilities are available to advertise in the SDP offer.

Selected: This indicates which audio capabilities to advertise in the SDP offer.

Edit Audio Codecs...

Under the Audio Capability section of the 'Settings | Media' tab, clicking on the Edit Codecs... command button will display an Audio Codec Maintenance dialog box. The following are the descriptions of the available options.

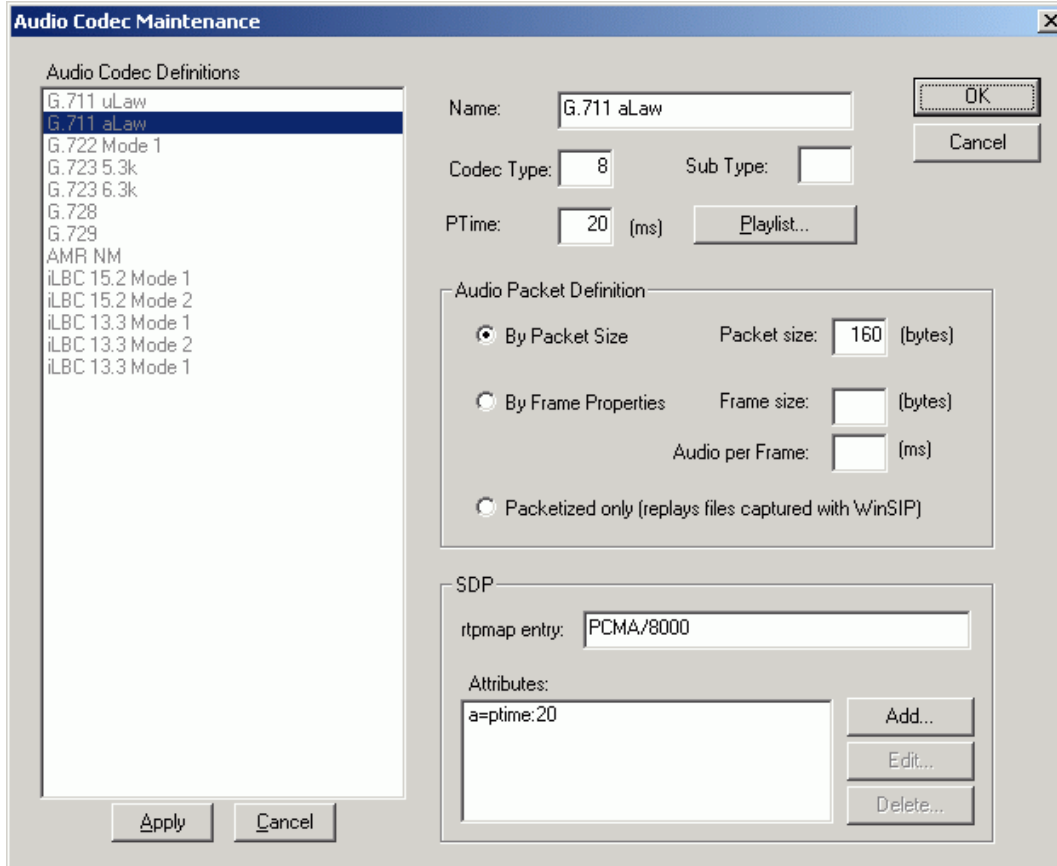

Name: This is the display name used to identify this particular codec.

Codec Type: This field represents the value used in the RTP header to identify this particular codec.

Sub Type: This field is used internally to identify codec variants (i.e. different codec definitions which have the same codec type value).

PTime: This field determines the amount of audio (in milliseconds) contained within each packet.

Play List: The play list allows you to select audio clips that are played in sequence. Each clip may be played once, a specified number of repetitions, a specified period of time, or continuously. If the end of a play list is reached prior to call termination, the entire list is repeated until the call is terminated.

Add Multiple: This option allows you to select multiple audio files at one time. The files will be placed in the playlist in the order of files selected.

Audio Packet Definition: This section defines the packetization of the audio stream. The following explains each option:

By Packet Size: Defines the audio packet size by the payload bytes contained in each packet (e.g. G.711 at 20ms contains 160 bytes, at 10 ms 80 bytes, at 60 ms 480 bytes),

By Frame Properties: Defines the audio packet in terms of audio frames per packet and frame size (e.g. G.711 audio frames are 1 ms each. Each frame is 8 bytes, therefore: 20 ms of G.711 contains 20 frames * 8 bytes each or 160 total bytes).

Packetized only: Packetized format is one of the stream capture options and can be used to add or “learn” new CODECs and media streams. For instance, WinSIP does not natively support G.722.2 (wideband CODEC). You may add a new CODEC definition for G.722.2 and advertise it in WinSIP and then record the incoming stream in “packetized” format. You may then replay the stream by selecting the “packetized” audio packet definition type and WinSIP will use the information recorded in the packetized file to replay the stream even if the packet size varies (for example, AMR packets may vary in size).

SDP: This section contains the SDP elements for each CODEC.


Rtpmap entry: The SDP rtpmap entry for the CODEC.

Initial mode: This option allows you to set the initial mode for setting the attribute to recv, or send, or both (sendrecv) audio in SDP.

Attributes: CODEC specific SDP attributes to be added for this CODEC.

Edit Playlist

With the Audio Codec Maintenance dialog box displayed, clicking on the Playlist command button will display an Edit Playlist dialog box. The following are the descriptions of the available options.

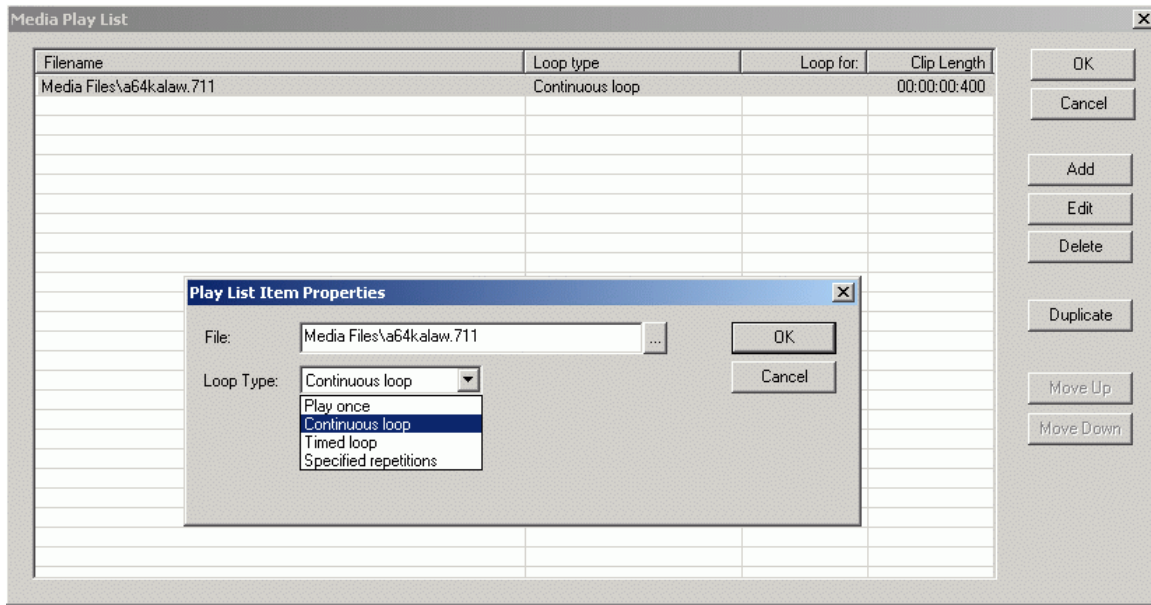

File: The name of the file containing the audio clip.

Loop Type: The type of loop to be applied to this file. The following loop types are available:

Play once: The clip is played end-to-end a single time.

Continuous loop: The clip is played repeatedly.

Note: If this is used in any position besides the last in the list, the list will not progress past this point.

Timed loop: The clip is played for the specified period of time irrespective of the number of times the clip must be looped through or the position in the clip.

Specified repetitions: The loop is played end-to-end the specified number of times irrespective of the duration of the clip.


Note: If the call duration exceeds the length of audio defined in the playlist, the entire playlist will repeat until the call terminates.

Video Capabilities

Available: This indicates which video capabilities are available to advertise in the SDP offer.

Selected: This indicates which video capabilities to advertise in the SDP offer.

Edit Video Codecs...

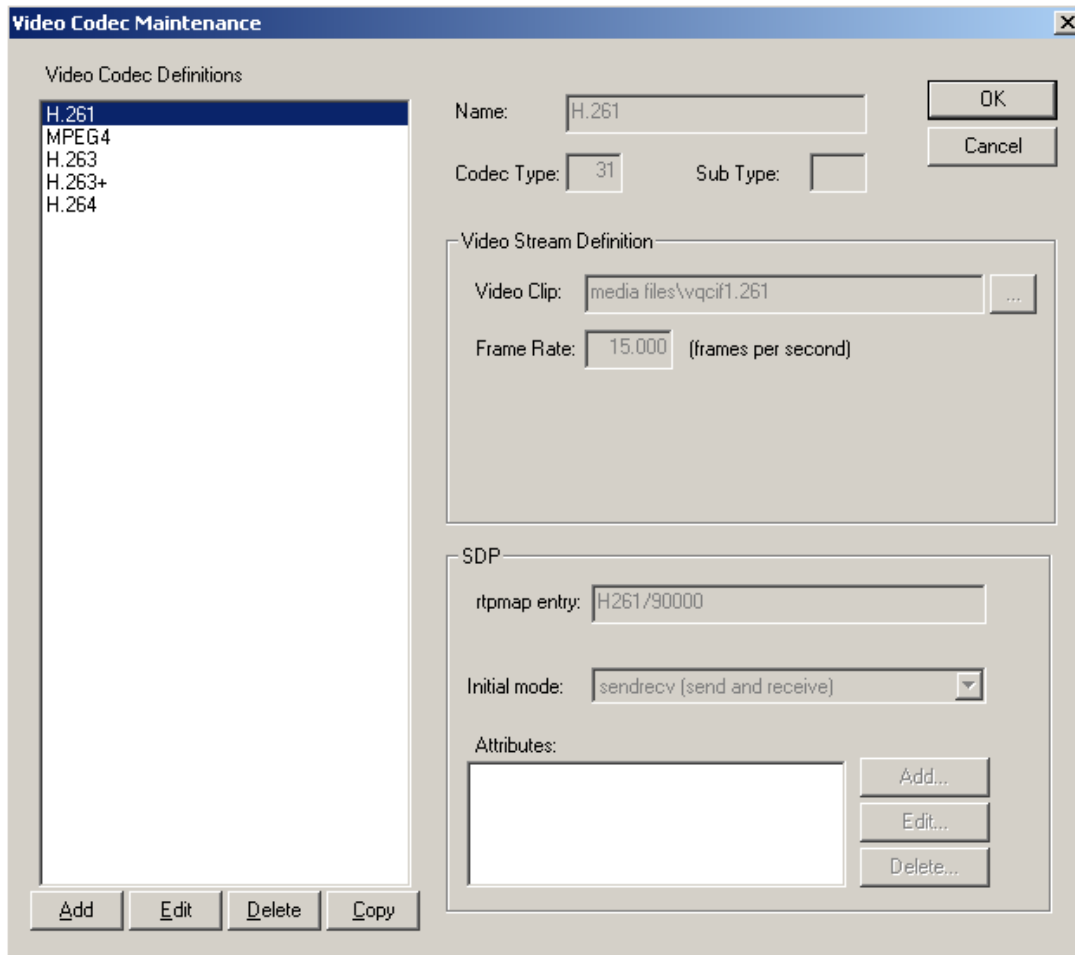

Name: This is the display name used to identify this particular codec.

Codec Type: This field represents the value used in the RTP header to identify this particular codec.

Sub Type: This field is used internally to identify codec variants (i.e. different codec definitions which have the same codec type value).

Format: With this option you can select the format of outgoing Video, such as H.261, H.263, etc.

Video Clip: The name and location of the file containing the video clip.

Frame Rate: With this option you can send either a particular frame per packet or you can send default frames per packet. If the value is not the default value for the Video format you selected the adjacent default button will be activated. Default button will change the value of frames per packet to default value of the Video format you selected.

SDP: This section contains the SDP elements for each CODEC.

Rtpmap entry: The SDP rtpmap entry for the CODEC.

Initial mode: This option allows you to set the initial mode for setting the attribute to recv, or send, or both (sendrecv) video in SDP.

Attributes: CODEC specific SDP attributes to be added for this CODEC.

Channel Attributes

Transmit on / Receive on: These fields determine the number of calls that transmit/receive data. If a specific number is entered, then that many calls, in sequence starting with the first call you selected to run, transmit and/or receive data accordingly. If "all" is entered, then all of the calls you have selected to run will transmit and/or receive data accordingly.

Goal: This group of buttons specifies the outbound media goal.

Perfect Media: A goal of perfect media places the emphasis on transmitting media as close as possible to the perfect interval or frame rate.

Maximum Connections: A goal of maximum connections places the emphasis on opening the maximum number of calls with audio and/or video streams.

Best Balance: A goal of best balance tries to balance quality and quantity.

RTCP Enabled: Enable or Disable RTCP.

RTCP Attribute in SDP: If checked, this option adds the following attribute line to the SDP:

a=rtcp: [RTCP port number]

Media DSCP/TOS Options

Audio RTP: This option allows you to set value for the DSCP/TOS (Type of Service) for sending the Audio RTP packets.

Audio RTCP: This option allows you to set value for the DSCP/TOS (Type of Service) for sending the Audio RTCP packets.

Video RTP: This option allows you to set value for the DSCP/TOS (Type of Service) for sending the Video RTP packets.

Video RTCP: This option allows you to set value for the DSCP/TOS (Type of Service) for sending the Video RTCP packets.

DTMF Events

This group of items enables/disables DTMF events, specifies the number of transmissions per DTMF digit, specifies the power of the transmission and the duration of the tone and the packet type of the telephone event.

Enable Events: This option gives the ability to send or not to send the DTMF events.

RFC 2833 - Section 3: This option will use RFC 2833 method to send the DTMF events.

SIP INFO Method: This option will use INFO method to send the DTMF events; it sends the DTMF events in SIP messages.

Duration: Duration of the tone, how long the button is pressed.

RFC 2833 - Section 3

Power: The power level to be encoded into the DTMF packets.

Packet Type: The packet type identifier for the DTMF packets (user type from 96 to 127).

Transmissions: Selects the number of transmissions of each DTMF digit.

End Bit Transmissions: Selects the number of End Bit transmissions of each DTMF digit.


Sequence: You can set the sequence of the each DTMF event to be incremental or duplicate.

SIP INFO Method

Interval: The time between the information messages.

Proxy/Registrar Options

Use this command to view or change the global proxy server and registrar settings. The following dialog will appear:

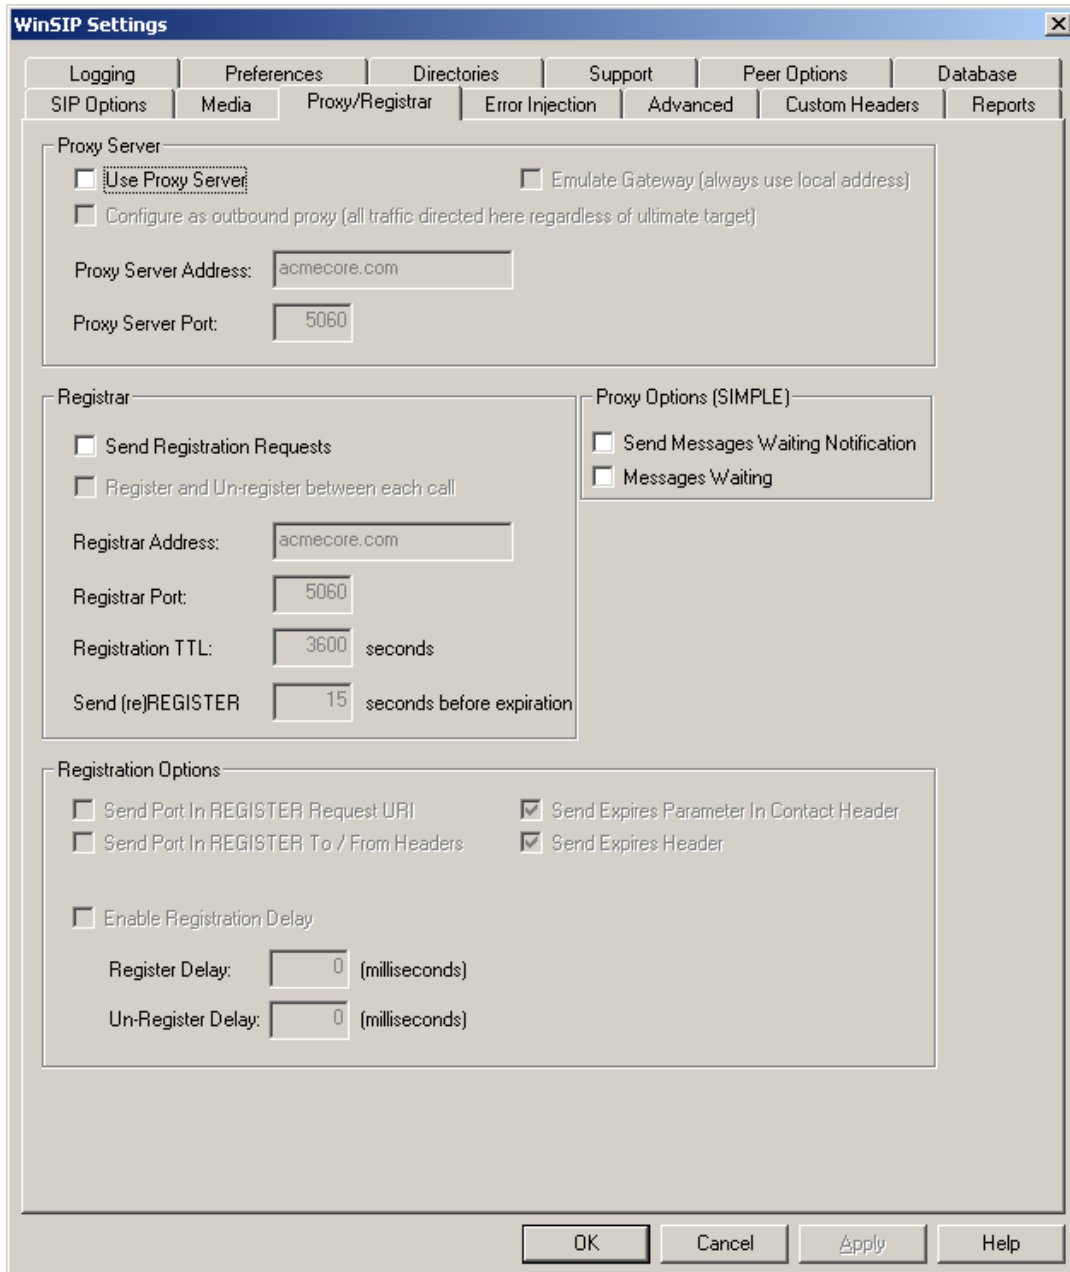

The image shows the WinSIP Settings dialog box with the 'Proxy/Registrar' tab selected. The dialog has a title bar 'WinSIP Settings' and a close button. Below the title bar are several tabs: Logging, Preferences, Directories, Support, Peer Options, Database, SIP Options, Media, Proxy/Registrar (selected), Error Injection, Advanced, Custom Headers, and Reports. The main content area is divided into three sections: Proxy Server, Registrar, and Registration Options. The Proxy Server section has checkboxes for 'Use Proxy Server' and 'Emulate Gateway (always use local address)', a checkbox for 'Configure as outbound proxy (all traffic directed here regardless of ultimate target)', and text boxes for 'Proxy Server Address' (acmecore.com) and 'Proxy Server Port' (5060). The Registrar section has checkboxes for 'Send Registration Requests' and 'Register and Un-register between each call', and text boxes for 'Registrar Address' (acmecore.com), 'Registrar Port' (5060), 'Registration TTL' (3600 seconds), and 'Send (re)REGISTER' (15 seconds before expiration). The Registration Options section has checkboxes for 'Send Port In REGISTER Request URI', 'Send Port In REGISTER To / From Headers', 'Enable Registration Delay', 'Send Expires Parameter In Contact Header', and 'Send Expires Header'. The 'Send Expires Parameter In Contact Header' and 'Send Expires Header' checkboxes are checked. The 'Register Delay' and 'Un-Register Delay' text boxes are both set to 0 milliseconds. At the bottom of the dialog are buttons for OK, Cancel, Apply, and Help.

WinSIP Settings

Logging | Preferences | Directories | Support | Peer Options | Database
SIP Options | Media | **Proxy/Registrar** | Error Injection | Advanced | Custom Headers | Reports

Proxy Server

☐ Use Proxy Server ☐ Emulate Gateway (always use local address)
☐ Configure as outbound proxy (all traffic directed here regardless of ultimate target)

Proxy Server Address:
 Proxy Server Port:

Registrar

☐ Send Registration Requests
☐ Register and Un-register between each call

Registrar Address:
 Registrar Port:
 Registration TTL: seconds
 Send (re)REGISTER: seconds before expiration

Proxy Options (SIMPLE)

☐ Send Messages Waiting Notification
☐ Messages Waiting

Registration Options

☐ Send Port In REGISTER Request URI ☒ Send Expires Parameter In Contact Header
☐ Send Port In REGISTER To / From Headers ☒ Send Expires Header

☐ Enable Registration Delay

Register Delay: (milliseconds)
 Un-Register Delay: (milliseconds)

OK Cancel Apply Help

The fields included are:

Proxy Server

Use Proxy Server: This enables/disable proxy server and registrar services.

Emulate Gateway: This option does not set the address of record to that of the proxy but rather forces it to the local address (from the local address in the call file).

Configure as outbound proxy: Direct all requests and responses to the proxy without regard to the contents of the SIP Via or Contact headers.

Proxy Server Address: This field is the IP address or the fully qualified domain name (FQDN) of the proxy server to contact.

Proxy Server Port: This field specifies the proxy server port to be used.

Registrar

Send Registration Requests: This option sends Registration Request to IP address present in the "Registration Address" box.

Register and Un-register between each call: With this option each call will Register and Un-register between every cycle.

Registrar Address: This field is the IP address or the fully qualified domain name (FQDN) of the registrar to contact for REGISTER/un-REGISTER requests (this is usually the same as the proxy server but may be different)

Registrar Port: This field specifies the registrar port to be used.

Registration TTL: This field specifies the time-to-live of the registration binding (in seconds).

Send (re) REGISTER (n) seconds before expiration: Specifies the lead time for registration binding refreshes in seconds.

Proxy Options (SIMPLE)

Send Messages Waiting Notifications: This option allows you to send the notifications, when an endpoint is registered or unregistered.

Messages Waiting: This option allows you to set the message waiting option in the notifications of the registration.

Registration Options

Send Port in REGISTER request URI: Enables/disables the sending of the port in REGISTER request URI (address in REGISTER request header).

Send Port in REGISTER To/From headers: Enables/disables the sending of the port in REGISTER request To and From headers.

Send Expires Parameter In Contact Header: This option will add the Expire Parameter in the Contact Header.

Send Expires Header: This option will send the Expire Parameter in Expire Header.

Enable Registration Delay: Enables/disables the option to specify the delay to be used prior to sending the initial REGISTER request.

Register Delay: This option allows you to specify the delay between REGISTER requests sent by WinSIP to the registrar. This field gives you the flexibility to 'throttle back' registrations so as not to overload a proxy/registrar

Un-Register Delay: This option allows you to specify the delay between (un)REGISTER requests sent by WinSIP to the registrar. This field gives you the flexibility to 'throttle back' un-registrations so as not to overload a proxy/registrar.

Error Injection Options

WinSIP Settings

Logging | Preferences | Directories | Support | Peer Options | Database
 SIP Options | Media | Proxy/Registrar | **Error Injection** | Advanced | Custom Headers | Reports

☐ **Enable Error Injection**

Parser/Transaction Matching Errors:

☐ Change Call ID ☐ Drop Required Header
☐ Illegal Sequence (CSeq) Number ☐ Drop/Change Branch Parameter

☐ Affect all calls ☒ Affect % of calls

UAC Errors:

☐ Don't send ACK ☐ Affect all calls ☒ Affect % of calls

UAS Errors:

INVITEs:

☒ No errors
☐ Don't respond (at all)
☐ Don't send 200 OK
☐ Send custom response:
 Code: Text:
☐ Affect all INVITEs ☒ Affect % of INVITEs

BYEs:

☒ No errors
☐ Don't respond
☐ Send custom response:
 Code: Text:
☐ Affect all BYEs ☒ Affect % of BYEs

OK Cancel Apply Help

The fields included are:

Enable Error Injection

Click check box if error injection is to be enabled.

Parser/Transaction Matching Errors

Change Call ID: This option changes the Call ID in the 200 OK response from Answer Side.

Illegal Sequence (Cseq) Number: This option changes the Sequence (Cseq) number of a Response to an illegal Sequence (Cseq) number (i.e. '0').

Drop Required Header: This option will drop the 'From' header from the 200 OK Response message.

Drop/Change Branch Parameter: This option will change the Branch Parameter of 200 OK Response message.

Affect all calls or % of calls: All Call's option makes the above selected changes in every call whereas ' % of Calls' Option makes selected changes to particular percentage of total number of calls.

UAC Errors

Don't send ACK: This option makes UAC side not to send ACK. This Option is used in UAC side only.

Affect all calls or % of calls: All Call's option makes the above selected changes in every call whereas ' % of Calls' Option makes selected changes to particular percentage of total number of starting calls.

UAS Errors

INVITEs

No errors: This option will not inject any errors in INVITE messages.

Don't respond (at all): With this option the UAS side will not respond any incoming INVITE Messages. UAS side will be working as if it never saw the incoming INVITE messages.

Don't send 200 OK: With this option the UAS side will not Send 200 Ok to incoming INVITE Messages.

Send custom response: With this option, you can send a custom Code and custom Text in your INVITE message.

Code: You can send a custom Code in your message.

Test: You can send a Custom Text along with the custom Code in your header.

Affect all calls or % of calls: All Call's option makes the above selected changes in every call whereas ' % of Calls' Option makes selected changes to particular percentage of total number of starting calls.

BYEs

No errors: This option will not inject any errors in BYE messages.

Don't respond: With this option the UAS side will not respond any incoming BYE Messages. UAS side will be working as if it never saw the incoming BYE messages.

Send custom response: With this option, you can send a custom Code and custom Text in your BYE message.

Code: You can send a Custom Code in your message.

Test: You can send a Custom Text along with the Custom Code in your header.

Affect all calls or % of calls: All Call's option makes the above selected changes in every call whereas ' % of Calls' option makes selected changes to particular percentage of total number of starting calls.

Advanced

WinSIP Settings

Logging | Preferences | Directories | Support | Peer Options | Database
SIP Options | Media | Proxy/Registrar | Error Injection | **Advanced** | Custom Headers | Reports

Media Path Confirmation

☐ Enabled

Test Type: Local ID: single pass

Failure Timeout: 00:00:15:000 (zero to disable)

Initial Delay: 00:00:02:500

Delay Between Tests: 00:00:10:000

Maximum Repetitions: 3

Calls Block Option

☐ Enabled

Block Size: (Calls/Block) 5

Default Duration: (zero to disable) 00:01:00:000

Media Recording

☐ Record Audio Streams Format:

☐ Set Custom Audio File Name

Custom Audio File Name:

☐ Record Video Streams Format:

☐ Set Custom Video File Name

Custom Video File Name:

Call Rate Optimization

☐ Enable optimization ☐ Lock on optimum rate

XML Templates

☒ Use XML Request Templates

Tone Detect Confirmation

☐ Enable Tone Detect Confirmation

Sensitivity - 80%

Less More

OK Cancel Apply Help

The fields included are:

Media Path Confirmation

Media path confirmation is used to determine whether devices that do transcoding are sending the streams to the proper destination. WinSIP uses RFC 2833 compliant DTMF packets to determine path correctness.

Enabled: Enables or disables the media path confirmation tests.

Test Type: Determines the test to be run. Valid values are:

Local-ID: single pass. The initiating WinSIP sends its local ID via DTMF to the answerer. Upon receipt of the complete initiator's ID, the answerer responds with a local ID sequence of its own. Once the initiator receives the confirmation ID, that pass is considered completed successfully.

Ping-Pong-ID: double pass. The initiating WinSIP sends the remote ID via DTMF to the answerer. Upon receipt of its ID, the answerer responds by sending its local ID in a sequence of its own. Once the initiator receives the confirmation ID, it then sends a sequence containing its local ID. Upon receipt of the remote ID, the answerer responds by sending the same ID in a confirmation sequence. Once the initiator receives the confirmation ID, that pass is considered completed successfully.

Call-ID: single pass: The initiating WinSIP sends the call-id via DTMF to the answerer. Upon receipt of the complete call-id, the answerer responds with a call-id sequence of its own. Once the initiator receives the confirmation call-id, that pass is considered completed successfully.

Failure Timeout: The amount of time to wait between sequences before the test is considered a failure.

Initial Delay: The amount of time to delay prior to initiating the test.

Delay Between Tests: The amount of time to delay between test iterations.

Maximum Repetitions: The number of times to repeat the test. Valid values are between 1 and 1,000.

Media Recording

Record Audio Streams: Enables/disables the recording of audio streams. It is highly recommended that this option be enabled when running lower volumes of traffic. All streams within the "Receive On:" realm will be recorded. The file names will have the format: "audio[ip address].[time/date].[codec name]".

Format: The output format for the audio recording. Valid values are "raw" and "packetized".

Raw Format: This format records only the contents of the stream. WinSIP can record and replay the following raw codec types.

G.711 Alaw, G.711 μ law, G.722.1, G.723 5.3k, G.723 6.3k, G.728, G.729a, AMR NB (NetMeeting 12.2 Kb).

Packetized: Any RTP audio stream that can be replayed at a specified fixed inter-packet interval.

Set Custom Audio File Name: With this option you can set your own custom name for the audio files recorded.

Record Video Streams: Enables/disables the recording of video streams. It is highly recommended that this option be enabled when running lower volumes of traffic. All streams within the "Receive On:" realm will be recorded. The file names will have the format: "video[ip address].[time/date].[codec name]"

Format: The output format for the video recording. Valid values are "raw" and "packetized".

Raw Format: This format records only the contents of the stream. WinSIP can record and replay the following raw codec types.

H.261 and H.263.

Packetized: Any RTP video stream that can be replayed at a specified frame rate and indicates framing with the marker bit of the RTP header.

Set Custom Video File Name: With this option you can set your own custom name for the video files recorded.

Call Rate Optimization

Call rate optimization is an algorithm which when enabled, searches for the highest error-free rate attainable by the unit or device under test (UUT/DUT).

Enable Optimization: The option enables the algorithm (note: to enable the algorithm, you must also have defined a maximum call start rate).

Lock on optimum rate: This determines whether the system should use the first rate determined to be successful (when checked) or whether to continually try to increase the rate during the test (not checked).

XML Templates

Use XML Request Templates: Each WinSIP has a "WinSIP.xml" file in its root directory (default: C:\WinSIP) which contains XML templates for each SIP request message. These templates allow for insertion of system-defined values from the data dictionary (see below for example). In addition, there are 10 "User-defined" input elements available for each call where the user can enter values that can be varied on a call-by-call basis.

Sample XML Request Template:

```
<message name="invite.with.sdp">
  <![CDATA[
    INVITE
    sip:[input.remote.id]@[dialog.remote.request.addr]:[dialog.remote.request.port];tr
    ansport=[system.ip.protocol] SIP/2.0
    [dialog.route.set]
    From: [input.local.name]
    <sip:[input.local.id]@[dialog.local.aor.addr]:[dialog.local.aor.port]>;tag=[transactio
    n.local.tag]
    To: [input.remote.name]
    <sip:[input.remote.id]@[dialog.remote.aor.addr]:[dialog.remote.aor.port]>
    Via: SIP/2.0/[system.ip.protocol]
    [input.local.address]:[input.local.port];branch=[transaction.branch]
    Call-ID: [transaction.callid]
    CSeq: [transaction.local.cseq] INVITE
  User-Agent: [system.user.agent.id]
    Contact: sip:[input.local.id]@[input.local.address]:[input.local.port]
    Allow: [system.transactions.supported]
    Accept: application/sdp
    Supported: 100rel, timer
    Session-Expires: 60;refresher=uac
    Min-SE: 30
  Accept-Language: en
  Accept-Encoding: identity/text/xml
    Max-Forwards: 70
    [transaction.custom.headers]
```

```

[transaction.authorization.header]
    Content-Type: application/sdp
    Content-Disposition: dialog
    Content-Length: [transaction.content.length]

    [dialog.local.sdp]
]]>
</message>

```

Tone Detect Confirmation

Enable Tone Detect Confirmation: Enabling this option will perform Tone Detection test. This option will detect tone from the incoming audio and check the correct order (1500Hz - 1000Hz - 2000Hz) of the tone to report as passed or failed.

Sensitivity: This option allows you to set the sensitivity of the Tone Detect Test to report as passed or failed.

Calls Block Option


Enabled: Check this box to enable the Block Call Option. This gives the ability to start a particular size block of calls. No further blocks will run unless all calls from the previous block have completed.

Block Size: This option allows you to set the block size of the calls.

Default Duration: In the call file, if the call duration is set to manual, then the value entered here will replace the manual duration within the call file.

Custom Headers Options

This allows you to create custom headers that are sent in specified requests and responses.

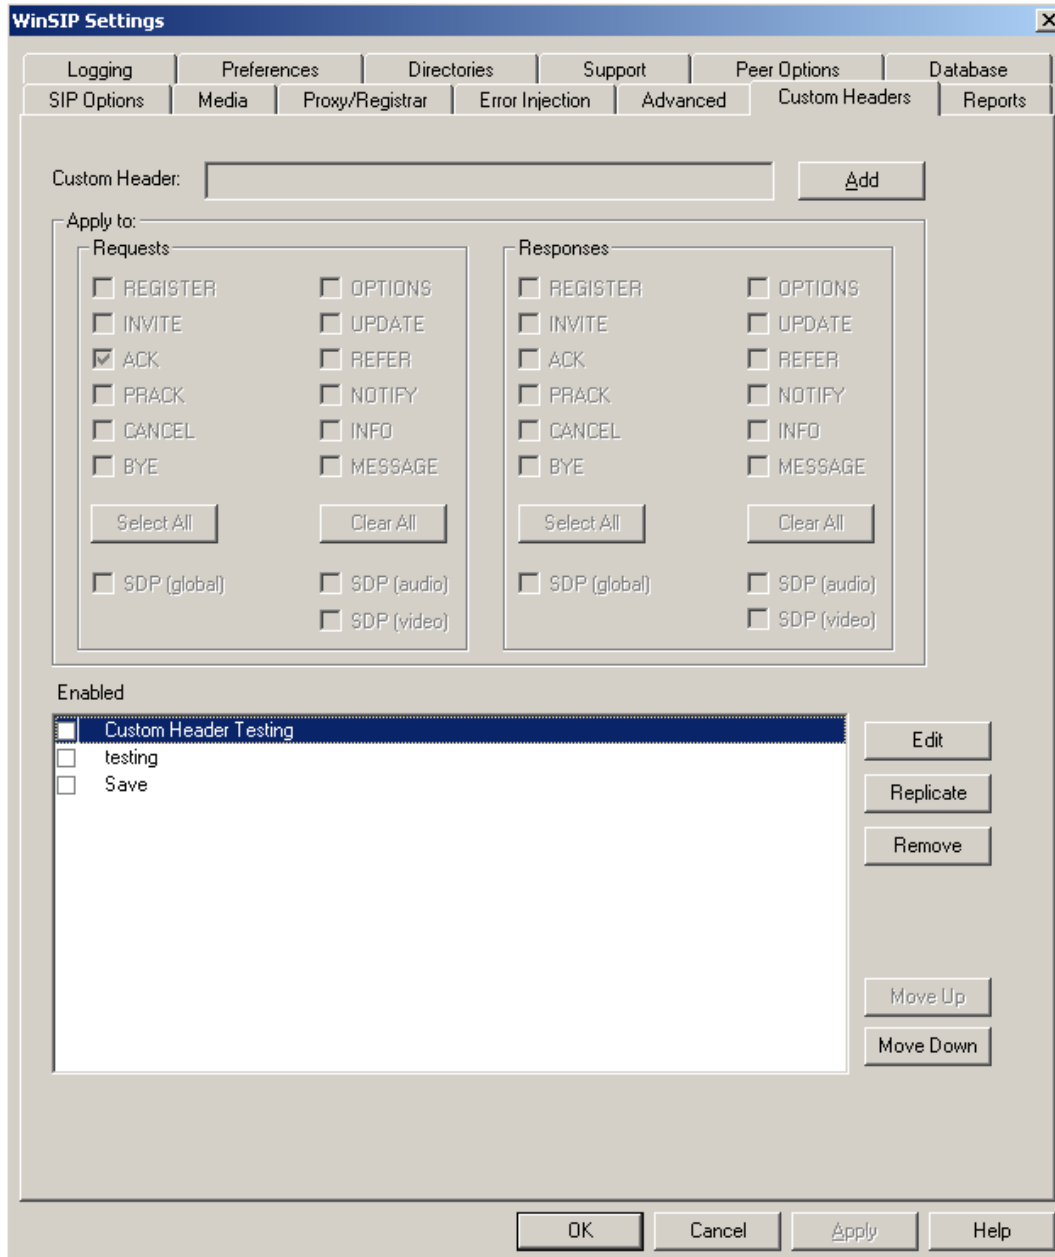

The fields included are:

Custom Header

Enter the custom header you wish to use in this field, and press the “Save” button to apply it to the selected request or response.

Apply to

Request: Check a box in here to select a request (or multiple requests) to which you wish to apply a custom header.

Select All: Selects all the request messages to apply the custom header.

Clear All: Removes the custom headers from all of the request messages.

Response: Check a box in here to select a response (or multiple responses) to which you wish to apply a custom header.

Select All: Selects all the response messages to apply the custom header.

Clear All: Removes the custom headers from all of the response messages.

Enabled: Shows the list of the custom headers available for the selected request(s) or response(s). It also allows you to enable and disable specific headers.

Edit: Allows you to alter the header you have selected.


Replicate: Copies the selected header and pastes it at the end of the list.

Remove: Removes the selected header from the list.

Move Up: Moves the header up in the list, which is the order it will also be displayed when triggered.

Move Down: Moves the header down in the list, which is the order it will also be displayed when triggered.

Reports Options

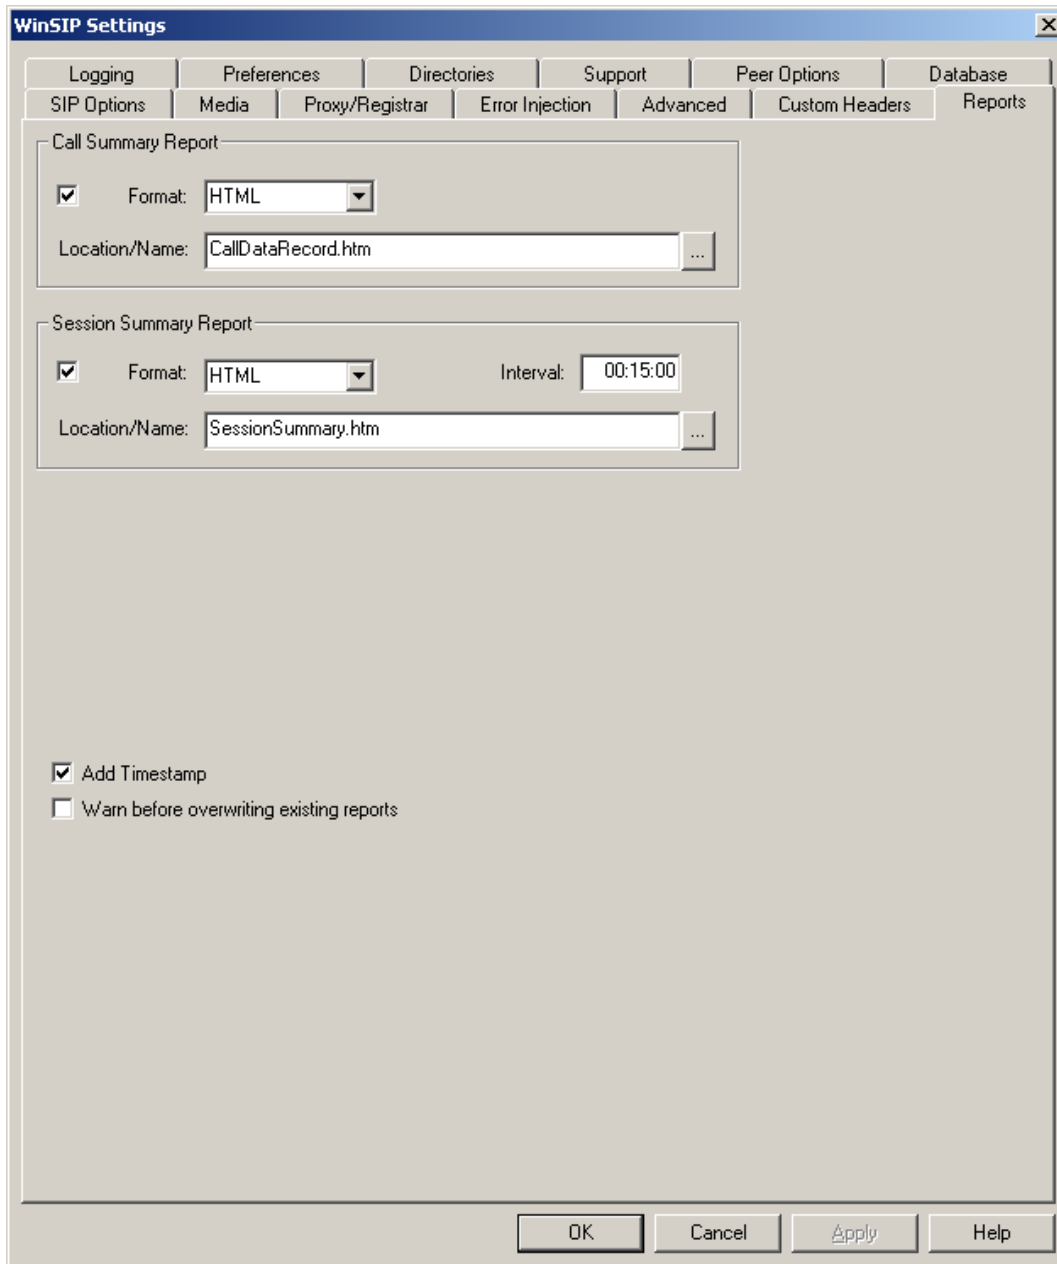

The image shows the 'WinSIP Settings' dialog box with the 'Reports' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with the following tabs: Logging, Preferences, Directories, Support, Peer Options, Database, SIP Options, Media, Proxy/Registrar, Error Injection, Advanced, Custom Headers, and Reports. The 'Reports' tab is active and contains two main sections: 'Call Summary Report' and 'Session Summary Report'. Each section has a checked checkbox for enabling reports, a 'Format' dropdown menu set to 'HTML', and a 'Location/Name' text field with a browse button (...). The 'Call Summary Report' section has a 'Location/Name' field containing 'CallDataRecord.htm'. The 'Session Summary Report' section has an 'Interval' text field set to '00:15:00' and a 'Location/Name' field containing 'SessionSummary.htm'. At the bottom of the dialog, there are four buttons: 'OK', 'Cancel', 'Apply', and 'Help'. Additionally, there are two checkboxes at the bottom left: 'Add Timestamp' (checked) and 'Warn before overwriting existing reports' (unchecked).

WinSIP Settings

Logging Preferences Directories Support Peer Options Database
SIP Options Media Proxy/Registrar Error Injection Advanced Custom Headers Reports

Call Summary Report

☒ Format: HTML Location/Name: CallDataRecord.htm ...

Session Summary Report

☒ Format: HTML Interval: 00:15:00 Location/Name: SessionSummary.htm ...

☒ Add Timestamp
☐ Warn before overwriting existing reports

OK Cancel Apply Help

The fields included are:

Call Summary Report

This report contains detailed call metrics including IDs, addresses, call metrics, media metrics, durations and intervals similar to a CDR report

Format: Selects the format in which the report will be written (HTML, ASCII, or Tab Delimited).

Location/Name: The location and name of the file in which the report should be saved.

Session Summary Report

This report contains “snapshots” of the WinSIP system during tests.

Format: Selects the format in which the report will be written (HTML, ASCII, or Tab Delimited).

Interval: The interval at which the session “snapshots” should be recorded


Location/Name: The location and name of the file in which the report should be saved.

Add Timestamp: This option allows you to add a timestamp at the end of the file name. With this option each saved file will be unique.

Warn before overwriting existing reports: If checked, notifies the user if two files share the same name and asks whether they wish to overwrite it or not.

Logging Options

Use this command to view or change the global logging settings. The following dialog will appear:

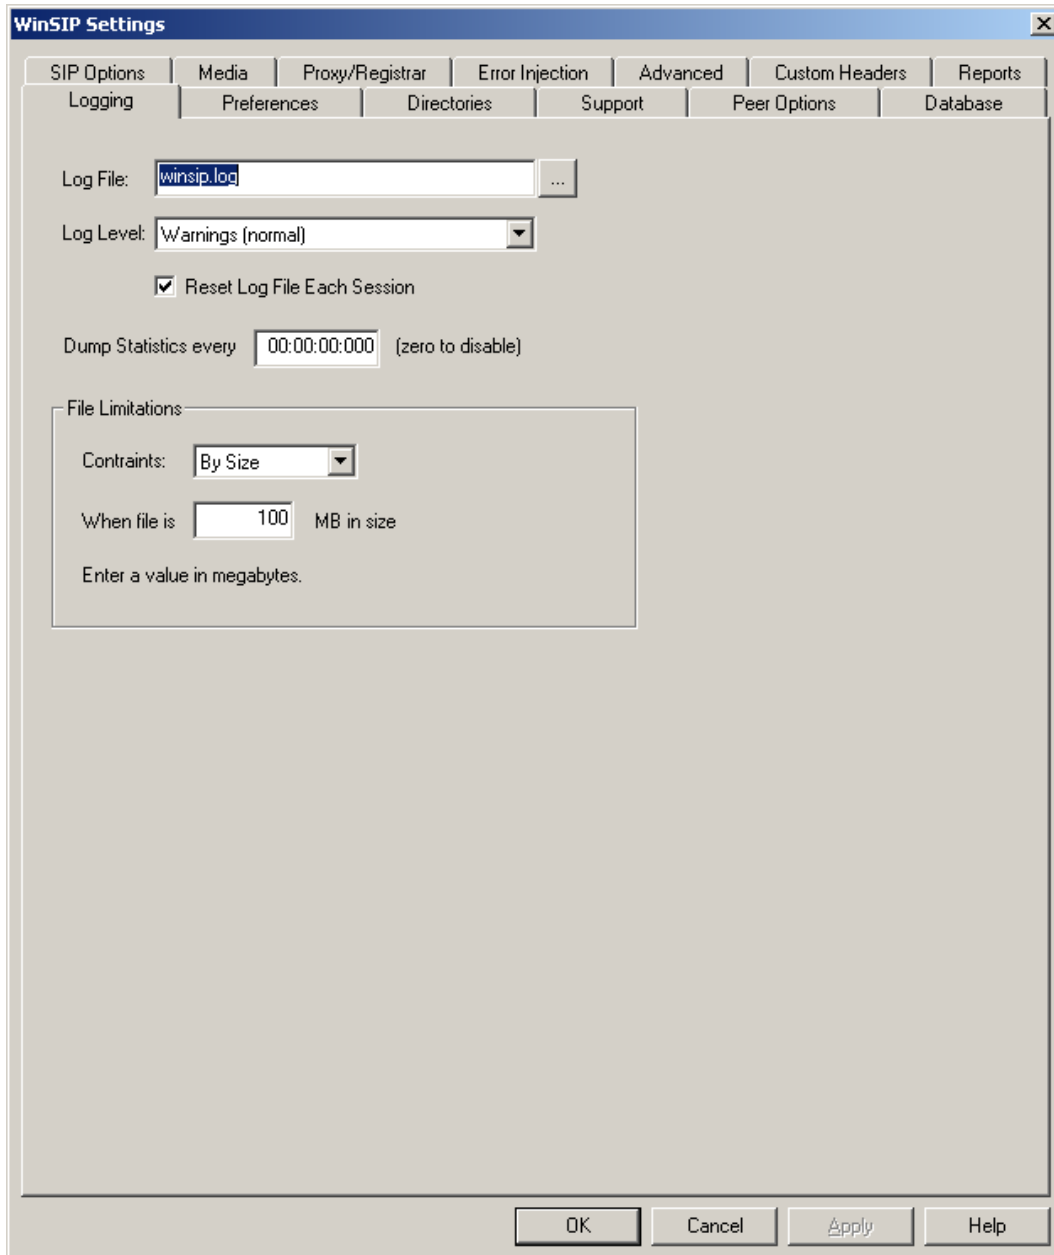

The fields included are:

Log File

This field represents the name and location of the current log file. If there is no path specified, the log file resides in the WinSIP install directory (the same directory as the WinSIP.exe file). The button to the right of the field provides browse capabilities.

Log Level

This field represents the level at which logging will occur during the operation of the application. The following levels are available:

All: This option logs everything. It will generate a very large amount of information and should not be used when running at high call rates or over extended periods of time due to negative performance impact and disk space requirements.

Trace: This option generates messages for the following levels: Trace, Debug, Information, Warnings and Errors. Use this option for debugging WinSIP when looking for a known application error. It generates a very large amount of information and should not be used when running at high call rates or over extended periods of time due to negative performance impact and disk space requirements.

Debug: This option generates messages for the following levels: Debug, Information, Warnings and Errors. Use this option for debugging WinSIP when looking for possible application error. It generates a large amount of information and should not be used when running at high call rates or over extended periods of time due to negative performance impact and disk space requirements.

Information: This option generates messages for the following levels: Information, Warnings and Errors. Use this option for debugging problems that may be due to error conditions on the remote connection. It generates information on connections, request and responses for each call. This mode may be run at high call rates or over extended periods of time.

Warnings: This option generates messages for the following levels: Warnings and Errors. Use this option for normal testing.

Errors: This option generates error messages only. Use this option to minimize the size of the log file.

None: Use this option to turn off logging. Note: the session start and end markers are still logged even with this option.

Reset log file each session: This option clears the log file upon re-starting WinSIP if the previous instance had exited normally. In the event of an abnormal termination, the previous instances log file contents will be preserved.

Dump Statistics every

This option dumps a snapshot of the session statistics every (n) seconds. This timer is only in effect when there is an active session.

File Limitations

Constraints: Defines how the logs are saved and when a new log is created. Can be set to a set interval of time, specific time of day, specific size of the log file, or does not need to be constrained at all.

Preferences Options

Use this command to view or change the global personal preferences settings. The following dialog will appear:

The WinSIP Settings dialog box is shown with the 'Preferences' tab selected. The dialog has a title bar 'WinSIP Settings' and a close button. The tabs are: SIP Options, Media, Proxy/Registrar, Error Injection, Advanced, Custom Headers, Reports, Logging, Preferences (selected), Directories, Support, Peer Options, and Database.

Protocol

- ☒ UDP
 - ☒ Use Unique Sending Ports: 20000 (initial)
 - ☐ Use Fixed Sending Port: 5060 (port)
- ☐ TCP/IP

Delay between TCP/IP connects: 0

Retransmission Times (t1 in milliseconds)

1 - 249 Calls:	500	1,000 - 2,499 Calls:	8000
250 - 499 Calls:	2000	2,500 - 4,999 Calls:	16000
500 - 999 Calls:	4000	5,000+ Calls:	32000

System

Internet Browser: c:\Program Files\Internet Explorer\iexplore.exe ...

Call Analysis

- ☒ Trace All Calls
- ☒ Trace Error Calls
- ☒ Display New Calls

Calculate Calls Rates

- ☒ Per Hour
- ☐ Per Second

Automata

- ☒ Perform Validity Check Before Starting Session

Multi-Line Emulation

- ☐ Enabled

Error Options

- ☒ Busy Here And Cancel as Errors

Ramp Up Calls Options

- ☐ Enabled

Auto View Switching

- ☒ Switch From Main View To Detail View On Start Calls
- ☒ Switch From Edit View To Detail View On Start Calls

Buttons: OK, Cancel, Apply, Help

The fields included are:

Protocol

UDP: Select either UDP or TCP/IP for SIP signaling.

Use Unique Sending Ports: This option allows the signaling message from a unique port for each call.

Use Fixed Sending Port: This option allows the signaling message from a fixed port for all the calls.

TCP/IP: Select either UDP or TCP/IP for SIP signaling.

Use Fixed Sending Port: This option allows the signaling message from a fixed port for all the calls.

Delay between TCP/IP connects: Specifies the time to delay between TCP/IP connections at startup. Some applications cannot handle a burst of connection attempts. Use this field to specify how long to wait between connections.

Use Unique Sending Ports: This option allows the signaling message from a unique port for each call.

Use Fixed Sending Port: This option allows the signaling message from a fixed port for all the calls.

Retransmission Times (t1 in milliseconds)

This option allows you to specify the t1 value for six different ranges of concurrent call activity. Higher activity may require a longer period between retries.

System

Internet Browser: The location and name of the browser used to view HTML formatted files.

Call Analysis

Trace All Calls: Automatically traces all active calls for the duration of the session. Use this option to capture all call traces during a session.

Trace Error Calls: If any results in an error, checking this option will cause the call trace of that call to be saved.

Display New Calls: Enables/disables displaying of calls on the detail view in 'New Call' mode.

Calculate Call Rates

This setting specifies whether to calculate call rates on a per-hour or per-second basis.

Automata

Perform Validity Check Before Starting Session: This option will perform a validity check and will report if any call is duplicated with same name, local ID etc. before starting the session

Multi-Line Emulation

Enable: Check box to enable multi line emulation or leave unchecked for disabled.

Error Options

Busy Here and Cancel as Errors: Allows the user to specify whether he/she considers Busy and Cancelled calls errors or not.


Auto View Switching

Switch from Main View to Detail View on Start Calls: This option automatically switches from the main view to the detail view when calls are started.

Switch from Edit View to Detail View on Start Calls: This option automatically switches from the edit view to the detail view when calls are started.

Directories Options

Use this command to view or change the global directories settings. The following dialog will appear:

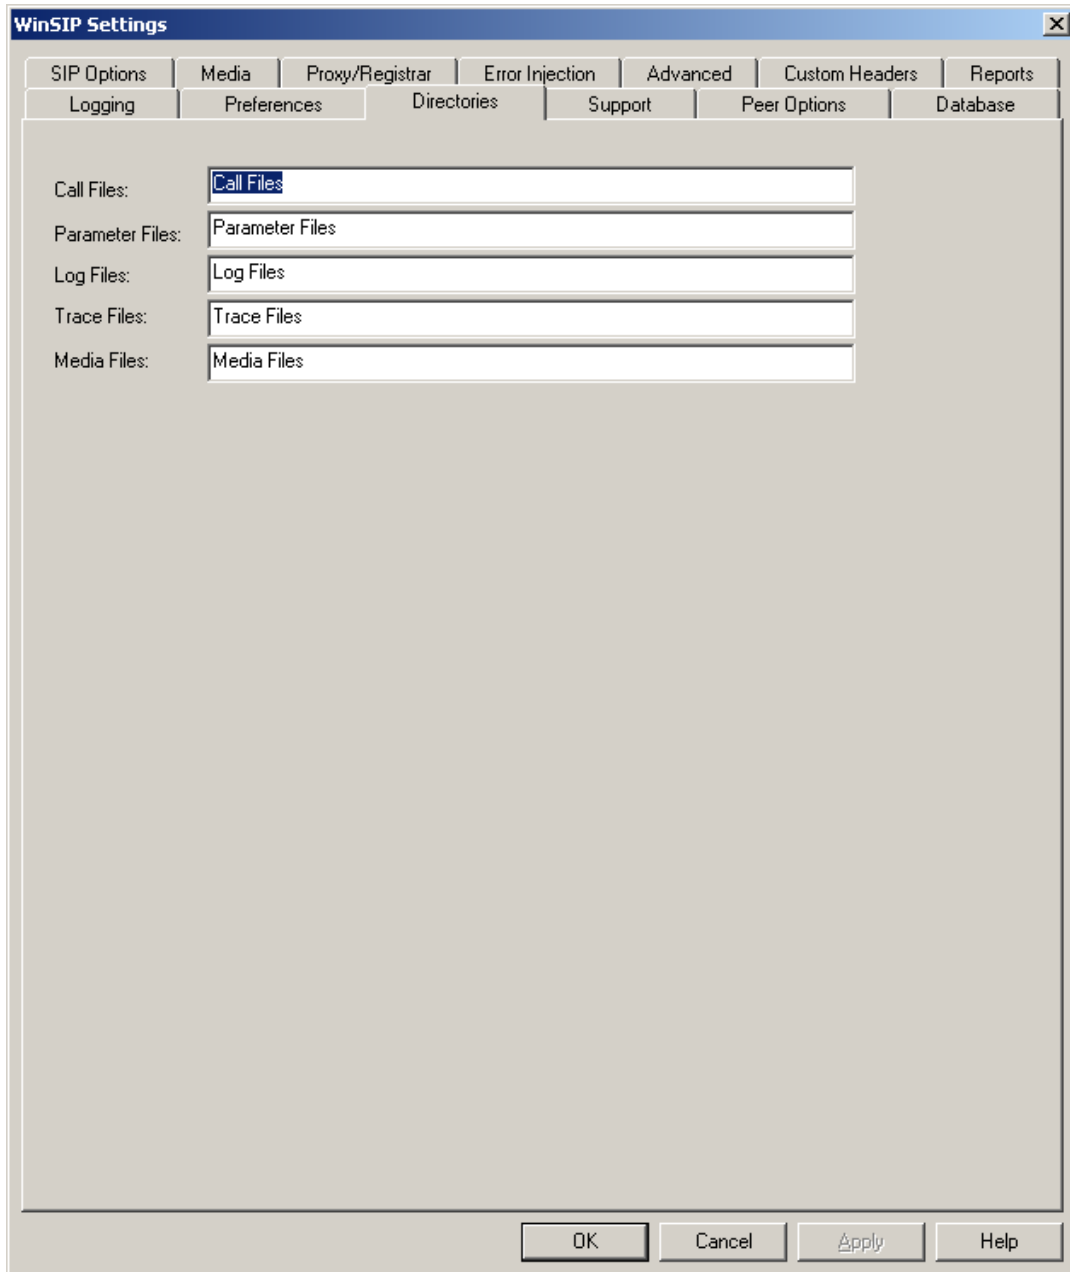

The fields included are:

Call Files: Specifies the default directory for call files.


Parameter Files: Specifies the default directory for parameter files.

Log Files: Specifies the default directory for log files.

Trace Files: Specifies the default directory for trace files.

Media Files: Specifies the default directory for media files.

Support Options

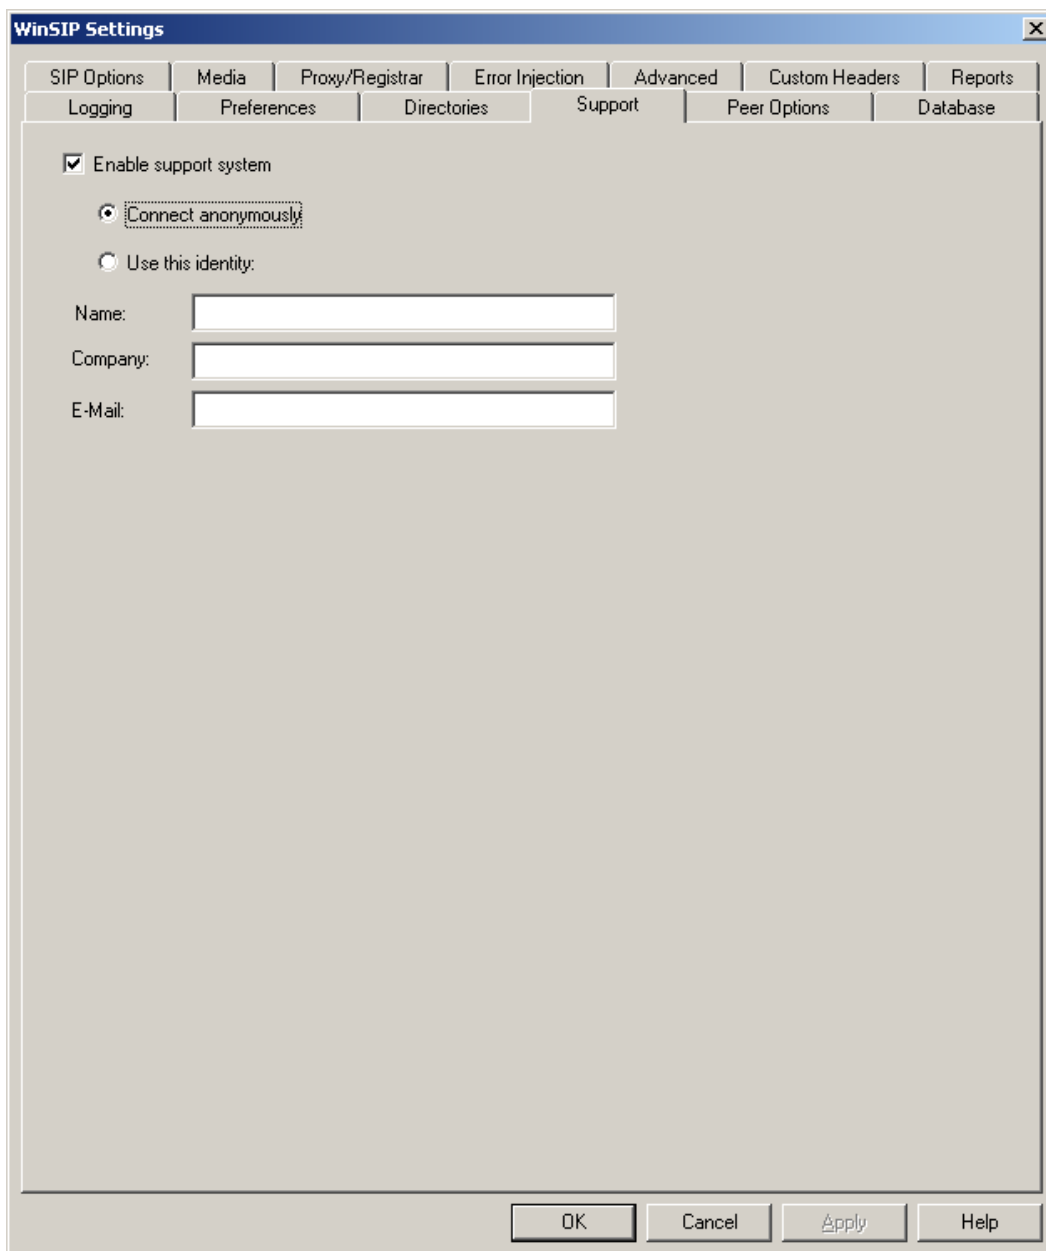

The image shows the 'WinSIP Settings' dialog box with the 'Support' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with the following tabs: SIP Options, Media, Proxy/Registrar, Error Injection, Advanced, Custom Headers, Reports, Logging, Preferences, Directories, Support (selected), Peer Options, and Database. The 'Support' tab contains the following options:

- ☒ Enable support system
 - ☒ Connect anonymously
 - ☐ Use this identity:
 - Name:
 - Company:
 - E-Mail:

At the bottom of the dialog are four buttons: OK, Cancel, Apply, and Help.

The fields included are:

Enable support system: With this option enabled, you can contact support with any questions along with sending files to support with the touch of a button.

Connect anonymously: This option allow you to contact support anonymously.


Use this identity: This option allows you give your identity to support.

Name: Provides a text box to enter your contact name.

Company: Provides a text box to enter your company name.

E-Mail: Provides a text box to enter your email address.

Peer Options

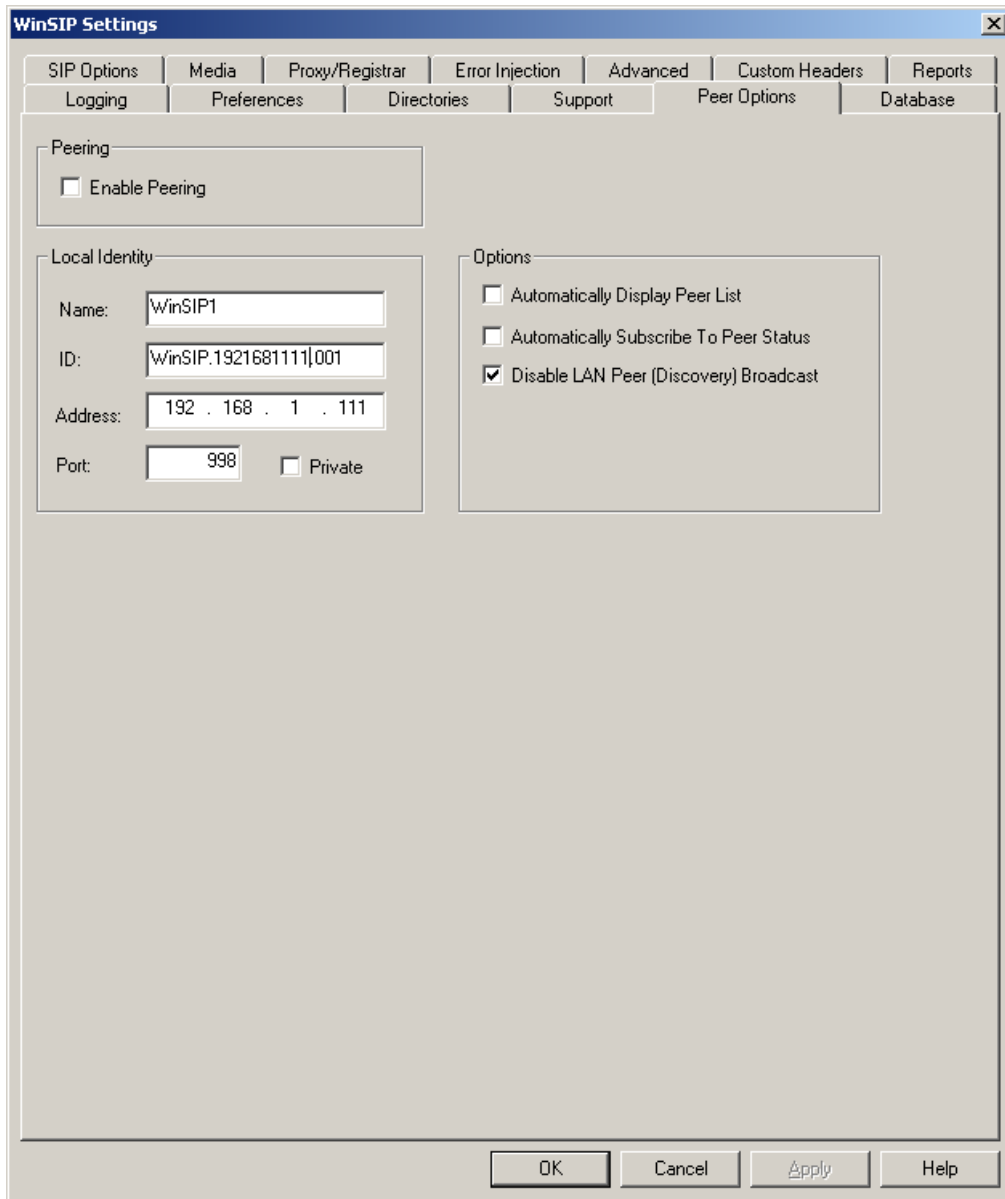

The image shows the 'WinSIP Settings' dialog box with the 'Peer Options' tab selected. The dialog has a title bar with a close button. Below the title bar is a tabbed interface with the following tabs: SIP Options, Media, Proxy/Registrar, Error Injection, Advanced, Custom Headers, Reports, Logging, Preferences, Directories, Support, Peer Options (selected), and Database. The 'Peer Options' tab contains three main sections: 'Peering', 'Local Identity', and 'Options'. The 'Peering' section has a checkbox for 'Enable Peering'. The 'Local Identity' section has text boxes for 'Name' (WinSIP1), 'ID' (WinSIP.1921681111|001), 'Address' (192 . 168 . 1 . 111), and 'Port' (998), along with a 'Private' checkbox. The 'Options' section has three checkboxes: 'Automatically Display Peer List', 'Automatically Subscribe To Peer Status', and 'Disable LAN Peer (Discovery) Broadcast' (which is checked). At the bottom of the dialog are buttons for 'OK', 'Cancel', 'Apply', and 'Help'.

WinSIP Settings

SIP Options | Media | Proxy/Registrar | Error Injection | Advanced | Custom Headers | Reports
Logging | Preferences | Directories | Support | **Peer Options** | Database

Peering

☐ Enable Peering

Local Identity

Name: WinSIP1
ID: WinSIP.1921681111|001
Address: 192 . 168 . 1 . 111
Port: 998 ☐ Private

Options

☐ Automatically Display Peer List
☐ Automatically Subscribe To Peer Status
☒ Disable LAN Peer (Discovery) Broadcast

OK Cancel Apply Help

Local Identity

Name: The display name (caller id) of this peer.

ID: The globally unique realm identifier of this peer.

Address: The IP address on which this peer communicates.

Port: The port on which this peer communicates.

Private: Disables "public" mode (advertises or responds to public broadcast queries).


Options

Automatically Display Peer List: Enables the displaying of the peer list when one or more peers are detected. This also enables status pop-up mode when certain events occur (e.g. when a new peer joins, when a notifying peer leaves, etc.).

Automatically Subscribe to Peer List: Automatically subscribes to status events for all peers.

Disable LAN Peer (Discovery) Broadcast: Disables the LAN Peer broadcast and will not any Peer broadcast messages.

Database

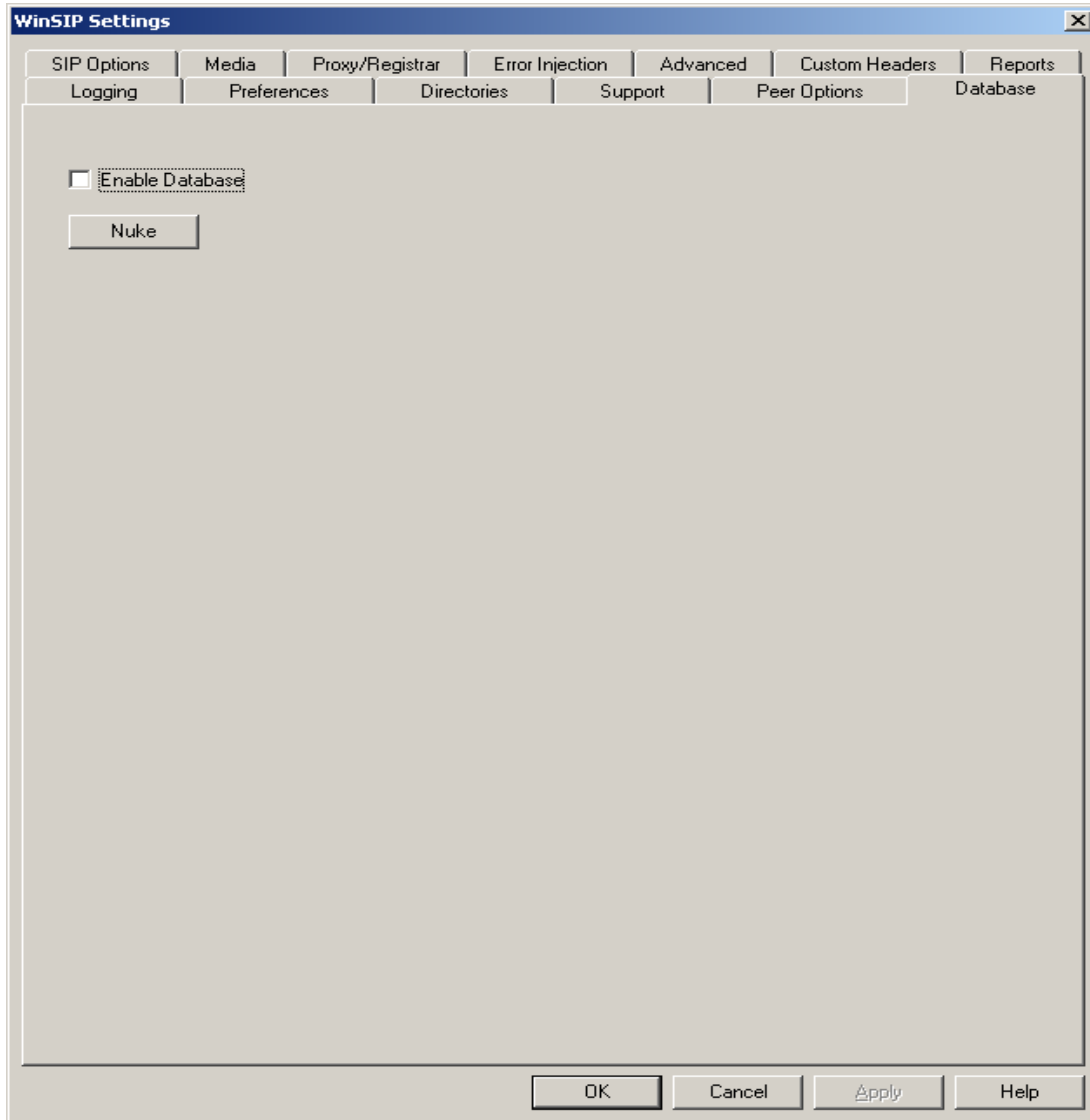

Enable Database: With this option you can enable/disable database.

Nuke: With this option you can delete all the database records. **Once the records are deleted you cannot retain the records.**

For Installing MySQL Database for WinSIP, please see Appendix D.

Peering Details

Peers window give the information regarding the peers available with in the network and information of the peered applications on the network.


[illegible]

Peer Filter

With Peer Filter option, you can set the filters according to your specific requirement or point of interest.


No Filter: With No Filters enabled, will show all the peered application on the network.

Like Types Only: This option allows you to set the particular type applications in which you are interested or want to see or get information

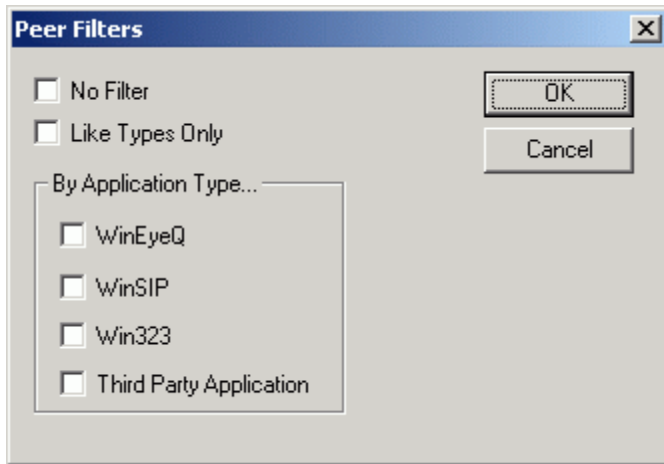

Add New

This option allows you to add a Remote Peer IP address or FQDN. After adding the remote IP address, you can check for peered application on that IP address.

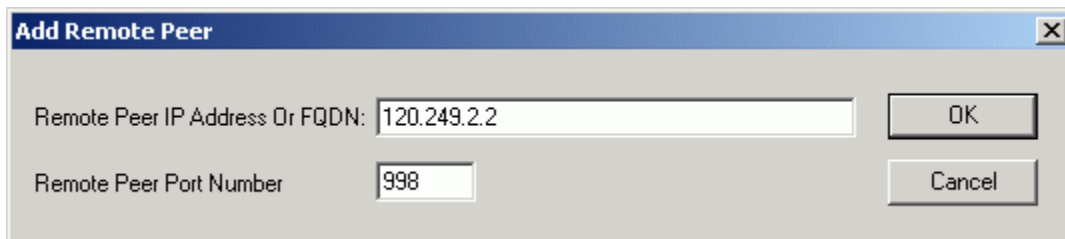


Configure

This option allows you to configure the peered application. You can configure settings like application mode, number of calls, start and stop calls.

Subscriptions

This option allows you to set the subscriptions from the remote peer application. Subscriptions are as follows, Status, Call Summary, Watch Summary, and Error Summary. You have an option to select any report/summary, according your requirements.

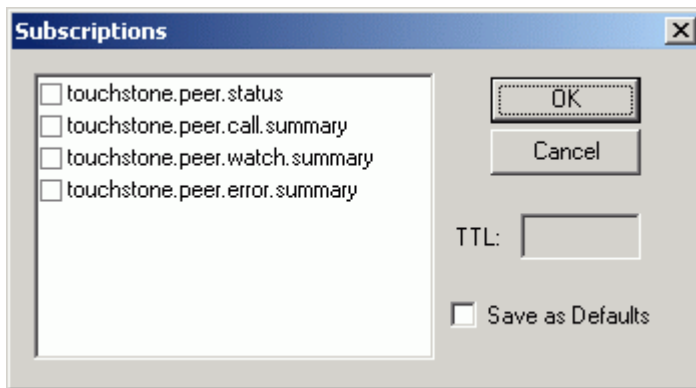


Publications

This option gives the information regarding your publications to other peered applications.

Send Message


With this option you can send a custom Instant message to the peered applications.

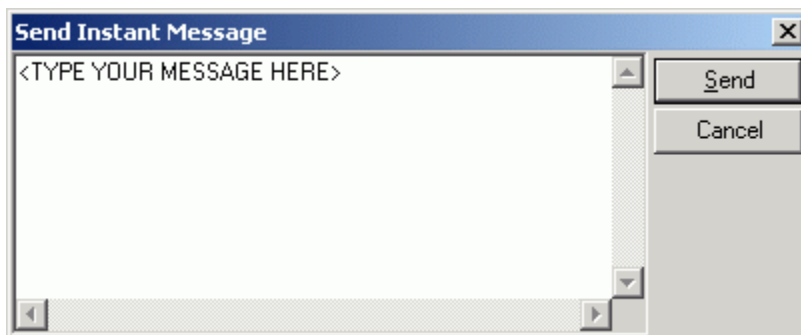

New TestML Script Wizard

With TestML Script Wizard, you can create new xml scripts with an easy step by step procedure.

TestML File Information

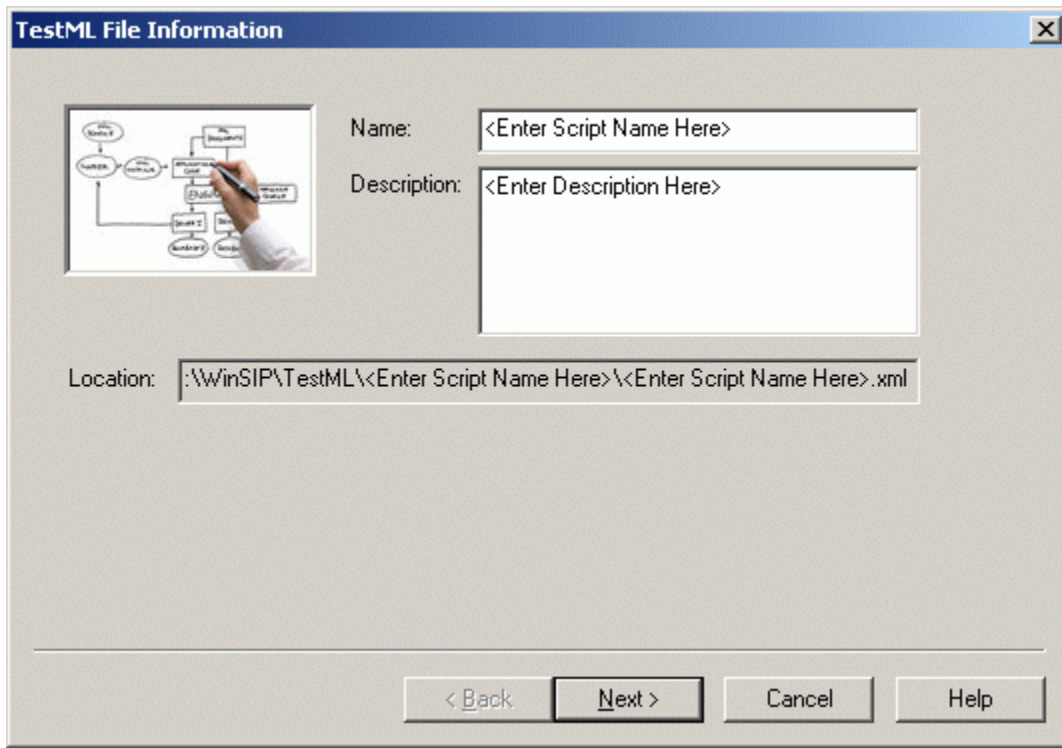


Name: This option allows you to set the filename of the new XML script.

Description: This option allows you to write the description of the new XML script.

Location: This option allows you to set the location of the new XML script to be stored.

TestML Script Preferences

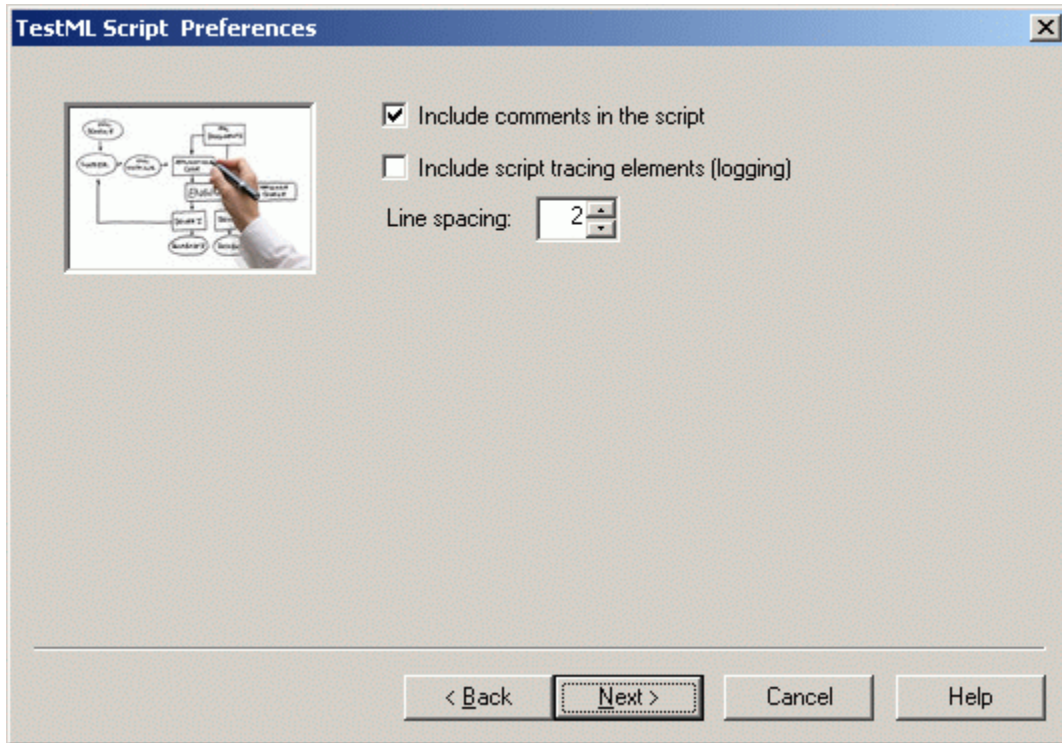


Include comments in the script: Enabling this option will put comments and information about the xml script functions.

Include script tracing elements (logging): This option will put logging information of the scripts.

Line Spacing: This option allows you to choose the spacing between lines.


TestML Script Type

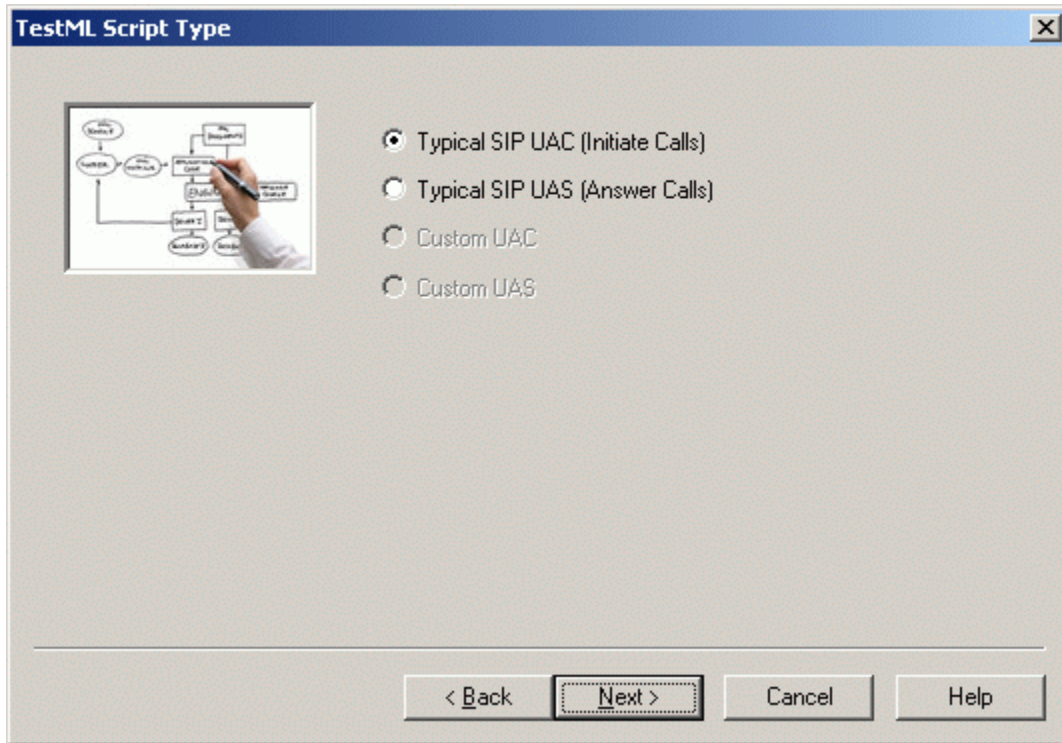

Typical SIP UAC (Initiate Calls): This option will create the XML scripts as User Agent Client or Initiator.

Typical SIP UAS (Answer Calls): This option will create the XML scripts as User Agent Server or Answerer.

TestML Script Options

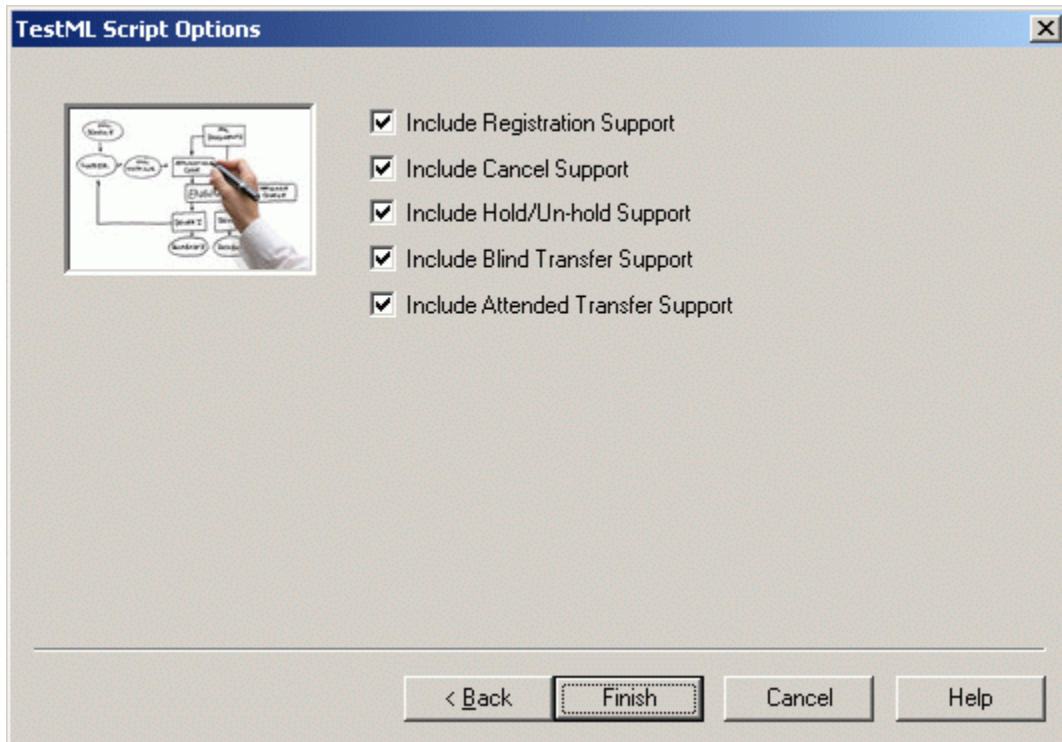

Include Registration Support: This option will create a Registration process in the XML scripts.

Include Cancel Support: This option will create a Cancel process in the XML scripts.


Include Hold/Un-hold Support: This option will create a Hold/Un-hold process in the XML scripts.

Include Blind Transfer Support: This option will create a Blind Transfer process in the XML scripts.

Include Attended Transfer Support: This option will create an Attended Transfer process in the XML scripts.

XML Script Editor

XML Script Editor: This option allows you to change or edit the current XML script. You can make the changes according to your scenario and save the changes.

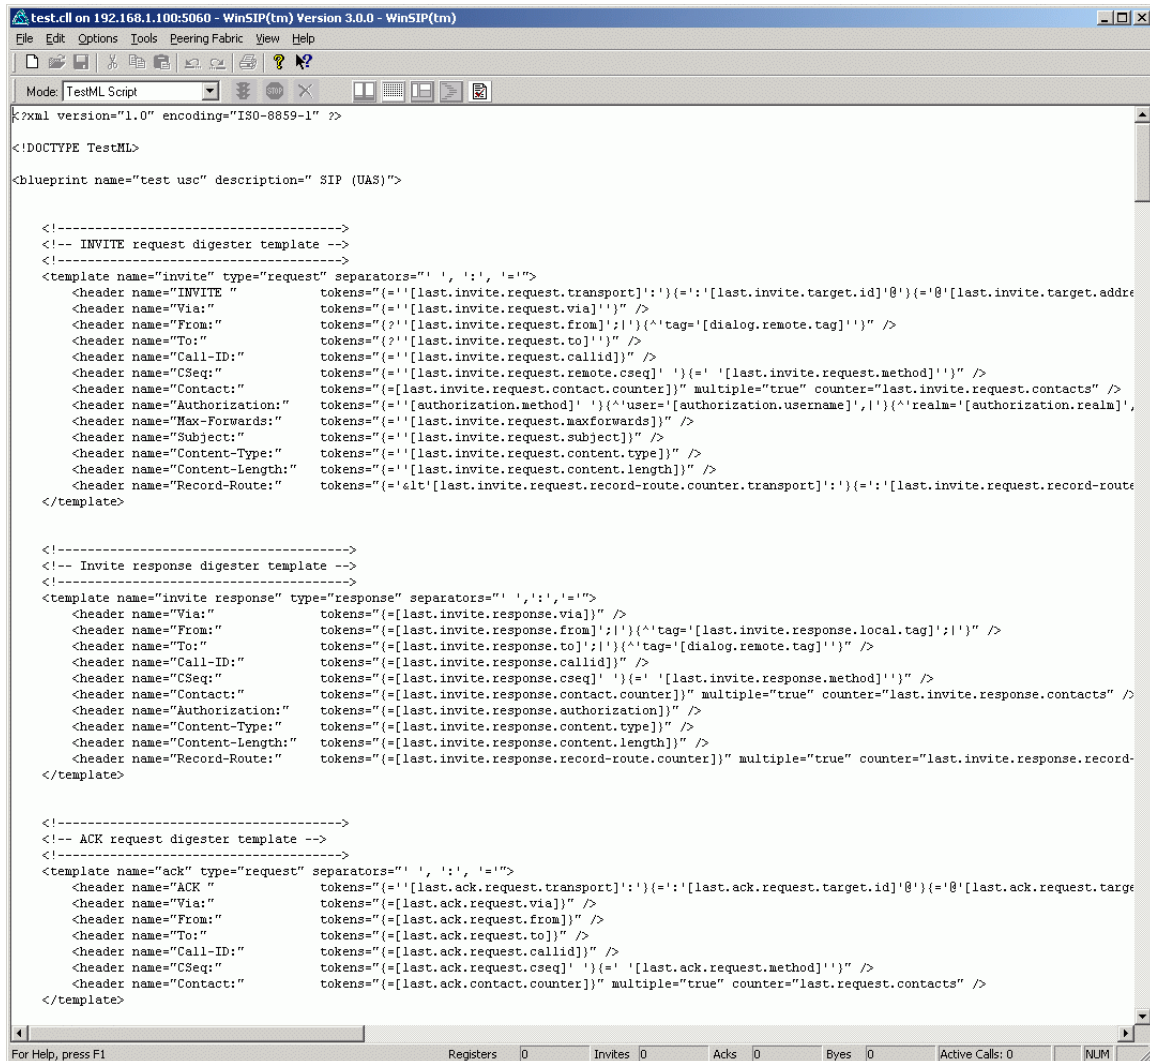

CODEC(s)

Audio

G.711 ULAW: This CODEC uses 20 frames per packet by default over a 64kb/s bandwidth connection. This delivers high quality audio packets using pulse code modulation which is compressed into 8 bit samples, converting 12 and 16 bit samples to 8 bit when necessary.

G.711 ALAW: This CODEC uses 20 frames per packet by default over a 64kb/s bandwidth connection. This delivers high quality audio packets using pulse code modulation which is compressed into 8 bit samples, converting 12 and 16 bit samples to 8 bit when necessary.

G.722 Mode 1: This CODEC uses 60 frames per packet by default over a 64kb/s bandwidth connection.

G.723.1: This CODEC uses 3 frames per packet by default over either a 5.3kb/s or a 6.3kb/s bandwidth connection. Like G.729, it too is unreliable for transmitting music, DTMF tones, or fax tones.

G.728: This CODEC uses 6 frames per packet by default over a 16kb/s bandwidth connection.

G.729: This CODEC uses 6 frames per packet by default over an 8kb/s bandwidth connection. This compresses audio samples into 10 millisecond sections.

AMR NM: This CODEC uses 4 frames by default over a 12.2kb/s bandwidth connection.

iLBC (internet Low Bitrate Codec): This codec is designed for narrow band speech and results in a payload bit rate of 13.33 kbit/s with an encoding frame length of 30 ms and 15.20 kbps with an encoding length of 20 ms.

Video

H.261: This CODEC uses 15 frames per packet by default. It was originally developed to handle ISDN transmissions, capable of handling data rates between 40kb/s and 2Mb/s. This was meant to handle transmissions whose data rates were divisible by 64kb/s.

MPEG4: This file has been recorded in a Packetized format by an answering WinSIP to an incoming call from MPEG4 device.

H.263: This CODEC uses 15 frames per packet by default. This can replace H.261 at all bitrates due to its design as an evolution of the H.261 CODEC

H.263+: This file has been recorded in a Packetized format by an answering WinSIP to an incoming call from H.263+ device.

H.264: This file has been recorded in a Packetized format by an answering WinSIP to an incoming call from H.264 device.

Create New CODEC

- 1) Please go to (Options | Settings | Media | Audio/Video Capabilities) and press "Edit Codec" option. A pop up window "Audio/Video Codec Maintenance" will open. There you can add a codec with name, codec type, sub type, and SDP attributes. Once the codec is added, please select the codec for Selected in Audio/Video Capabilities.
- 2) Then go to (Options | Settings | Advanced | Audio/Media Recording) and Check "Record Audio/Video Streams" and select Packetized format option.
- 3) Start WinSIP. Send the Audio/Video stream to WinSIP which you want to record. WinSIP will record and save the new Audio/Video stream in a Packetized format once the call is completed.
- 4) Then in WinSIP, go to (Options | Settings | Media | Audio/Video Capabilities), press "Edit Codec" option. Select the codec name in "Audio/Video Codec Definitions" and press "Edit" option. And select the saved video clip (which was recorded and saved by WinSIP) with Packetized format in Audio/video stream definition and press "Apply".

WinSIP Command Line Automation

Command Line Automation

The automation of WinSIP either from the command line, through the Windows Scheduler or via integration with test management systems.

- The ability to launch WinSIP with a particular call file using the current settings.
- The ability to launch WinSIP with a particular session file containing call file, parameter file and log file settings.
- The ability to automatically start the session.
- The ability to define the session duration.

The following section describes each of these mechanisms in detail:

When running from a command interface (Start | Run, DOS window, Window scheduler etc.) please remember that any path or file name contain spaces (blanks) must be enclosed with double quotes (e.g. c:\WinSIP\Call Files\MyCallFile.cll must be entered as "c:\WinSIP\Call Files\MyCallFile.cll" due to the space in "..\Call Files\...

To start WinSIP with a prescribed call file, simply enter the call file name on the command line:

```
c:\WinSIP\WinSIP.exe "c:\WinSIP\Call File\MyCallFile.cll"
c:\WinSIP\WinSIP.exe /Run "c:\WinSIP\Call File\MyCallFile.cll" (Automatic Start)
```

To start WinSIP with a prescribed session file simply enter use the "/cf" flag followed by the session file name on the command line:

WinSIP /cf [session file]

Both of the preceding forms load the specified files but do not automatically start the session. To automate the running of WinSIP specify /Run on the command line:

WinSIP /Run

When run in this mode, WinSIP will load the call file, select all of the calls and run the session until:

1. All of the calls stop (by running a specified number of times).
2. The user presses the stop or terminate button.

At the end of the session, the application will automatically exit.

By specifying a duration in hours, minutes and seconds, WinSIP will run the script for that period of time, stop the calls gracefully and then exit the application. For example, to run WinSIP for a four hour test, you may specify:

WinSIP /Run 04:00:00

Of course, you may specify combinations of the flags. To specify a six hour test using the session file Six Hour Test.ssn in your WinSIP directory, the command line may look something like:

c:\WinSIP\WinSIP.exe /Run 06:00:00 /cf "c:\WinSIP\Six Hour Test.ssn"

"Rolling" log files

We have also been receiving requests to add rolling log files to the call generators as well as WinEyeQ. This release of WinSIP incorporates the following new logging capabilities:

There are four types of constraints:

None: This option acts as the legacy version, placing no constraints on the log file.

By Size: This option constrains the log file based on a specified size (in megabytes).

At Interval: This option constrains the log file based on a specified time interval (in HH:MM:SS).

Time of Day: This option constrains the log file based on a specified time of day (in HH:MM:SS 24-hour format).

The initial log file will use the user-specified file name. Each successive log file will add a numeric value between the file and extension. For example, if the file name you have chosen is the default WinSIP.log, the first file would be WinSIP.log. Subsequent files would be WinSIP.001.log, WinSIP.002.log, etc.

FAQ

Q: How do I enable DTMF?

A: To enable DTMF setting, please go to (Options | Settings | Media | DTMF Events) and check Enable Events. DTMF can be sent in either one of the methods RFC 2833 (tone) or INFO method. DTMF events can be set in the call file. Open the call file in the "Edit View" and press "DTMF Events" tab, a pop window will come up. There you can fill out the events you want to send out. For example, if you want send digit "1" after 5 seconds, please put P5000;1 in the value box. You can set different DTMF events for each call also. You can either right click the call and go to properties or double click on the call and it will take you to the properties page.

Q: How many concurrent calls does the software support?

A: The performance of WinSIP depends upon hardware configurations and parameter settings like audio codec, video codec, etc. More the powerful machine more will be WinSIP's performance. Similarly you can do more number of calls with G.729 codec than G.711 codec.

Q: How do I create a Media Test file for WinSIP?

A: There are three methods to create media test files for WinSIP:

1. Extract media streams from a WinPcap file.

- From the Tools menu in WinSIP, select Import Media from Pcap trace files.
- Select the Pcap file that contains the EVRC streams, click Open, click Next.
- The next screen will display all of the RTP streams in that file. They are listed by payload type, SSRC, sending address, receiving address.
- Select the stream you want to extract and click next.
- Type in the name of the media stream you want the media to be extracted to and click save.
- Finally click Extract to generate the file.
- The file that is created will be a Touchstone packetized media file suitable for WinSIP to send.

2. Convert a wav file to a packetized EVRC media stream:

- If you have a wav file that you want to convert to a Touchstone packetized EVRC file, click the Tools menu | Convert Audio File option. This wav file must be in the 16 bit, mono, 8000 Hz PCM format.
- Enter the name of the wav file on the Input file line. The packetized file name will be automatically generated.
- Click the Wav To Packetized EVRC button.

- The file that is created will be a Touchstone packetized media file suitable for WinSIP to send.
3. Capture Incoming media streams from WinSIP:
- Click the Options menu | Settings option. Click on the Advanced tab.
 - Check Record Audio Streams and select Packetized Format.
 - Start WinSIP.
 - When a call is made to WinSIP, it will save the input audio stream in the WinSIP folder.
 - The file that is created will be a Touchstone packetized media file suitable for WinSIP to send.

Q: How do I add a new Audio or Video codec to WinSIP?

A: For recording and adding Audio/Video codec, please follow the procedure as given below

- 1) Please go to (Options || Settings || Media || Audio/Video Capabilities) and press "Edit Codec" option. A pop up window "Audio/Video Codec Maintenance" will open. There you can add the codec name, codec type, sub type, and SDP attributes. Once the codec is added, please select the codec under the Audio/Video Capabilities on the Media settings tab.
- 2) Then go to (Options || Settings || Advanced || Audio/Media Recording) and Check "Record Audio/Video Streams" and select "Packetized" format option.
- 3) Start WinSIP, place a call to WinSIP and send the desired Audio/Video stream to WinSIP. WinSIP will record and save the new Audio/Video stream in a Packetized format once the call is completed.
- 4) Then in WinSIP, go to (Options || Settings || Media || Audio/Video Capabilities), press "Edit Codec" option. Select the codec name in "Audio/Video Codec Definitions" and press "Edit" option. Press "Playlist" option and select the saved Audio/video clip (which was recorded and saved by WinSIP) with Packetized format in Audio/Video stream definition and press "Apply".

Q: While testing with a Proxy some of the calls did not terminate correctly.

A: Please check the value for "Duration" on both the Initiate and Answer side and verify they are not set to the same value. Both sides will send the BYE at same time and this will introduce a race condition. One side will get call completed and other side will wait and timeout and lot of error will be logged. Please set either Initiator as terminator or answer side as terminator. The other option is you can set different duration on both sides.

Q: If you see lot of retransmits of Invite request or Register request messages.

A: For Invite messages, if you keep some value (like 20) in "Maximum Call Start/Stop Rate", it will reduce the number of retransmits. You can find "Maximum Call Start/Stop Rate" at (Options || Settings... || SIP Options || Call Start/Stop Limits). For Register messages, you can put a value in "Register/Un-Register Delay". You can "Register/Un-Register Delay" at (Options || Settings... || Registration Options).

Q: While testing with a Proxy the calls do not unregister when clicking on the stop button.

A: If you hit the stop button twice its equivalent to clicking on the terminate button. The calls terminate right away and the calls will not unregister.

Q: While running a test, the CPU Usage is very high.

A: The hardware you are running the test with has reached its limit. There are several things you can do to minimize the CPU Usage.

1. If you keep some value (i.e. 20) in "Maximum Call Start/Stop Rate", it will reduce the no of retransmits. You can find "Maximum Call Start/Stop Rate" at (Options | Settings... | SIP Options | Call Start/Stop Limits).
2. If you are running with receive on all channels reducing the number of receiving channels.
3. Reducing the number of calls running.
4. Please uncheck "Record Audio/Video in Packetized" option while running calls in repeating mode.

Q: During a call WinSIP detected a latency value between 18.5 and 21.0 ms, this value seems high, is this correct?

A: "Latency" can also be thought of as "inter-packet interval". This looks like a typical G.711 stream at 20 ms framing. Therefore, using the input values of 18.50 and 21.0 as two inter-packet intervals, you would attain a resultant jitter of around 1.25 ms, which is in the excellent range.

Q: How do I use XML Templates?

A:

1. In Edit View, Please find User Field 1, User Field 2, etc. and please select the User Field X (X = User Field number) and add your custom field.
2. Please open WinSIP.xml from WinSIP folder in notepad or any xml editor. Please add [input.user.field.X] where you want to add your custom field.

For example, if you want to add a custom field in contact line of Invite message, as shown below

```

INVITE sip:20000@120.249.0.138:5060;transport=TCP SIP/2.0
Via: SIP/2.0/TCP
120.249.0.148:5060;branch=z9hG4bK12e2ccc4e203787e0a8e548e4516e1
Max-Forwards: 70
From: Initiate01 <sip:10000@120.249.0.148:5060>;tag=ebea-91de-33c5-6bb3
To: Answer01 <sip:20000@120.249.0.138:5060>
User-Agent: WinSIP/2.6.0
Call-ID: 5d7c-58228234-0001-Call1
CSeq: 1 INVITE
Contact: Initiate01 <sip:10000@120.249.0.148:5060;transport=TCP>My Custom Field
Allow: INVITE,ACK,BYE,CANCEL,OPTIONS,UPDATE,REFER,SUBSCRIBE,NOTIFY,MESSAGE,INFO
Accept: application/sdp
Accept-Language: en
Content-Type: application/sdp
Content-Disposition: session
Content-Length: 187

```

Go to Edit View, Select User Field 1, and add “My Custom Field” and save it.

Then Open WinSIP.xml, and add [input.user.field.1] at the end of the contact line, like

```

INVITE sip:[input.remote.id]@[dialog.remote.request.addr]:[dialog.remote.request.port];
transport=[system.ip.protocol] SIP/2.0 [dialog.route.set]
Via:
SIP/2.0/[system.ip.protocol][input.local.address]:[input.local.port];branch=[transaction.branch]
Max-Forwards: 70
From:[input.local.name]sip:[input.local.id]@[dialog.local.aor.addr]:[dialog.local.aor.port]>;tag=[transaction.local.tag]
To: [input.remote.name]
<sip:[input.remote.id]@[dialog.remote.aor.addr]:[dialog.remote.aor.port]>
User-Agent: [system.user.agent.id]
Call-ID: [transaction.callid]
CSeq: [transaction.local.cseq] INVITE
Contact: sip:[input.local.id]@[input.local.address]:[input.local.port][input.user.field.1]
Allow: [system.transactions.supported]
Accept: application/sdp
Accept-Language: en
Content-Type: application/sdp
Content-Disposition: dialog
Content-Length: [transaction.content.length]

```


After editing and saving WinSIP.xml, Please go to (Option | Settings | Advanced | XML Templates) in WinSIP and Enable “Use XML Request Templates”.

Custom field can be added in all messages and anywhere within a particular message.

Q: I have been unable to get WinSIP working when pointing to either the Mediation server or the OCS server. It just sits at "Registering", the error log or call trace shows a (401 Unauthorized). What should I do next?

A: In our test, we talked to the Mediation Server.

The topology was as follows:

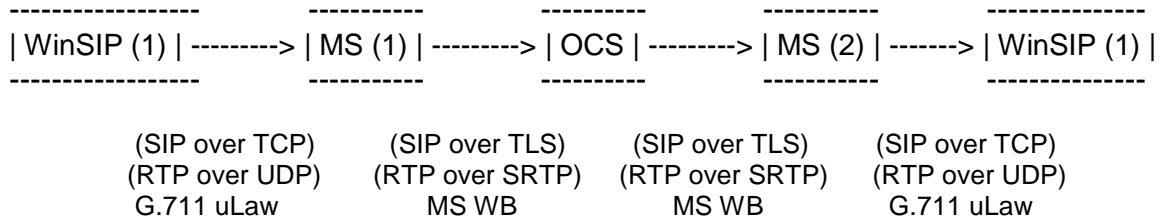

In the Microsoft world, standards-based components (e.g. WinSIP) must go through Mediation Server to access the OCS services. Only "OCS-enabled" applications can talk to the core.

The primary key is that Mediation Server only allows TCP. The WinSIP Initiator and Answerer username/password fields **must match** accounts that are provisioned in OCS. Once we configured this it worked perfectly and we were able to conclude the tests.

Appendix A

Transferring a License

The method of transferring a license is the same for all Touchstone Technologies products. For demonstration purposes WinSIP will be used to explain the license transfer procedure.

At the time of installation there are two options for licensing WinSIP. The first is to have a new key issued from Touchstone Technologies, and the second is to transfer a license from an existing WinSIP application to the newly installed version of WinSIP. Touchstone's software licenses are fully transferable from PC to PC within a customer's physical location. To transfer a license to a different location, please contact Touchstone Technologies at 267.222.8687.

A floppy diskette or USB memory device is required to transfer a license.


There are three basic steps in transferring a license:

- Initialize transfer media on the PC with newly installed WinSIP.
- Export license from the PC with the originally installed WinSIP.
- Import license to the PC with newly installed WinSIP.

Note: Touchstone Technologies licenses will have to be re-issued if:

- The original installation directory of WinSIP is:
 - Copied or moved to a new directory on the original PC.
 - Copied or moved to a different PC.
 - Renamed
- One of the hidden files (deltapts.ckn or deltapts.inf) is deleted or modified.
- The license service (crypserv.exe) is stopped or uninstalled.

After a new installation is finished and the application is run for the first time an 'Authorizing WinSIP' screen will appear, click on the 'Advanced' button, an expanded dialog will be displayed:

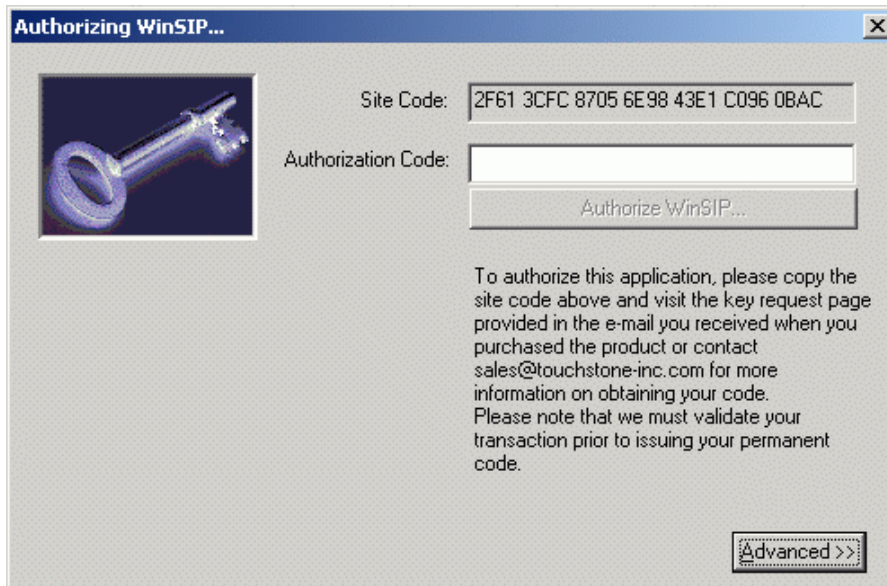

The 'Authorizing WinSIP...' dialog box features a blue title bar with a close button. On the left is an image of a key. To the right, the 'Site Code' field is populated with '2F61 3CFC 8705 6E98 43E1 C096 0BAC'. Below it, the 'Authorization Code' field is empty. An 'Authorize WinSIP...' button is positioned between the fields. A paragraph of text explains the authorization process, mentioning a key request page and contact information for Touchstone Technologies. At the bottom right is an 'Advanced >>' button.

Site Code: 2F61 3CFC 8705 6E98 43E1 C096 0BAC


Authorization Code:

Authorize WinSIP...

To authorize this application, please copy the site code above and visit the key request page provided in the e-mail you received when you purchased the product or contact sales@touchstone-inc.com for more information on obtaining your code. Please note that we must validate your transaction prior to issuing your permanent code.

Advanced >>

Press the 'Import License' button to begin the license transfer procedure.

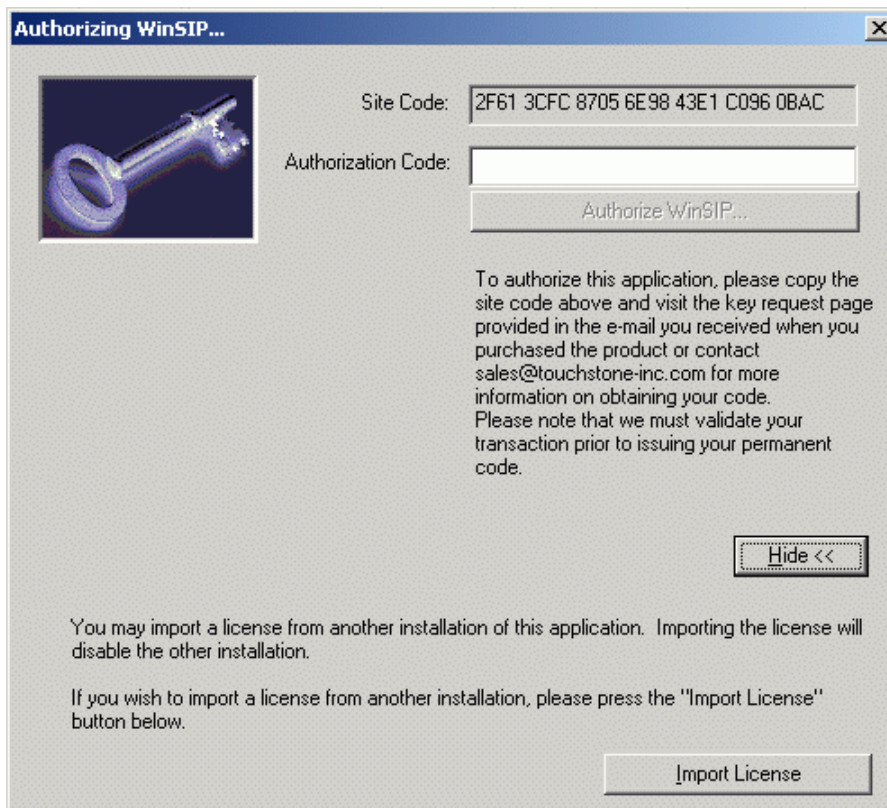

This expanded version of the 'Authorizing WinSIP...' dialog box includes the same fields and buttons as the previous one. It also features a 'Hide <<' button at the bottom right. A new section at the bottom provides instructions on how to import a license from another installation, noting that this will disable other installations. An 'Import License' button is located at the bottom right of this section.

Site Code: 2F61 3CFC 8705 6E98 43E1 C096 0BAC

Authorization Code:

Authorize WinSIP...

To authorize this application, please copy the site code above and visit the key request page provided in the e-mail you received when you purchased the product or contact sales@touchstone-inc.com for more information on obtaining your code. Please note that we must validate your transaction prior to issuing your permanent code.

Hide <<


You may import a license from another installation of this application. Importing the license will disable the other installation.

If you wish to import a license from another installation, please press the "Import License" button below.

Import License

Step One - Import License, Media Initialization

The first step of the 'Import License' transfer requires initialization of a diskette or USB device that will be used as the 'License Transfer Media'.

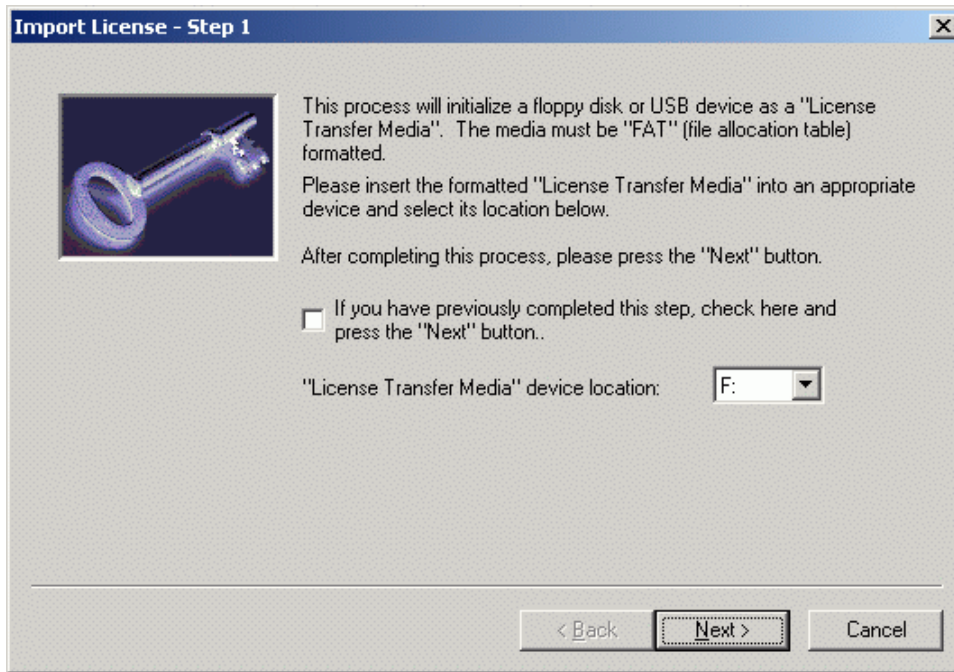


To initialize the transfer media, select the drive to be used as the transfer device, insert the transfer media and press the 'Next' button.

Note: If you have completed this step from a previous execution of WinSIP and already have the initialized transfer media, click the checkbox and then click the 'Next' button.

When step one is complete the transfer media is initialized.

The Import License step two dialog will then appear:

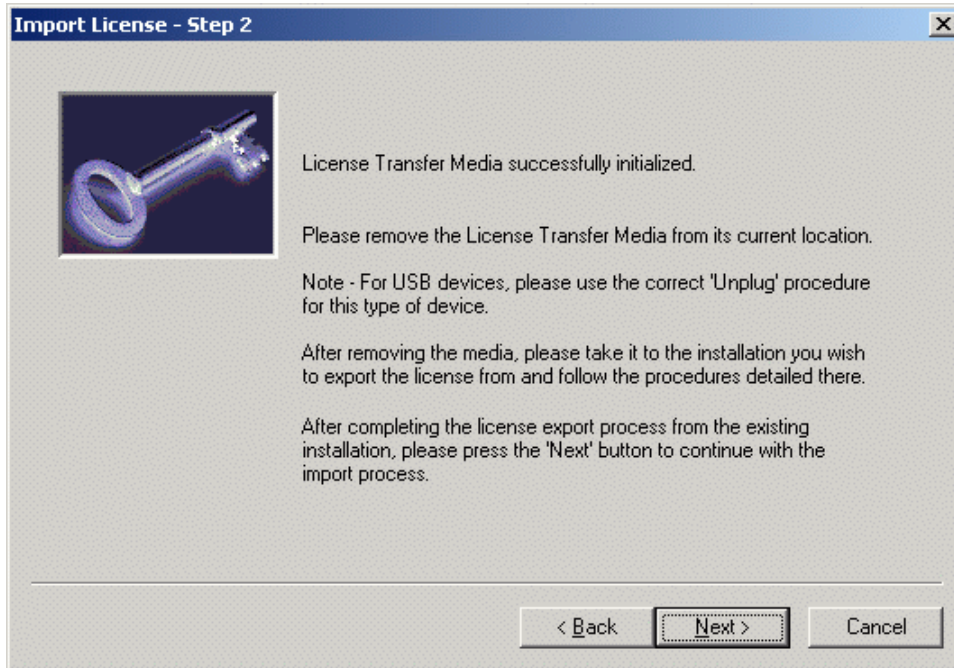


The next step is to eject or unplug the transfer media and take it to the PC that has the license you want to remove.

Note: For USB devices please follow the correct unplug procedure for your device.


Step Two - Export License

On the PC that you have selected to remove the WinSIP license, click on the 'Help' menu and then select 'Licensing Information'.

The Following dialog will appear:

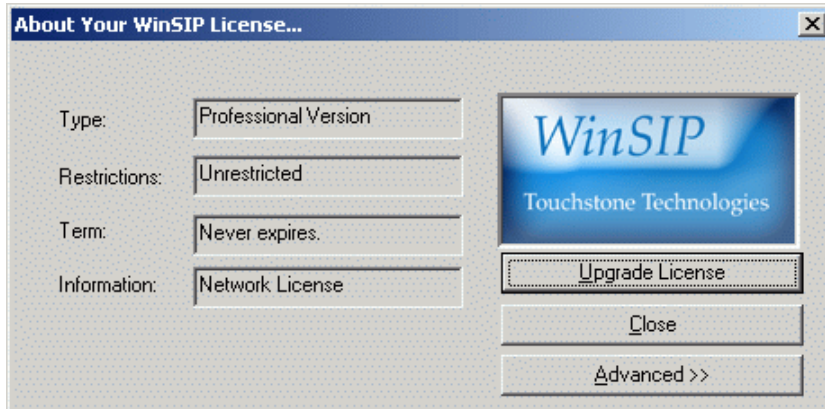


Next click on the 'Advanced' button to expand the dialog:

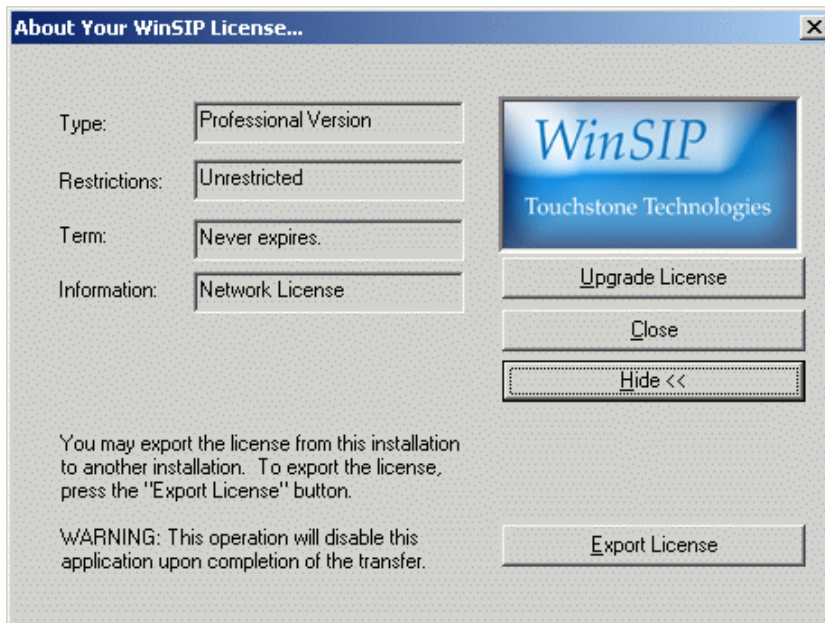

Now click on the 'Export License' button.


A warning dialog will be displayed next. This box has a warning to read the procedure carefully and that the version of WinSIP running will be disabled after the procedure is completed.

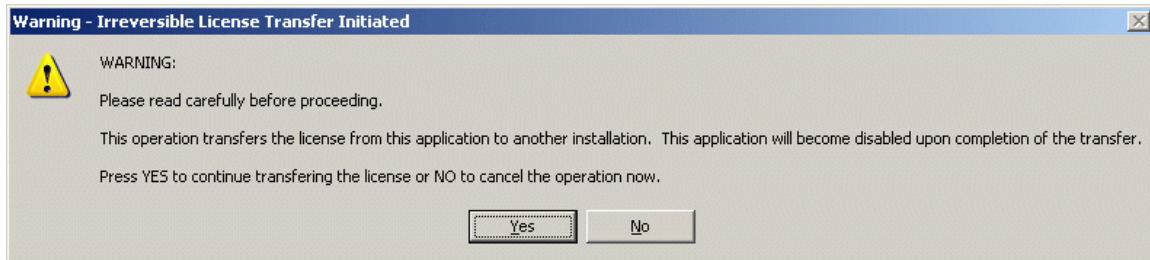

If you are certain you want to transfer this license, press 'Yes', if not, press 'No'.


The existing WinSIP application will not be uninstalled nor will any WinSIP files be removed from the WinSIP directory, the software will just be disabled. Later if you wish, you can re-enable the application with a new license from Touchstone or with a WinSIP license transferred from another PC.

Step one of the export procedure displays the following dialog:

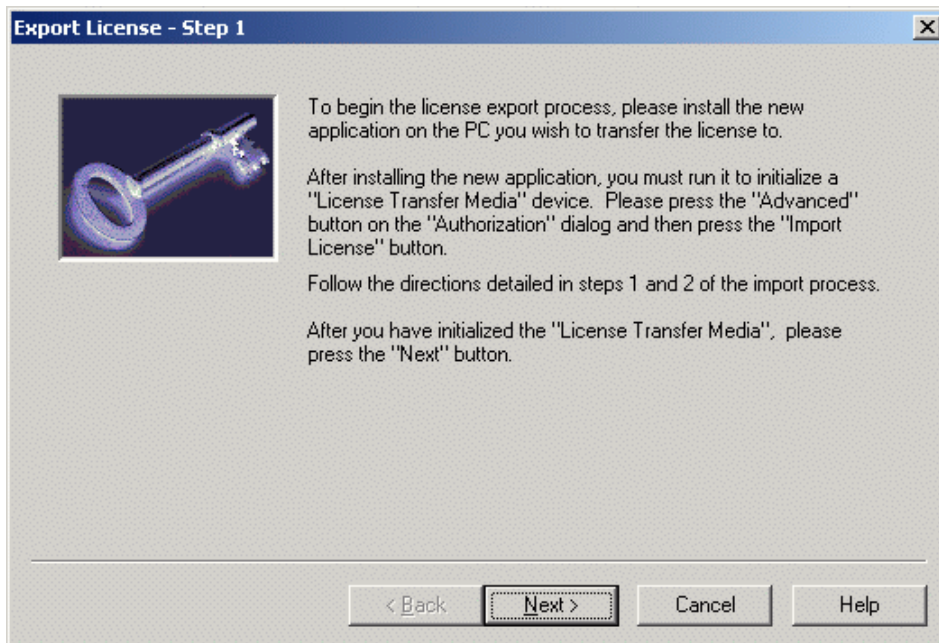


Click the 'Next' button.

Step two of the license export procedure displays the following dialog:

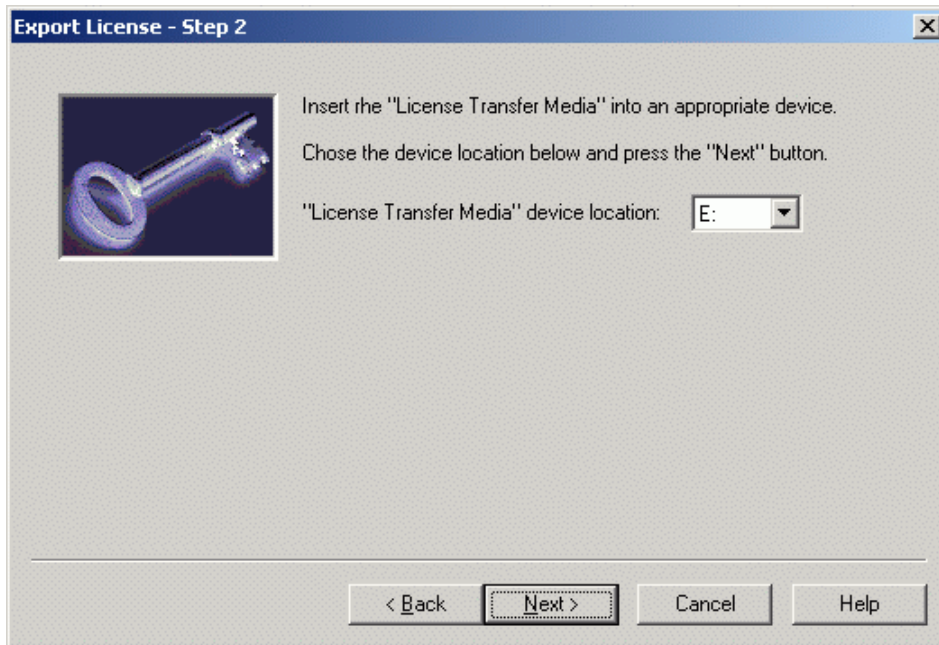

Insert the transfer media that was initialized from 'Step One - Media Initialization', select the drive to be used as the transfer device and press the 'Next' button.

When the license has been successfully exported, the following dialog will appear:

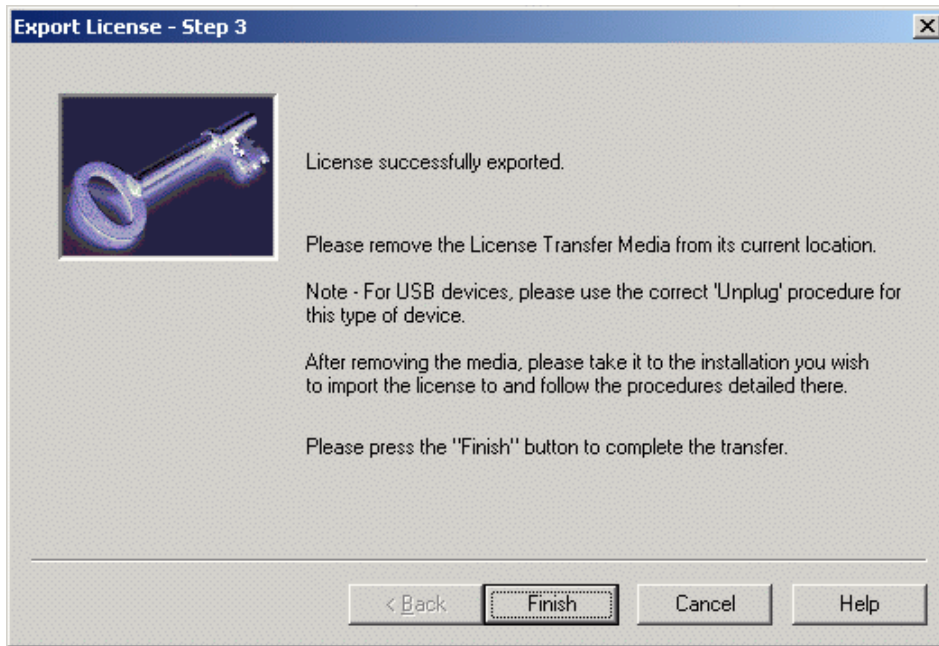


When the 'Finish' button is pressed, the application will terminate. This completes the license export.

Remove and take the 'License Transfer Media' to the newly installed WinSIP.

Note: For USB devices please follow the correct unplug procedure for your device.


Step Three - Install exported license

The PC with the newly installed version of WinSIP should still have the following screen displayed, 'Import License - Step 2':

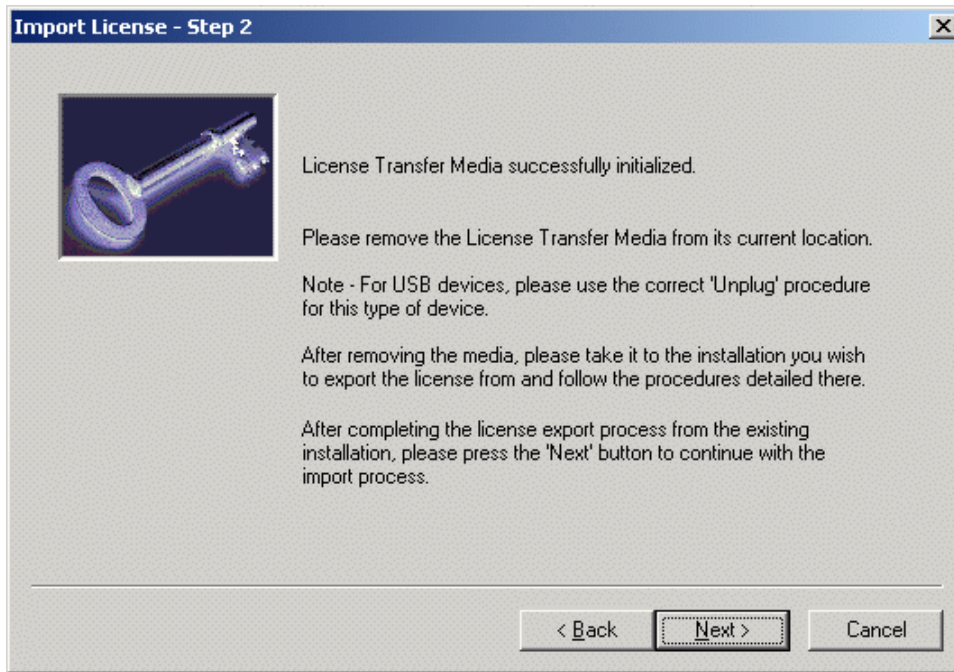


After the license export procedure is complete, and you have the exported license on the transfer media, insert the media and then press the 'Next' button.

Select the proper 'License Transfer Media':

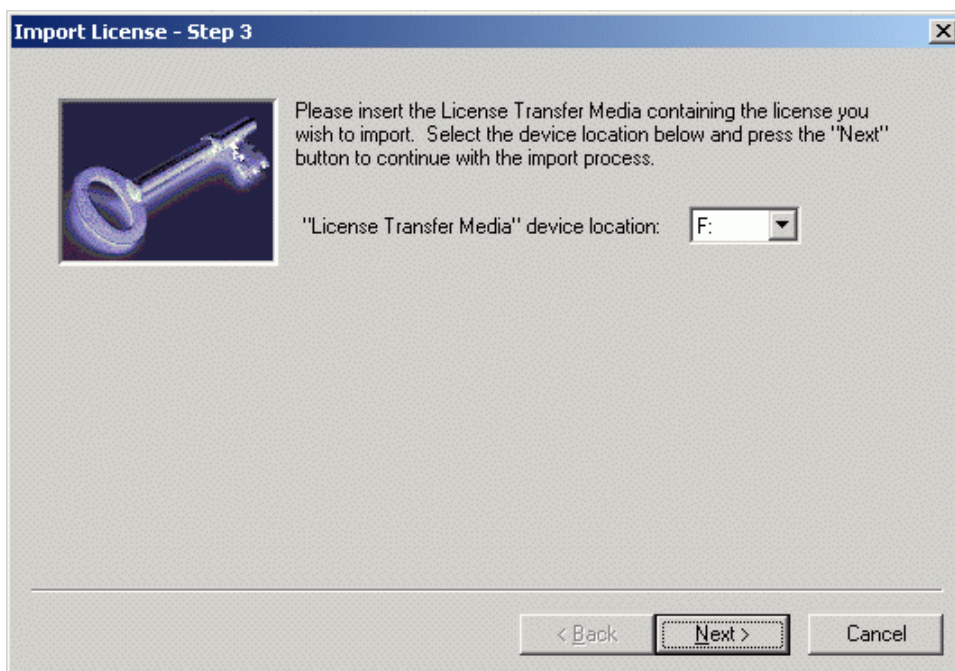

Press the 'Next' button when done.

When the license has been successfully imported, the following dialog will appear:

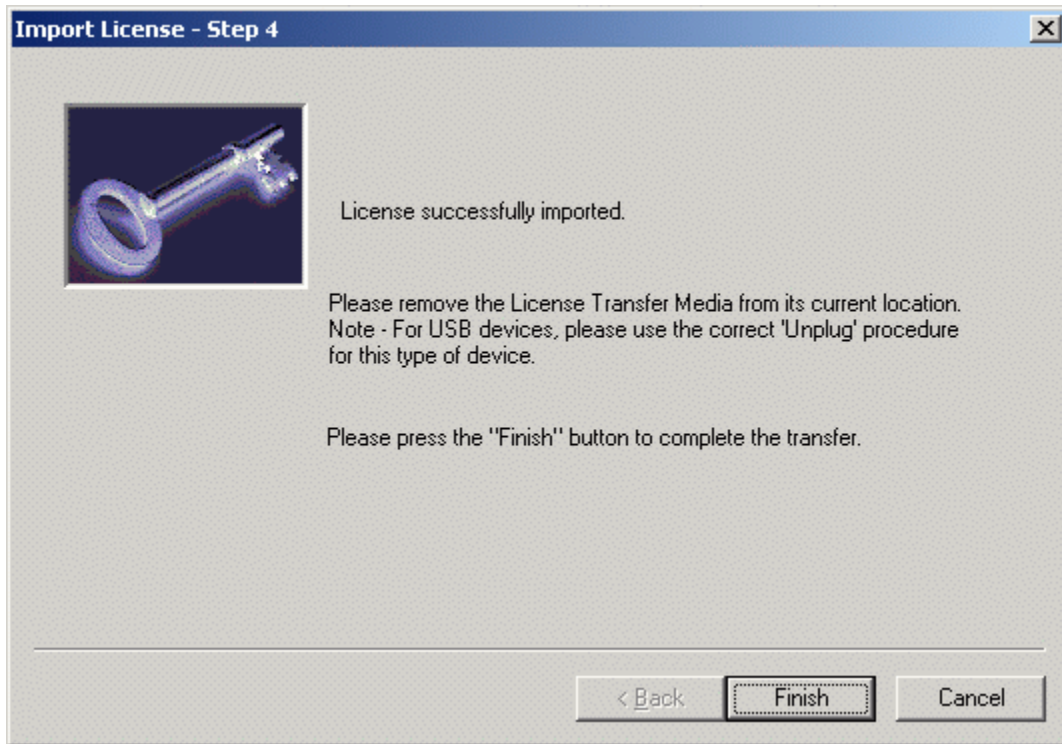

The newly installed WinSIP is now fully enabled and ready to run when you press the 'Finish' button.

License Transfer Instruction Chart

Action	New Installation	Existing Installation
1.Install New Software	<p>Select the machine on which you would like to install the new instance of the product and follow the installation instructions.</p> <p>Once installed, run the application and the licensing dialog will appear.</p>	
2. Initialize License Transfer Media	<p>When the new installation asks for the Authorization code, press the 'Advanced' button then, press the 'Import License' button. This will bring up a dialog that asks you to initialize a 'License Transfer Media Device'. This device may be a diskette or USB device.</p> <p>Enter the letter of the drive where the transfer media is located and press the 'Next' button. Once you have pressed the 'Next' button, you may remove the License Transfer Device.</p> <p>You must then take that diskette or USB device to the PC that has the license you want to export.</p>	

Action	New Installation	Existing Installation
<p>3. Export License</p>		<p>Run the application on the PC that has the license you want to export, go to the Help menu and press Licensing Information.</p> <p>Press the 'Advanced' button to reveal the advanced options. Once visible, press the 'Export License' button.</p> <p>Follow the step-by-step directions to export the license onto the License Transfer Media Device.</p> <p>Remove the License Transfer Media Device. The existing installation is now deactivated.</p> <p>Return to the new installation.</p>
<p>4. Import License</p>	<p>Insert your License Transfer Device into the appropriate device.</p> <p>Follow the instructions to import the license. The new installation is now activated.</p>	

Appendix B - Installing WinSIP for Limited Users

Prior to Installation of any Touchstone Software

For any Touchstone Technologies software installation the user MUST BE logged on as the Administrator and / or have Administrator rights.

If Touchstone Technologies Software is going to be installed on a computer that has multiple users including users with limited rights the minimum setting required to run the software is a "Power User". The basic "User" setting does not have enough rights to run the programs no matter how it is installed.

For limited user account installations please follow the following procedure precisely.

Procedure

To install Touchstone Technologies Test Tools with limited user accounts follow the below procedure:

1. Log on as Administrator.
2. Run the setup.exe file of choice.
3. During the Installation wizard a screen will be display whose subject heading is "Customer Information". Please make sure the "Anyone" radial button is selected before clicking the Next button.
4. At the Destination Folder screen make sure to enter a different path by using the Change button.
5. Change the Installation directory to the units shared directory, (i.e. C:\Documents and Settings\All Users\WinSIP)
6. Continue following the instructions until the installation is finished.

Changing a User's Rights

If a user's account is set to a "Limited" or basic "User" rights, Touchstone Technologies software will not run. The minimum rights setting must be "Power User". To change a user's rights, follow the procedure below.

1. Log on as administrator.
2. On the desktop right click on My Computer, select "Manage".
3. Select "Local User & Groups"; then select "Users" to view list.
4. Right click on the user of choice, and then select properties.
5. Select "Member of Tab", and then click on "Add".
6. Click on the "Advanced" button, and then click on "Find Now" button.
7. Select "Power User" from list.
8. Click "OK", "OK", and "OK" to close windows.

Important Note

All Touchstone applications that need to be run by users who do not have administrative rights have to be installed in My Computer\Shared Documents folder.

This folder can be located either thru My Computer or thru explore at "C:\Documents & Settings\All Users\ WinSIP".


Appendix C - Choosing a Network Card

It has been found through extensive testing that different network adapters have a wide range of performance values.

The recommended NIC card is the Intel Pro/1000 GT Desktop Adapter. The manufacturer product code for this network card is PWLA8391GT.

Custom Driver Settings


Open the Computer Management Console and select the Intel Pro 1000 GT network adapter.

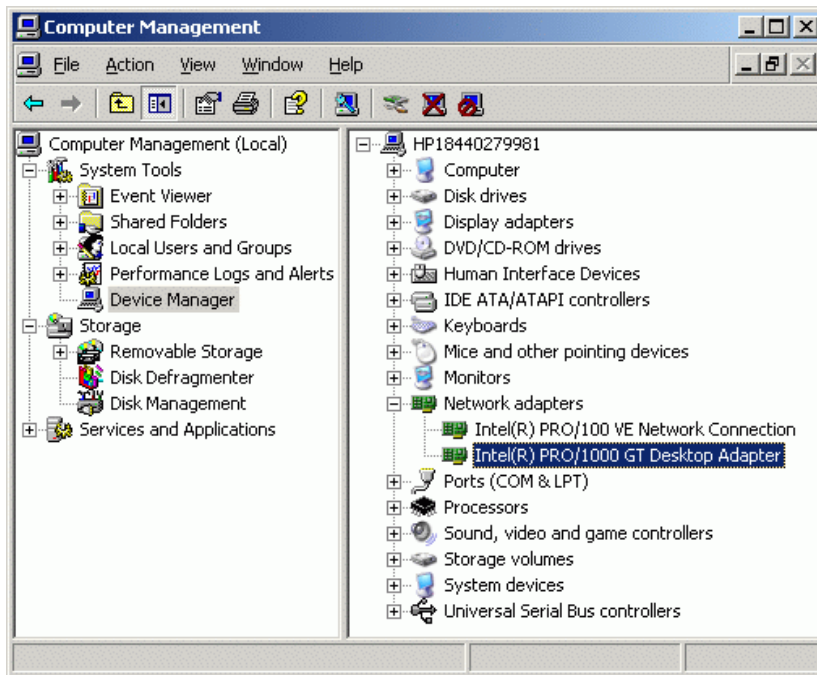


Right click on the Intel Pro/1000 GT adapter and select properties from the shortcut menu. With the properties displayed select the Advanced tab.

The following changes will increase the performance of this network adapter.

Set the Interrupt Moderation Rate to OFF.

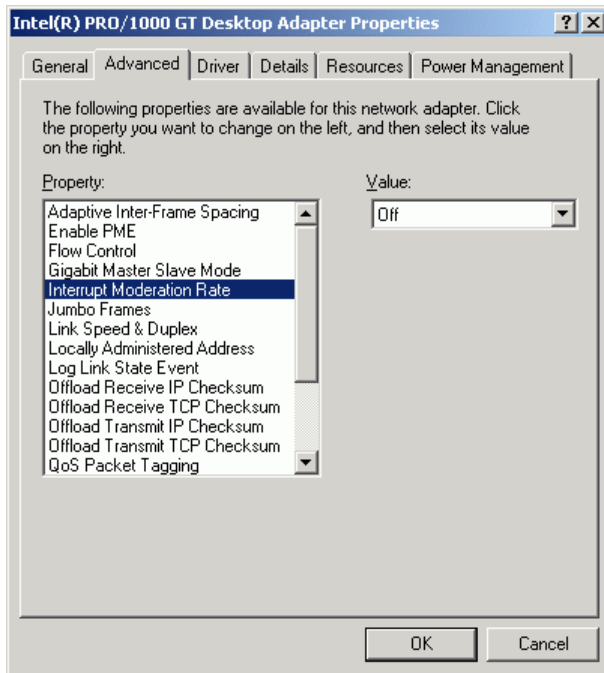

Make sure all four of the offload properties are set to ON.

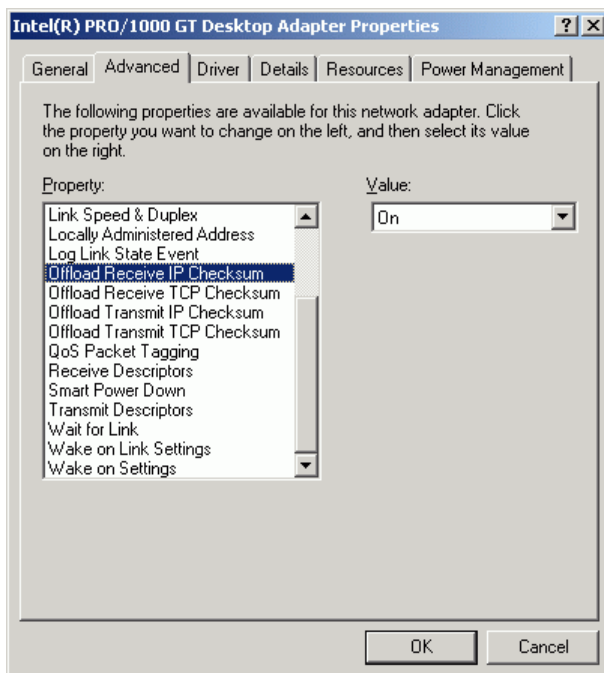

Appendix D - MySQL Installation

To save WinSIP records for later use, it is necessary to install MySQL Database and MySQL Tools.

WinSIP 4.0 has been tested with MySQL 5.1.46

Please go to the MySQL website (www.mysql.com) and select the appropriate download for your Operating System.

MySQL Component:

MySQL 5.1.46 Community Server

Once you have downloaded the MySQL applications, double click on mySQL-5.x.xx-win32.zip to extract and start the installation.

To install and configure the MySQL program please follow the below instructions:

MySQL Install Screen 1 - Welcome to the installation Wizard


Press the “Next” button to continue the installation.



Press the “Next” button to continue the installation.

MySQL Install Screen 2 - Setup Type

This screen will appear next during the installation process.

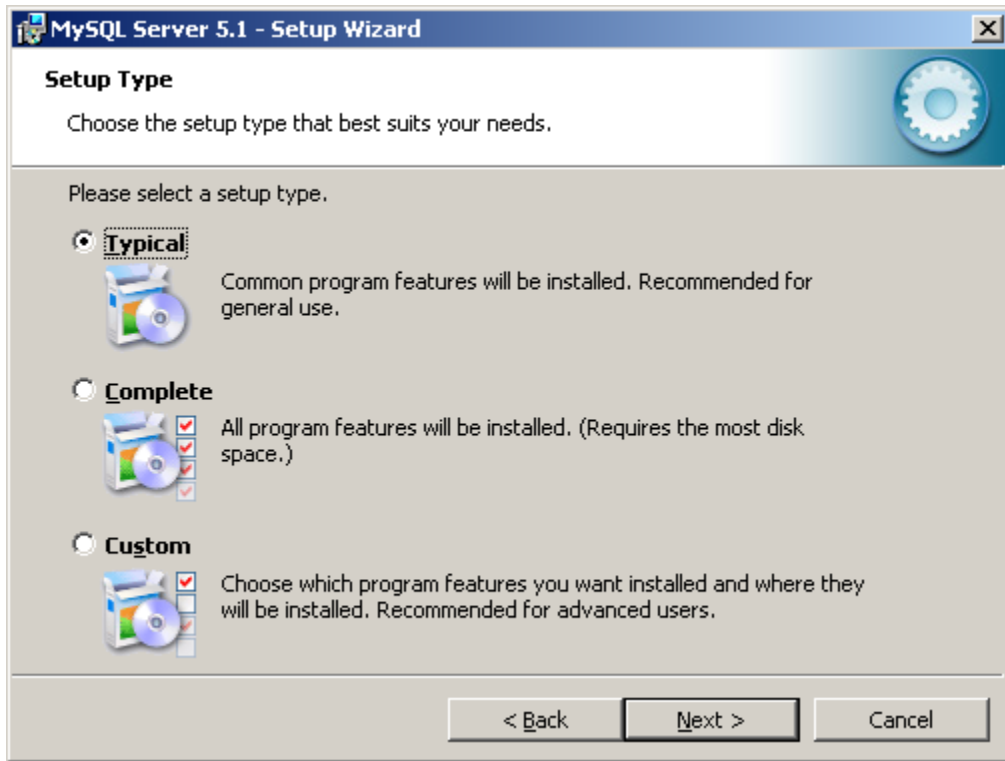


Make sure that the “Typical” option is selected as above.

Press the “Next” button to continue the installation.

MySQL Install Screen 3 - Ready to Install


This screen will appear next during the installation process.

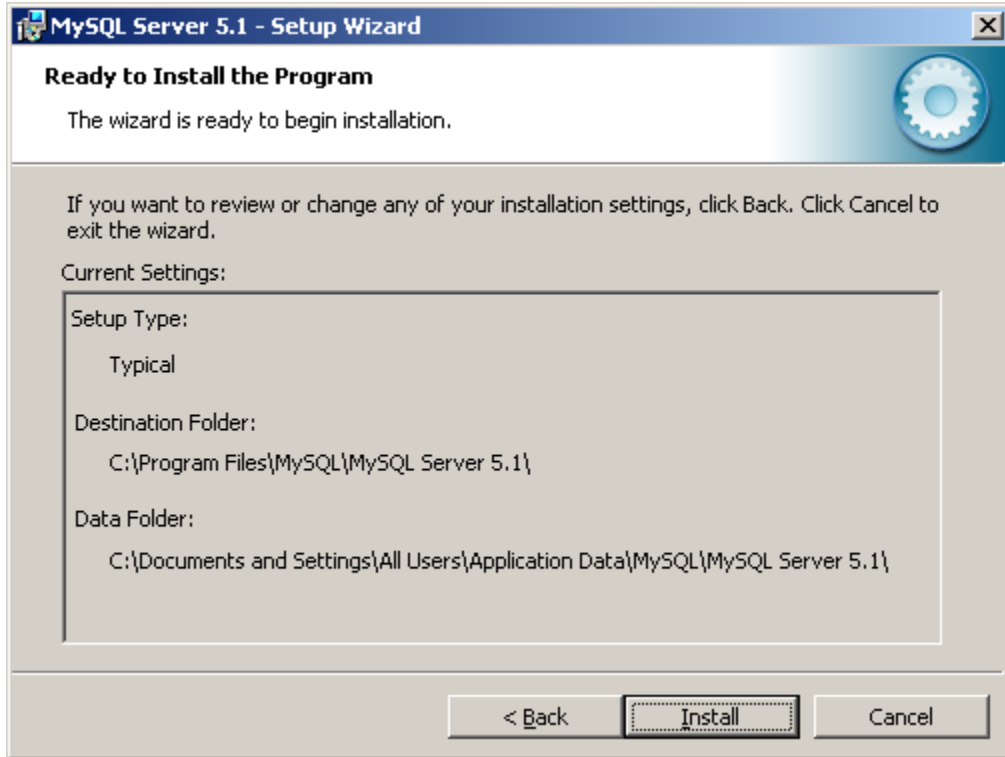

Press the “Install” button to continue the installation.

MySQL Install Screen 4 - Installing


This screen will appear next during the installation process.

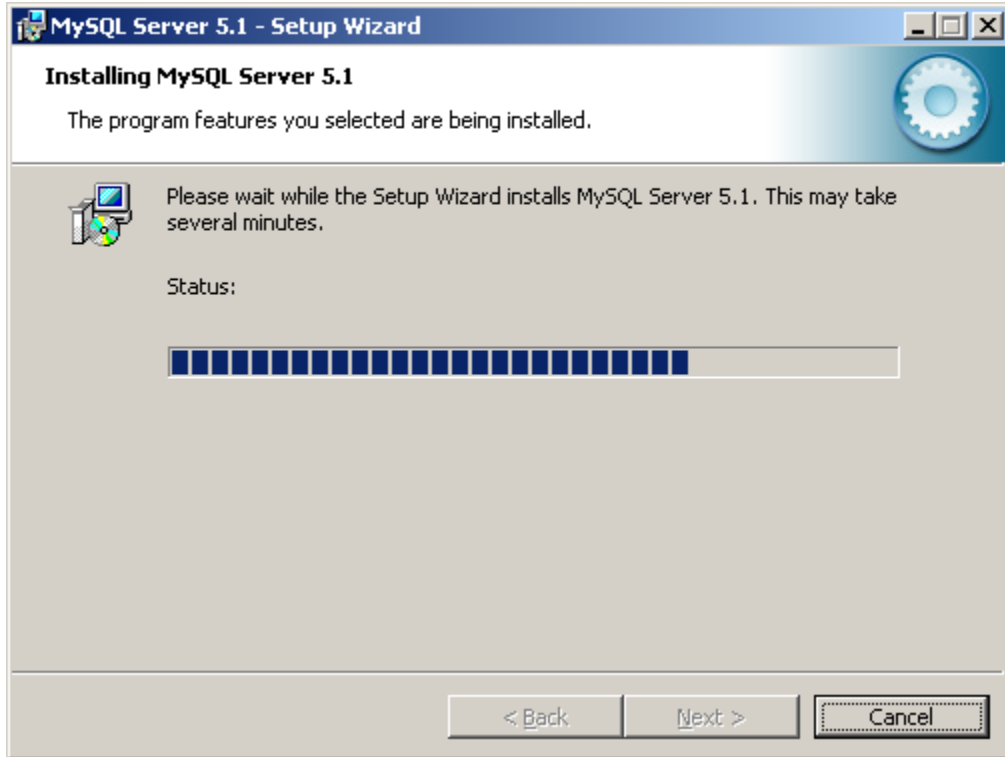

When complete, press the “Next” button to continue the installation.

MySQL Install Screen 5 - Installing

This screen will appear next during the installation process.

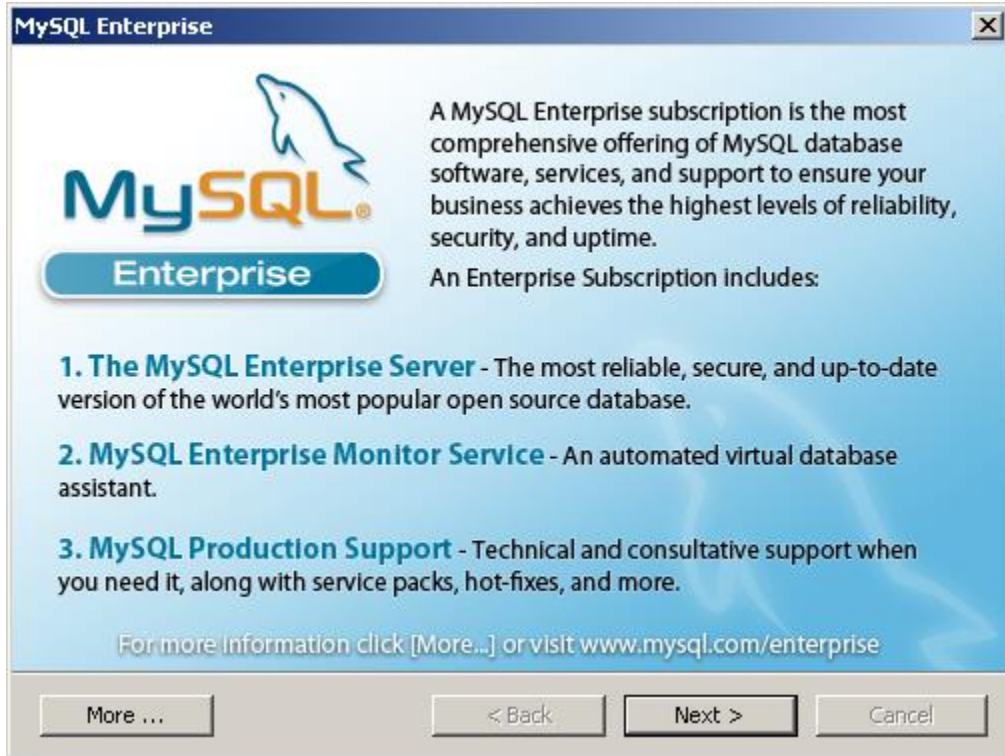

Press the "Next" button to continue the installation.

MySQL Install Screen 6 - Installing


This screen will appear next during the installation process.



Press the “Next” button to continue the installation.

MySQL Install Screen 7 - Setup Wizard Complete

This screen will appear next during the installation process.

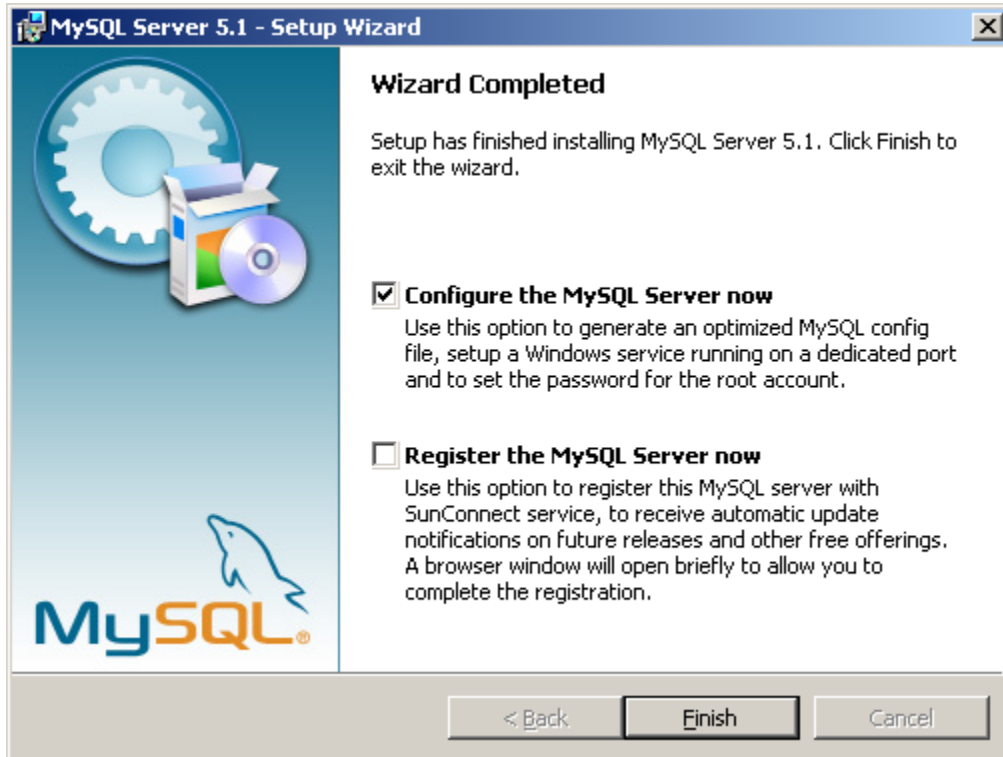

MySQL database installation is now complete.


The next screens will configure the MySQL service.

Select the “Configure the MySQL Server now” option and press the “Finish” button to complete the installation and begin the configuration.

The “register the MySQL Server now” is optional. If desired the MySQL application can be registered.

MySQL Install Screen 8 - Welcome to the Server service Setup.


This screen will appear next during the installation process.

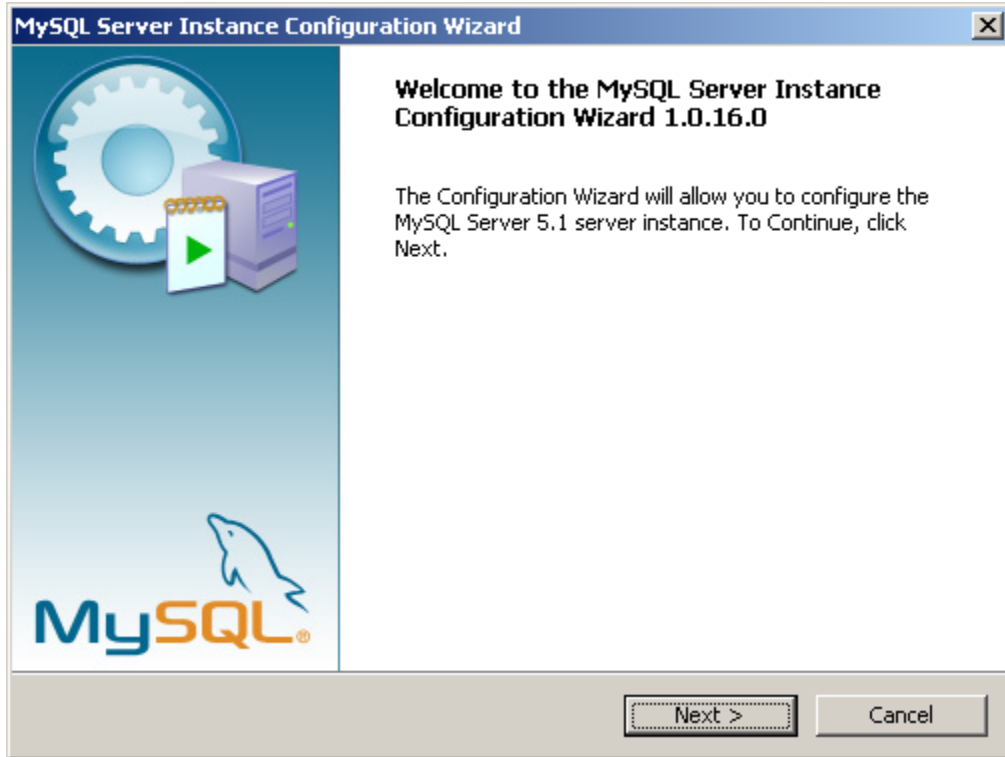

Press the "Next" button to continue the installation.

MySQL Install Screen 9 - Configuration Selection


This screen will appear next during the installation process.

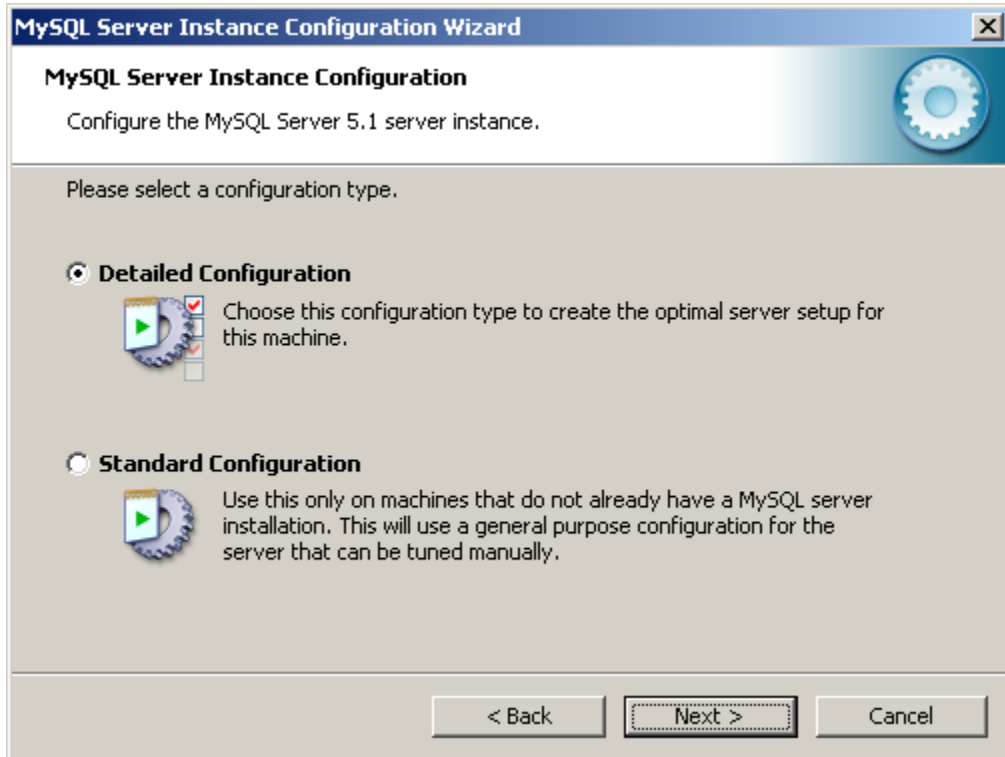

Select the "Detailed Configuration" option and press the "Next" button to continue the configuration.

MySQL Install Screen 10 - Server Instance Configuration


This screen will appear next during the installation process.

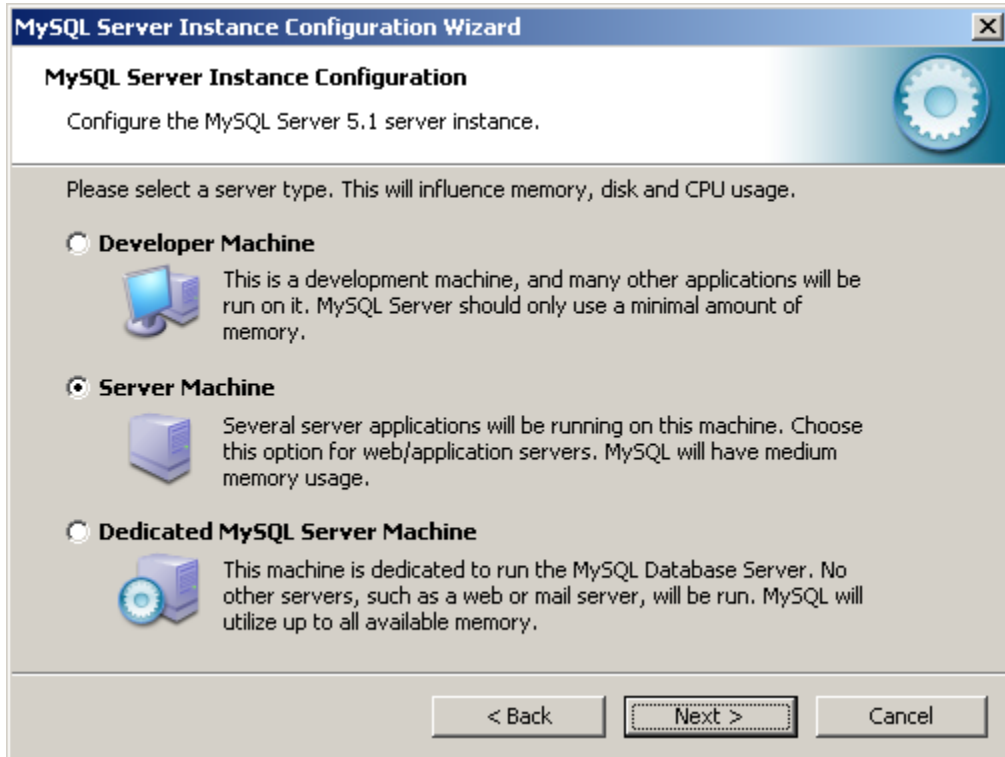

Select the “Server Machine” option and press the “Next” button to continue the configuration.

MySQL Install Screen 11 - Database Type Selection

This screen will appear next during the installation process.

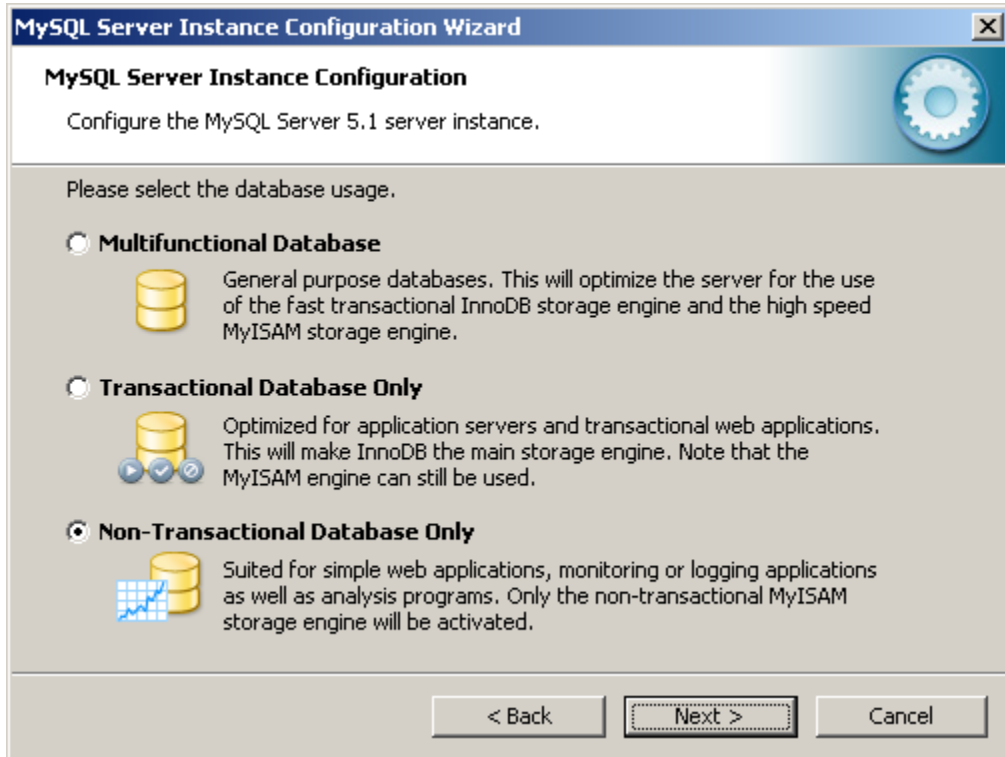


Select the “Non-Transactional Database Only” option to install only the MyISAM database.

Press the “Next” button to continue the configuration.

MySQL Install Screen 12 - Connection Configuration Selection

This screen will appear next during the configuration process.

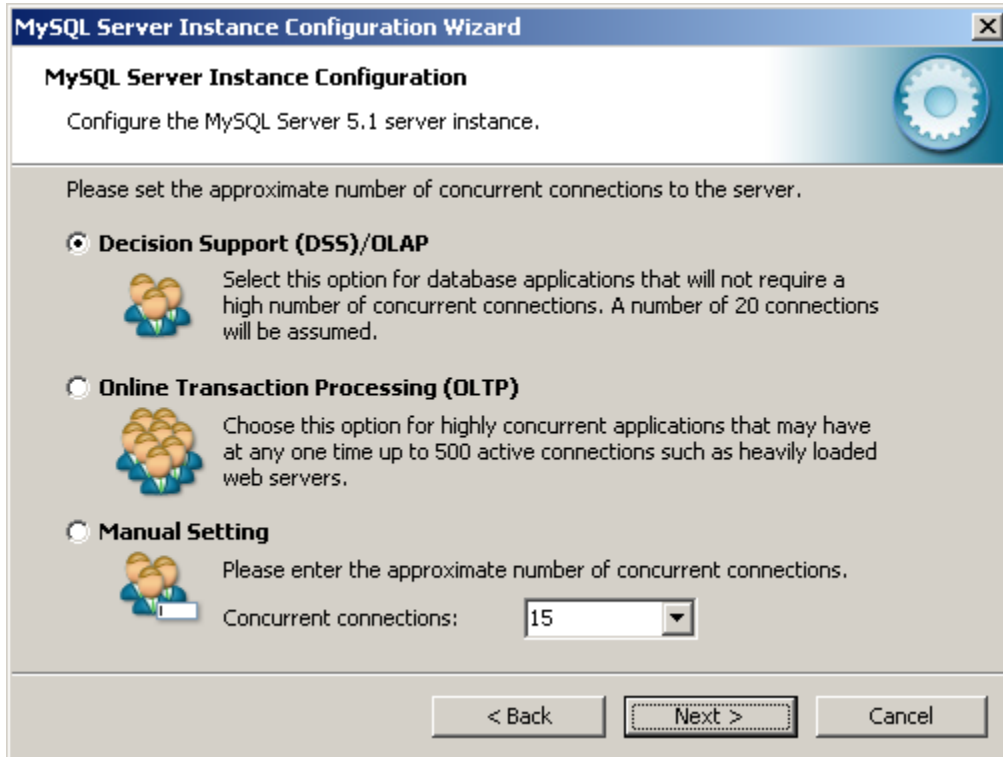


Select the “Decision Support (DSS)/OLAP” option to properly configure the MySQL database.

Press the “Next” button to continue the configuration.

MySQL Install Screen 13 - Connection Type Selection

This screen will appear next during the configuration process.

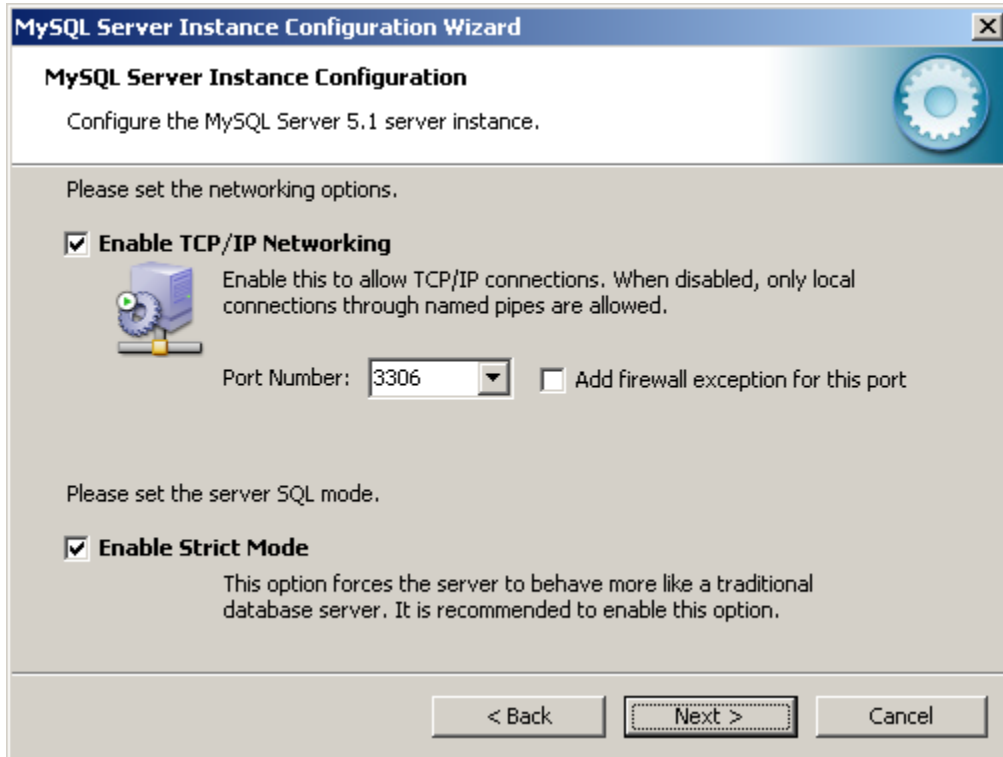

Select the “Enable TCP/IP Networking” option.


Set the “Port Number” field to “3306”.

Select the “Enable Strict Mode” option.

Press the “Next” button to continue the configuration.

MySQL Install Screen 14 - Character Set Selection

This screen will appear next during the configuration process.

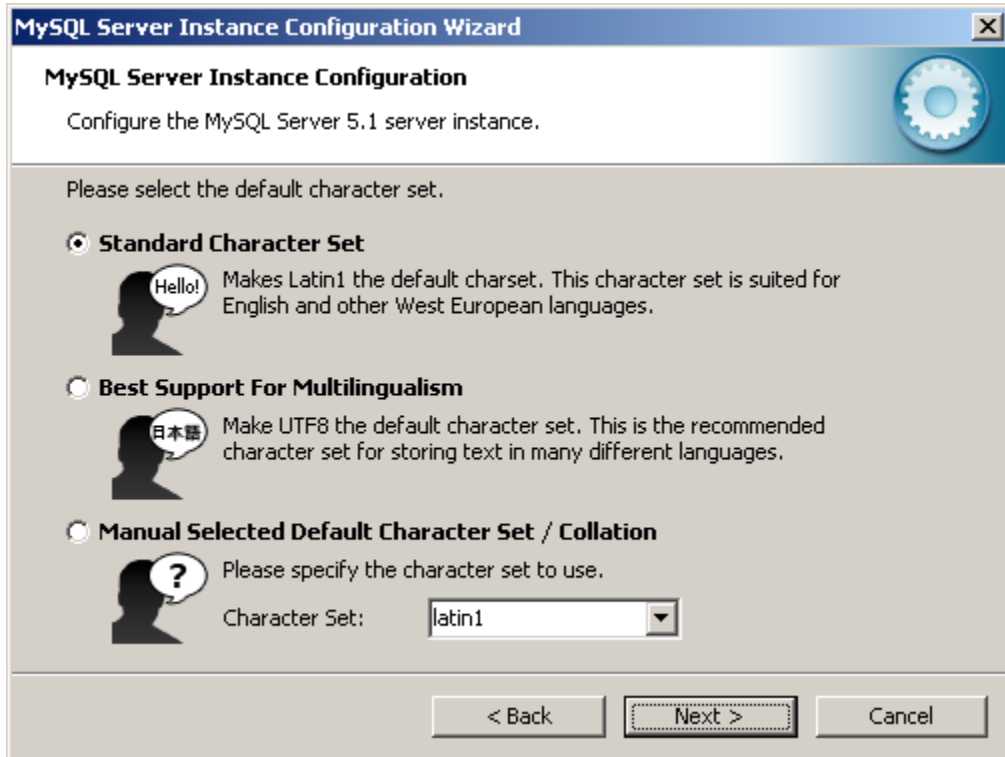

Select the “Standard Character Set” option and press the “Next” button to continue the installation.

MySQL Install Screen 15 - Setup Type

This screen will appear next during the configuration process.



Select the “Install As Windows Service” option.


Select the “MySQL” service from the “Service Name” option.

You may choose to (or not to) select the “Include Bin Directory in Windows PATH” option.

Press the “Next” button to continue the configuration.

MySQL Install Screen 16 - MySQL Server Instance Configuration

This screen will appear next during the installation process.



The image shows a screenshot of the "MySQL Server Instance Configuration Wizard" window. The title bar reads "MySQL Server Instance Configuration Wizard". The main heading is "MySQL Server Instance Configuration" with a subtitle "Configure the MySQL Server 5.1 server instance." and a gear icon. The instruction "Please set the security options." is displayed. There are two main options: "Modify Security Settings" (checked) and "Create An Anonymous Account" (unchecked). Under "Modify Security Settings", there is a "root" user icon, a "New root password:" field with a masked password "*****" and the instruction "Enter the root password.", a "Confirm:" field with a masked password "*****" and the instruction "Retype the password.", and an unchecked checkbox for "Enable root access from remote machines". Under "Create An Anonymous Account", there is a question mark icon and a warning: "This option will create an anonymous account on this server. Please note that this can lead to an insecure system." At the bottom, there are three buttons: "< Back", "Next >" (highlighted), and "Cancel".

Select the "Modify Security Settings" option.


Select and enter the new root account password. This password is for the root user and can be anything you would like.

Re-enter the new root account password.

Press the "Next" button to continue the configuration.

MySQL Install Screen 17 - Execute the Configuration Settings.


This screen will appear next during the installation process.

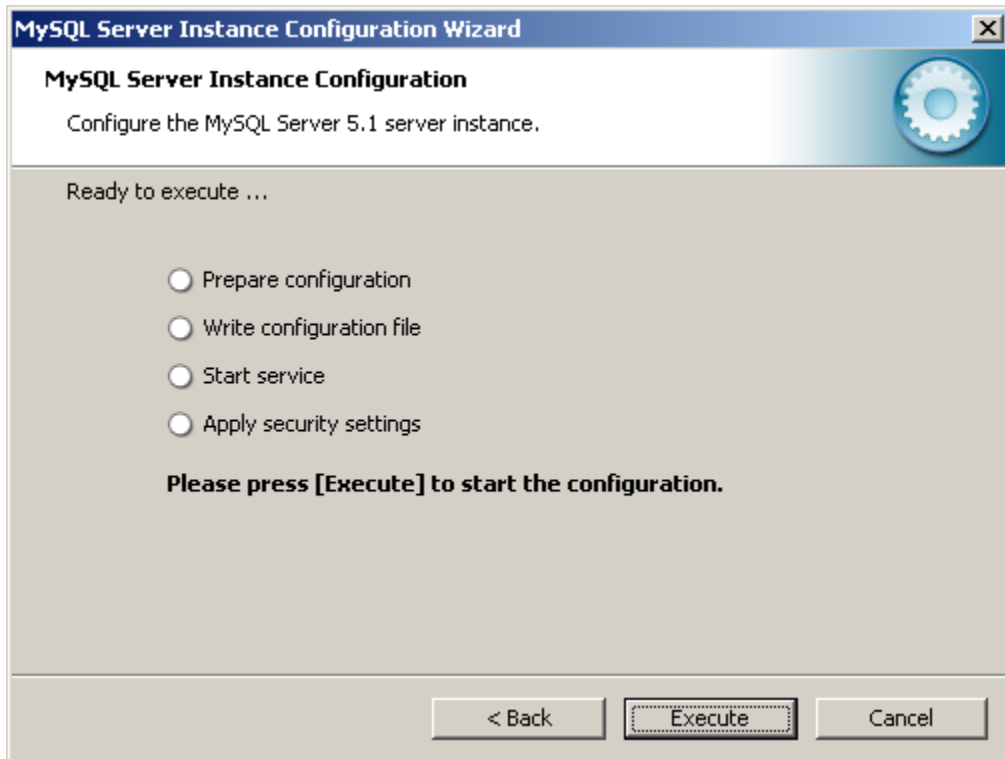

Press the "Execute" button to complete the configuration.

MySQL Install Screen 18 - Configuration Progress

This progress screen will appear next during the configuration process.

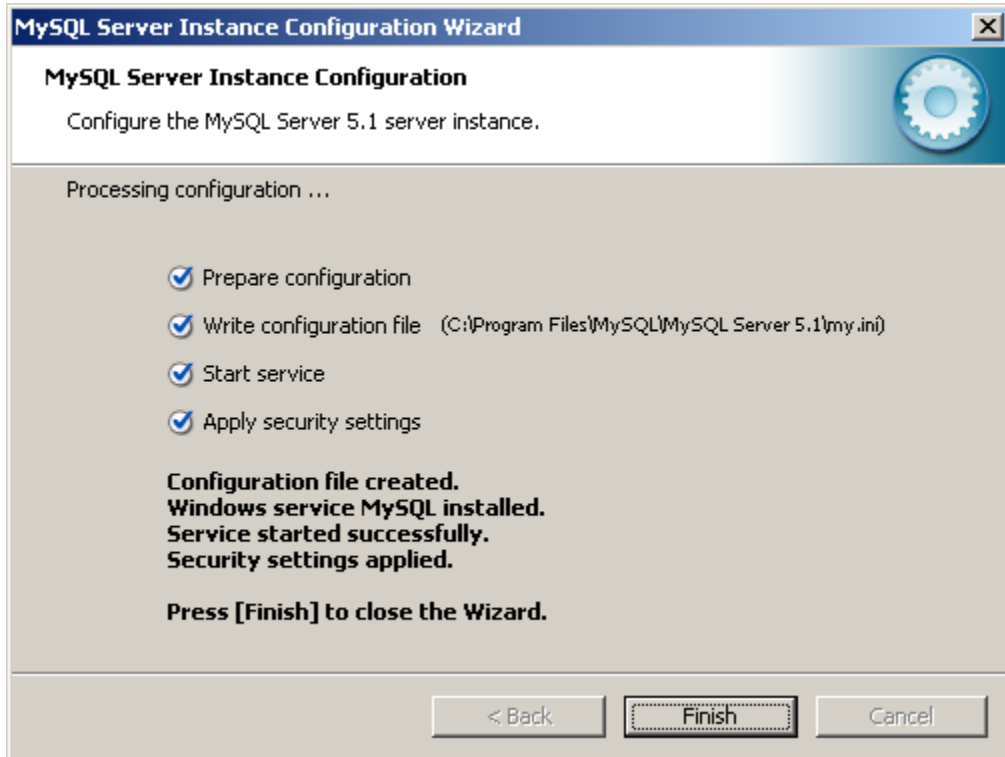

Press the “Finish” button to close the Wizard.


MySQL Installation and Server configuration is now complete.

Installing the MySQL Tools

Locate and double-click the “mysql-gui-tools-5.0-rxx-win32.msi” file.

The default file location is “C:\WinSIP\Database\ mysql-gui-tools-5.0-rxx-win32.msi”.

The following MSI Installer screen will briefly appear:

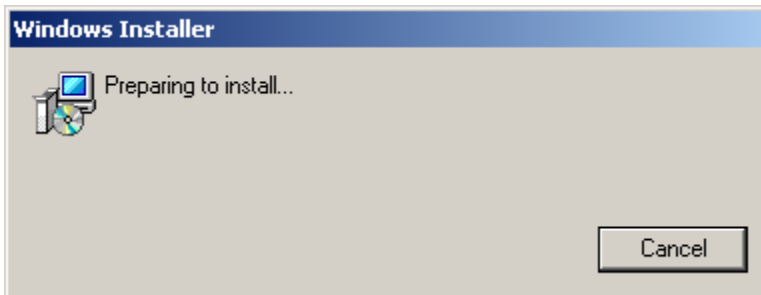

MySQL Tools Install Screen 1 - Welcome to the installation Wizard


This screen will appear next during the configuration process.



Press the “Next” button to continue the installation.

MySQL Tools Install Screen 2 - License Agreement


This screen will appear next during the installation process.

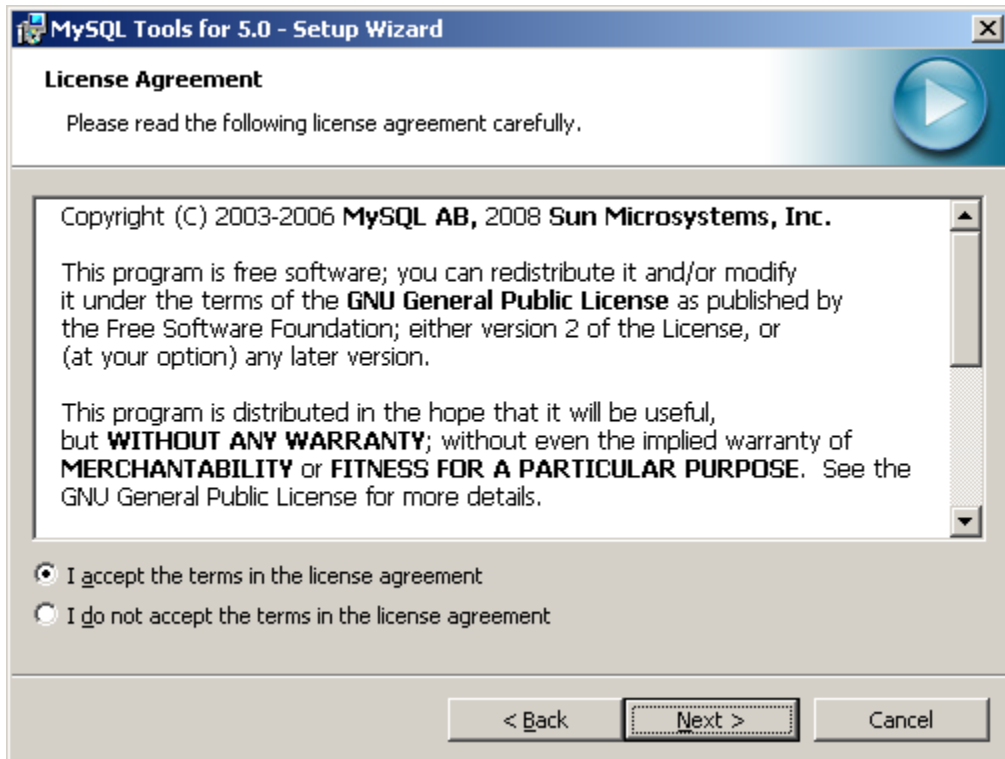

Select the "I accept the terms in the license agreement" and press the "Next" button to continue.

MySQL Tools Install Screen 3 - Destination Folder


This screen will appear next during the installation process.

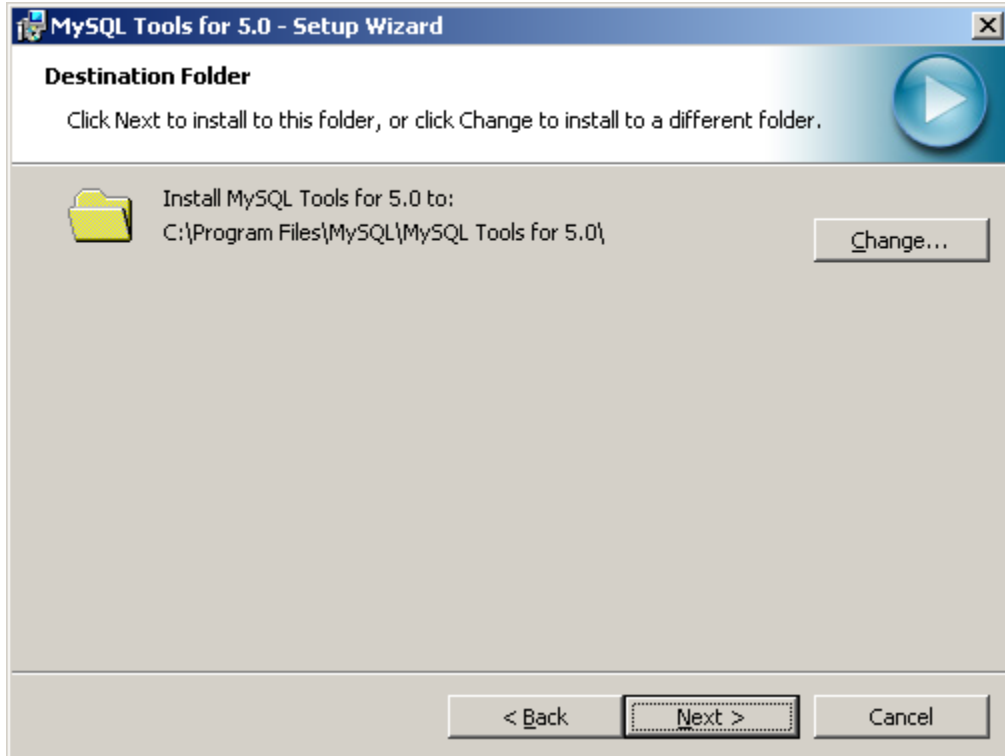

Select the desired location for the MySQL tools and press the “Next” button to continue.

MySQL Tools Install Screen 4 - Setup Type Selection


This screen will appear next during the installation process.

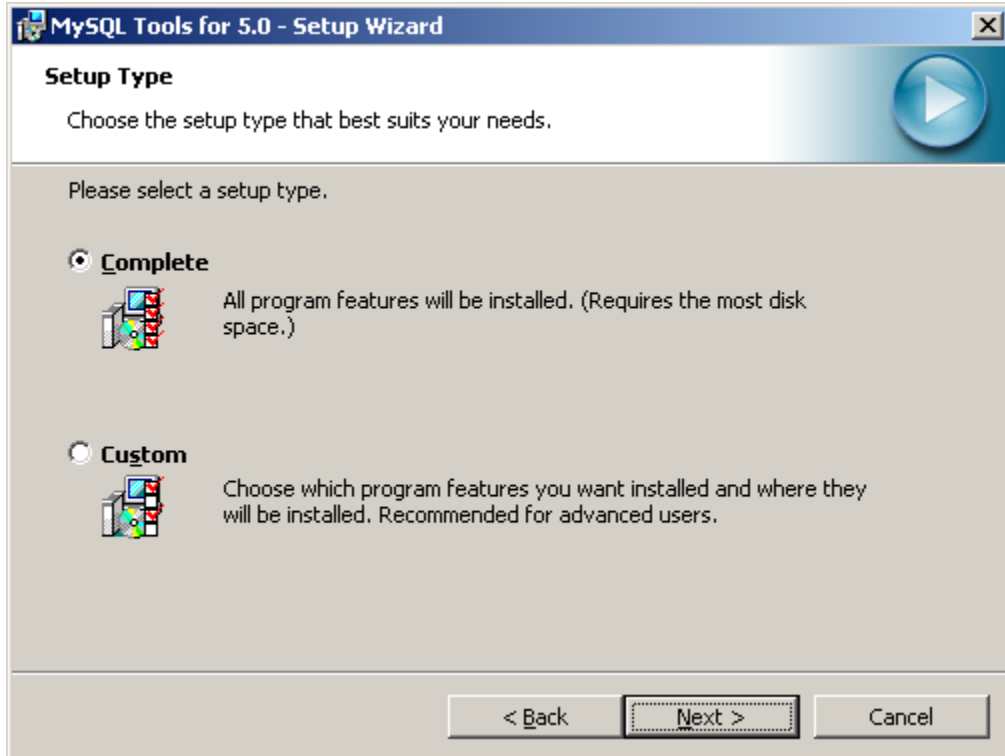

Select the "Complete" option and press the "Next" button to continue.

MySQL Tools Install Screen 5 - Ready to Install


This screen will appear next during the installation process.

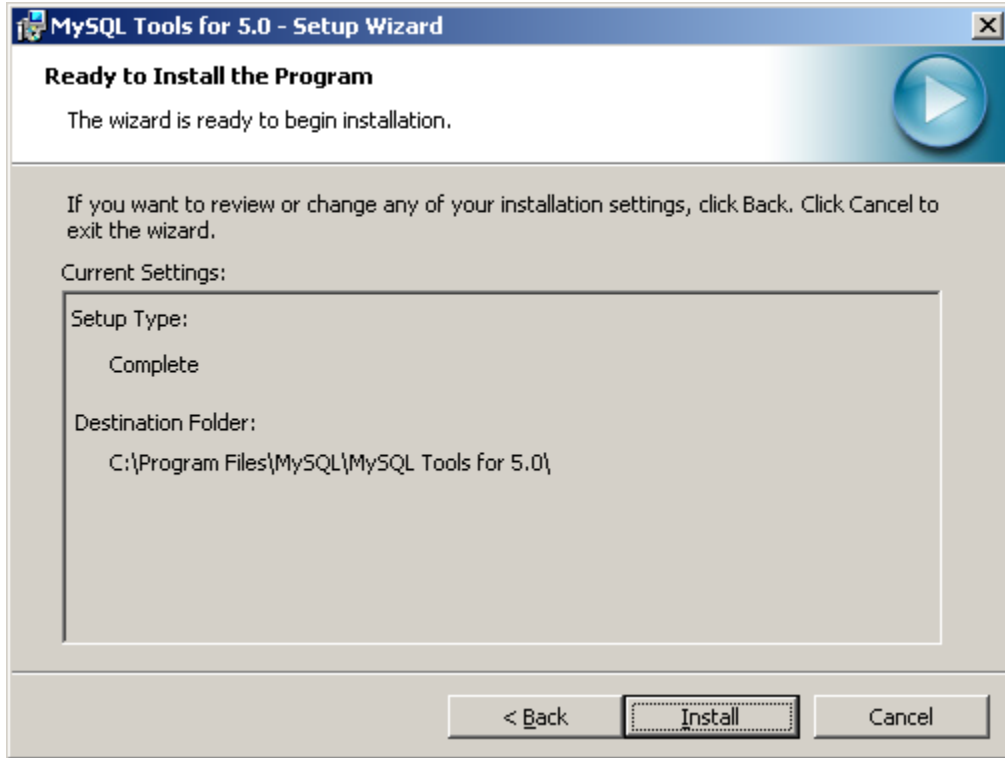

Press the “Install” button to continue.

MySQL Tools Install Screen 6 - Installation Status


This screen will appear next during the installation process.

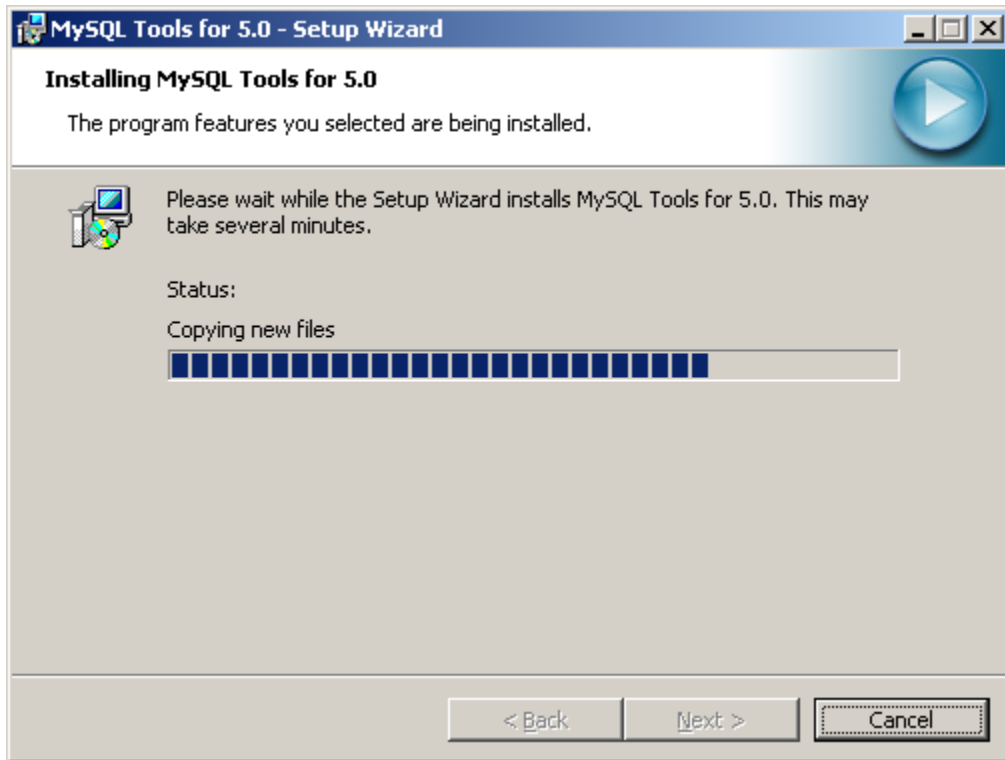

This screen will automatically take you to the next screen when complete. If it does not, press the "Next" button when it becomes enabled.

MySQL Tools Install Screen 7 - Enterprise


This screen will appear next during the installation process.

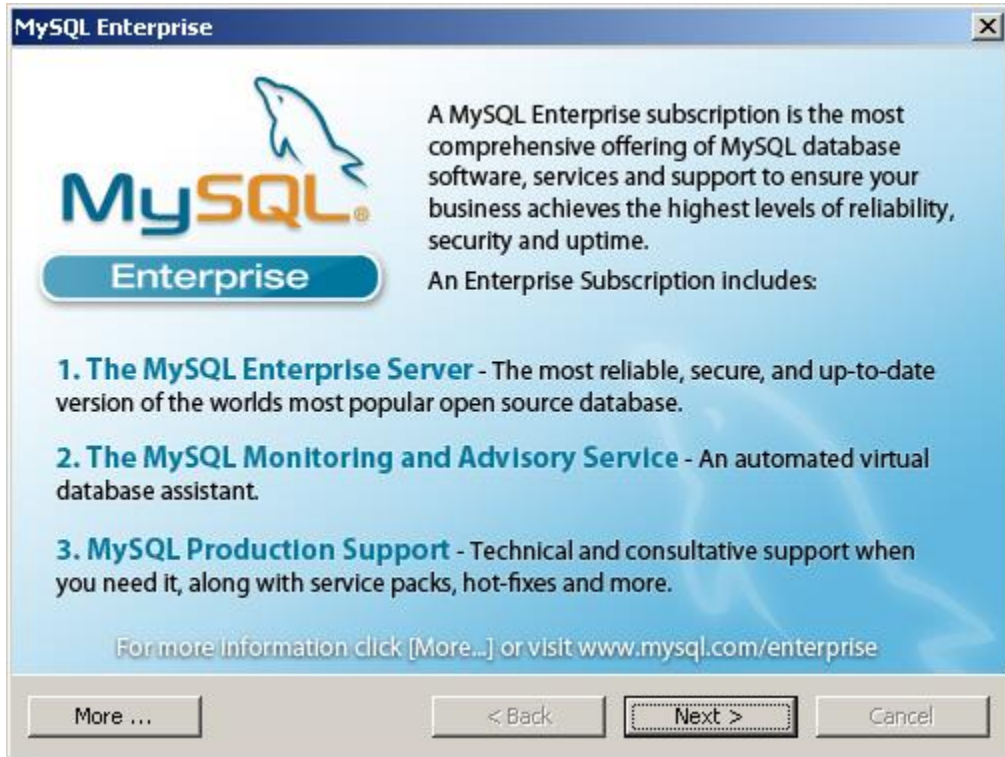

Press the "Next" button to continue the MySQL installation.

MySQL Tools Install Screen 8 - Enterprise


This screen will appear next during the installation process.

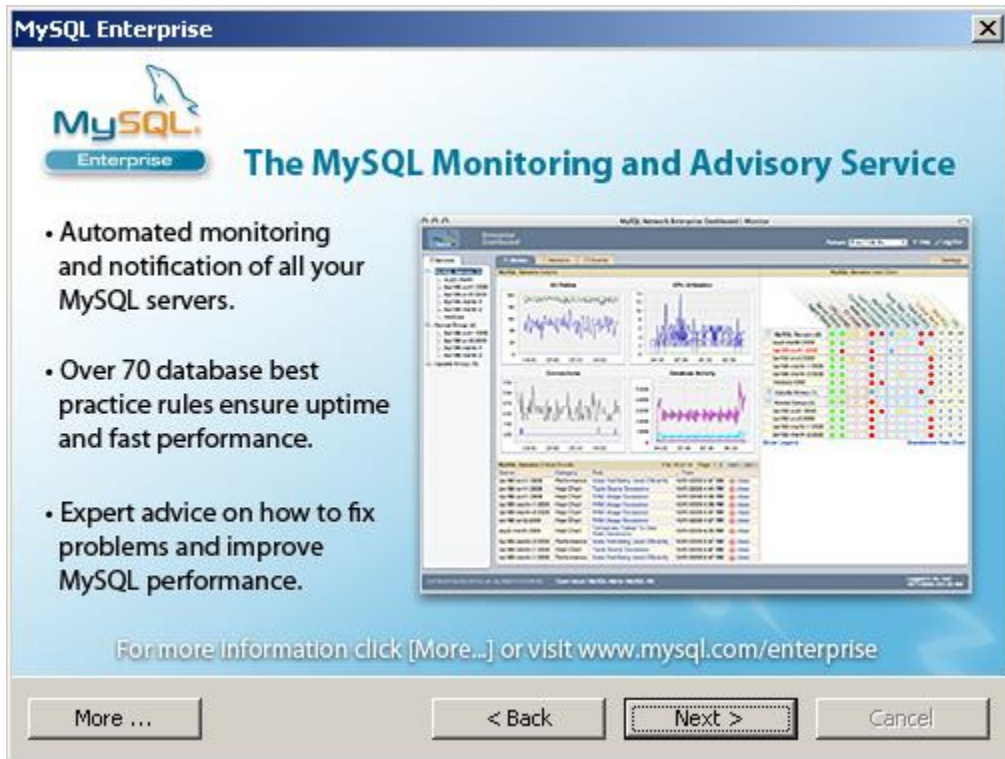

Press the “Next” button to continue the MySQL installation.

MySQL Tools Install Screen 9 - Wizard Complete

This screen will appear next during the installation process.

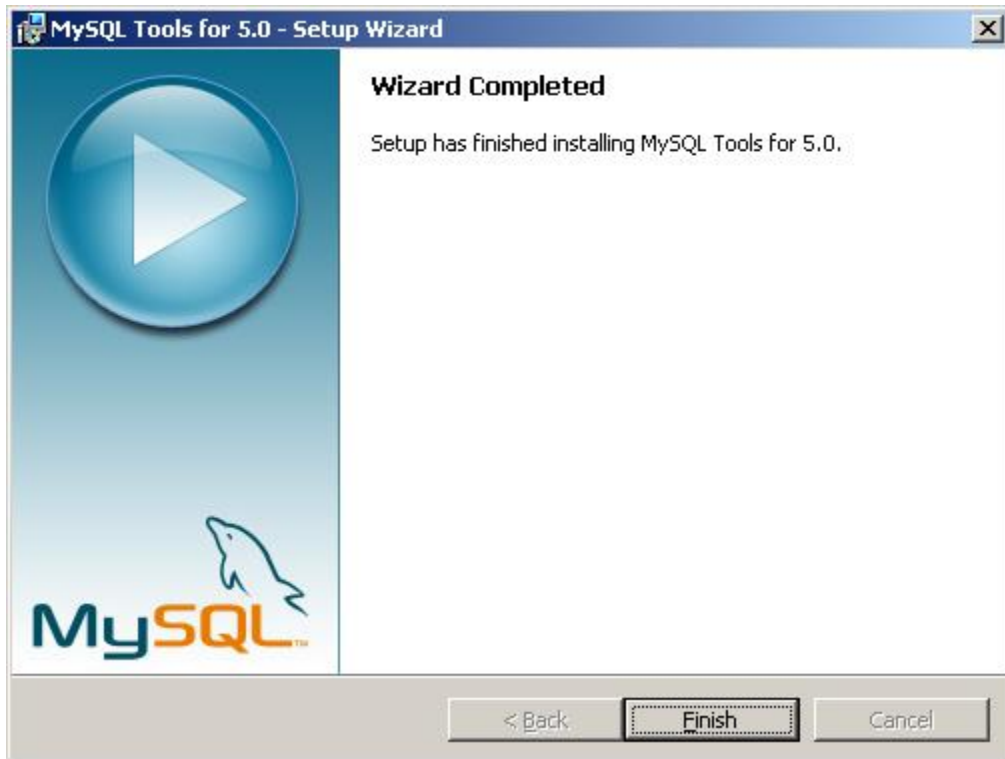

Press the "Finish" button to complete the MySQL installation.

Post-Installation Activities

The following post-installation steps must be performed in order to test and utilize the newly installed software.

Configuring MySQL Schema


Creating the MySQL database schema and WinSIP user account.

WinSIP requires a MySQL database schema named “Peer”.

Located in the C:\WinSIP\Database directory is the file called Peer Schema.sql. This file is the MySQL script for creating the database schema. You must load this schema and create a user for “WinSIP”.


The following details the steps required to configure the MySQL database.

From the Windows “Start” button, locate the “MySQL” program group on the Start Menu.

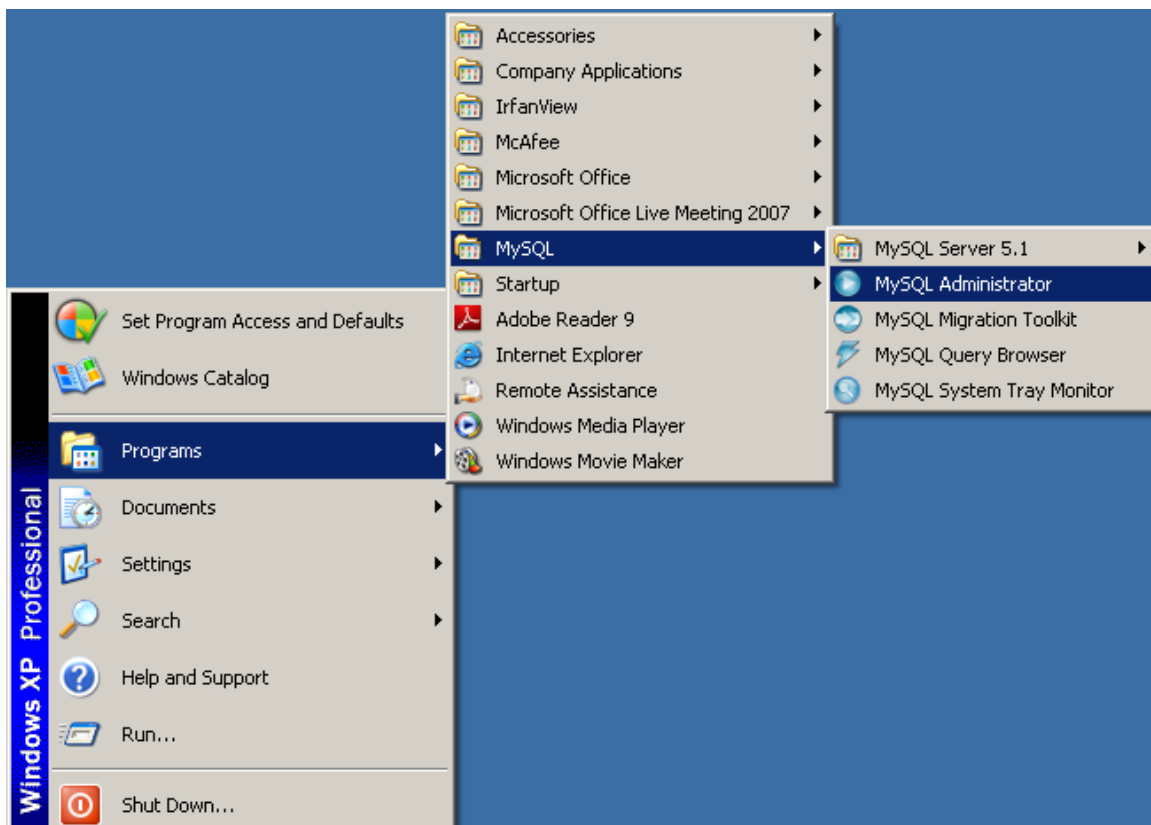


Select the “MySQL” Administrator option.

The following screen will appear

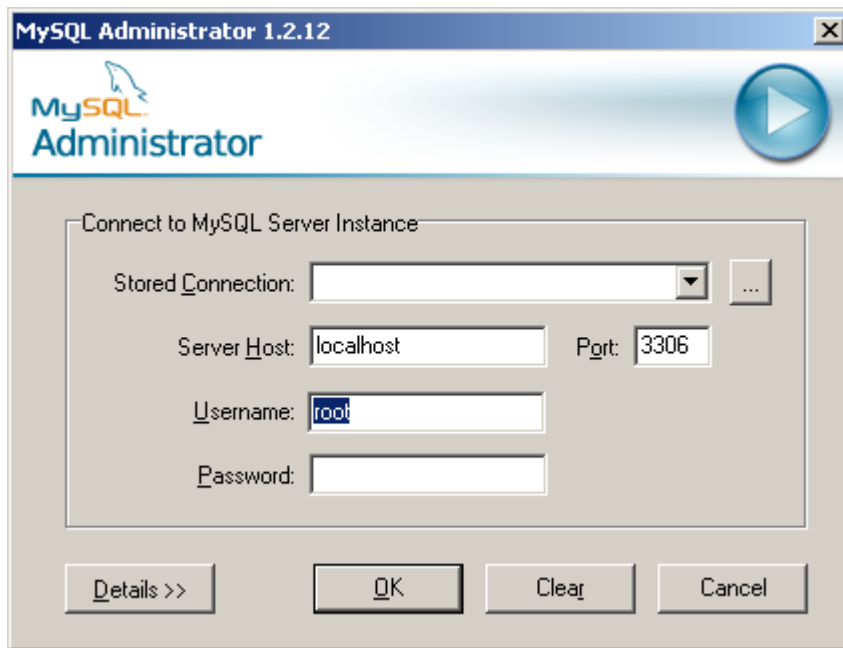


Enter a name for the stored connection and the password of the root user.

When the screen is complete, press the “OK” button.

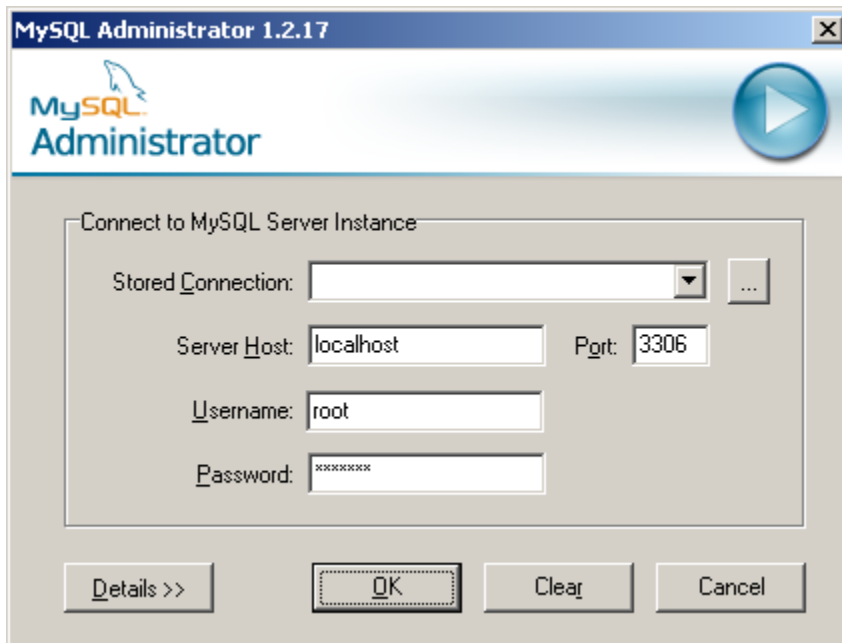


The following screen will appear:

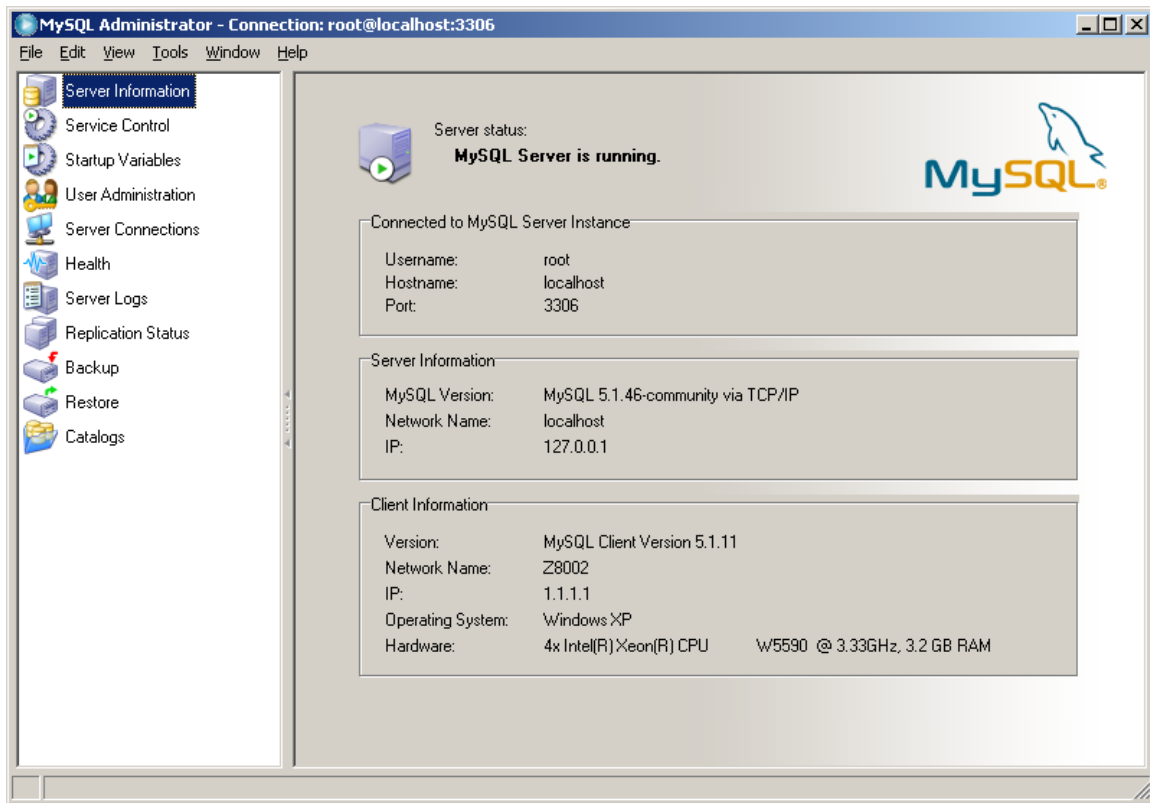

Select the item marked "Restore".

Select the button labeled "Open Backup File".


The following screen will appear:

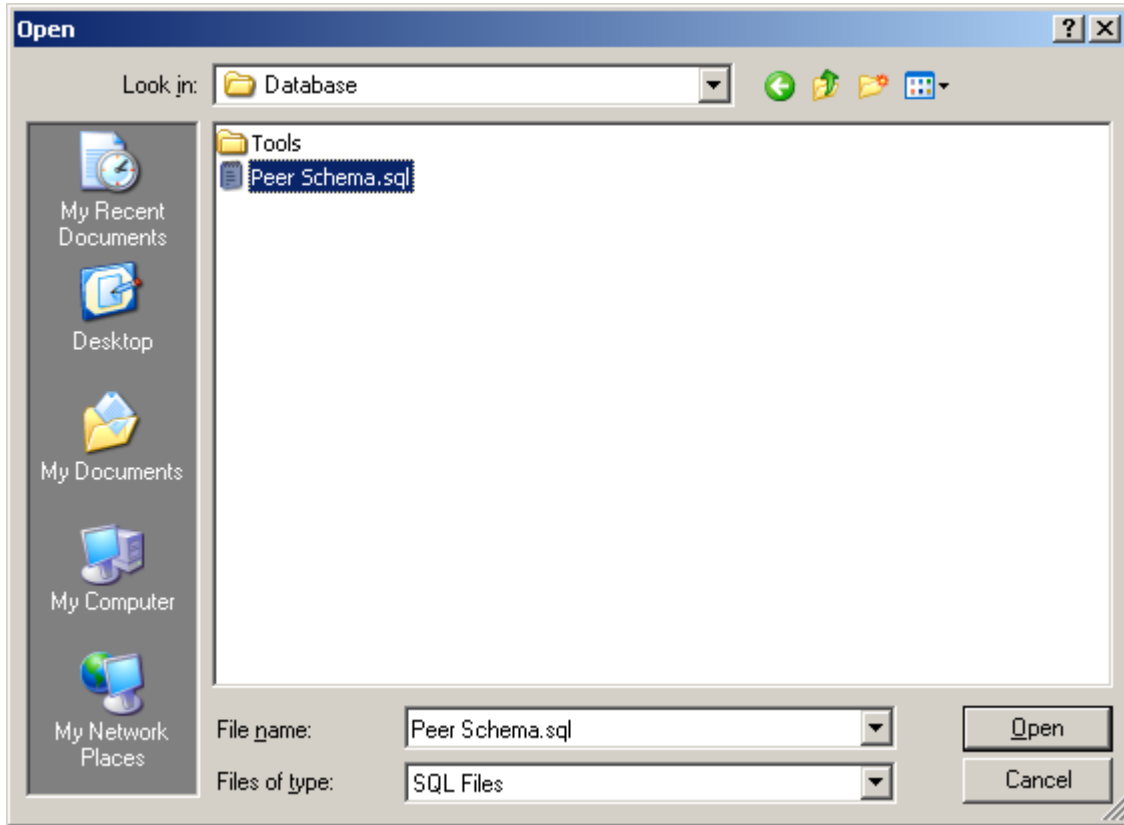

Use this dialog to browse to the WinSIP installation folder and locate the “Database” folder (C:\WinSIP\Database).


In the database folder, locate and select the “Peer Schema.sql” file and press the “Open” button.

The Restore screen will now appear as below:

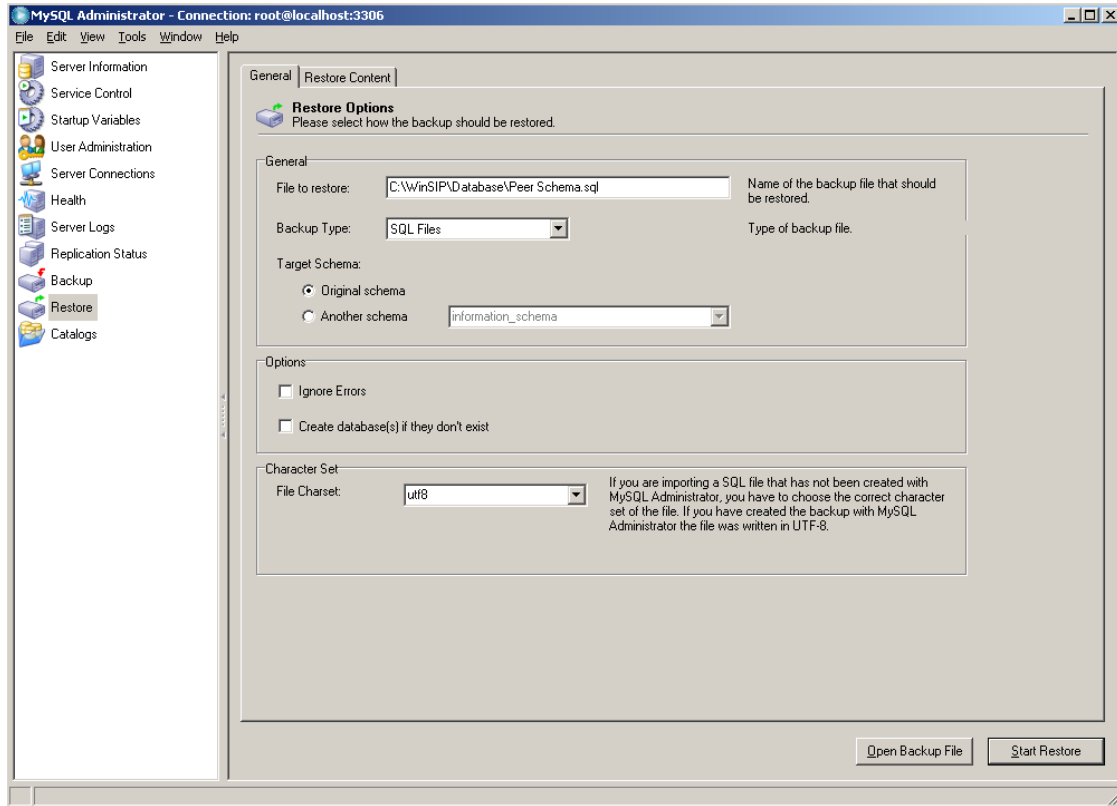

Press the “Start Restore” button.

The following screen will appear:

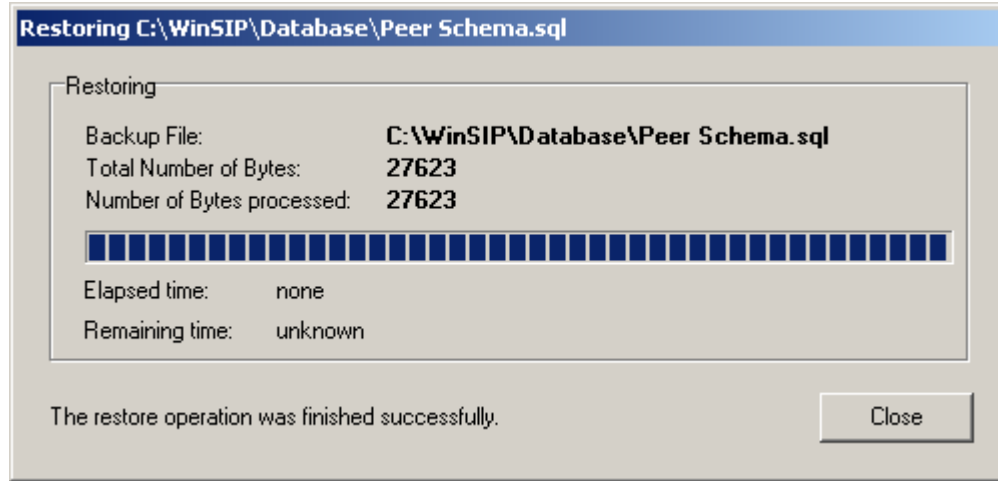

When the restore operation is complete press the “Close” button.


The schema has successfully been loaded.

Select the “Catalogs” option from the options left list.

Ensure that the “Peer” catalog is in the list.

Select the “peer” catalog.


The following screen will appear:

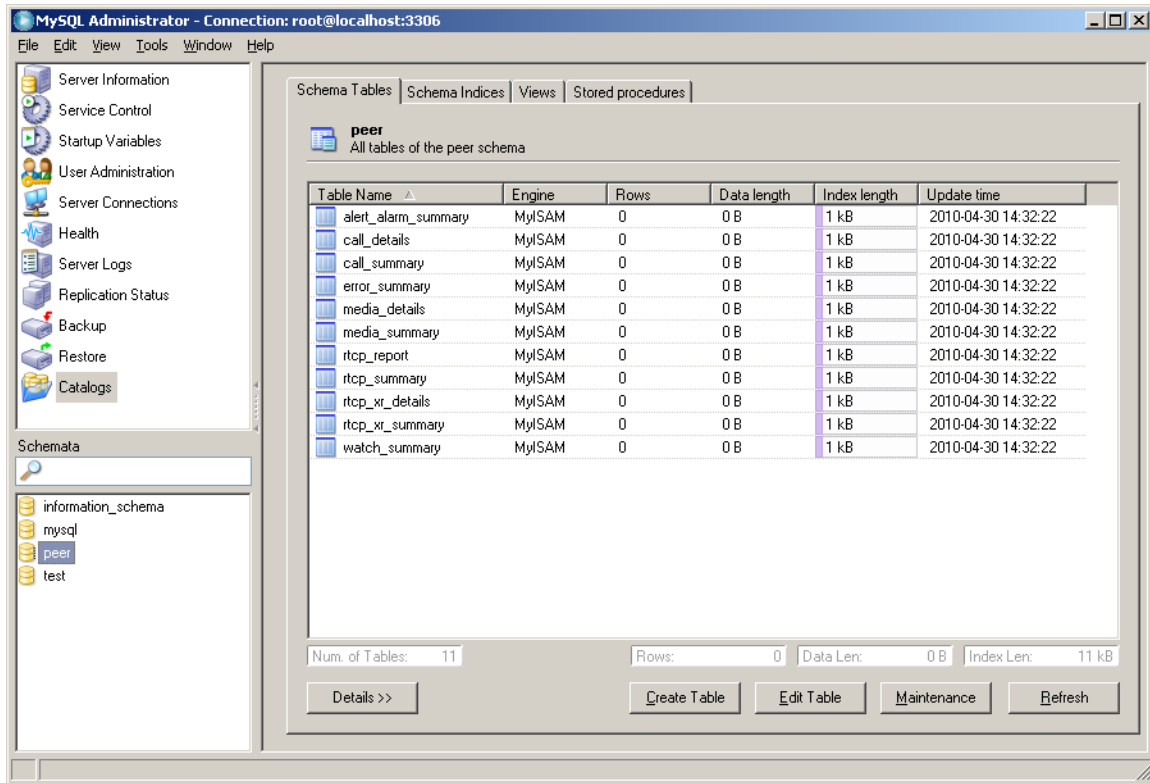

Confirm that the tables appear in the catalog as above.

Select the “User Administration” option from the list.

The screen will appear as below:

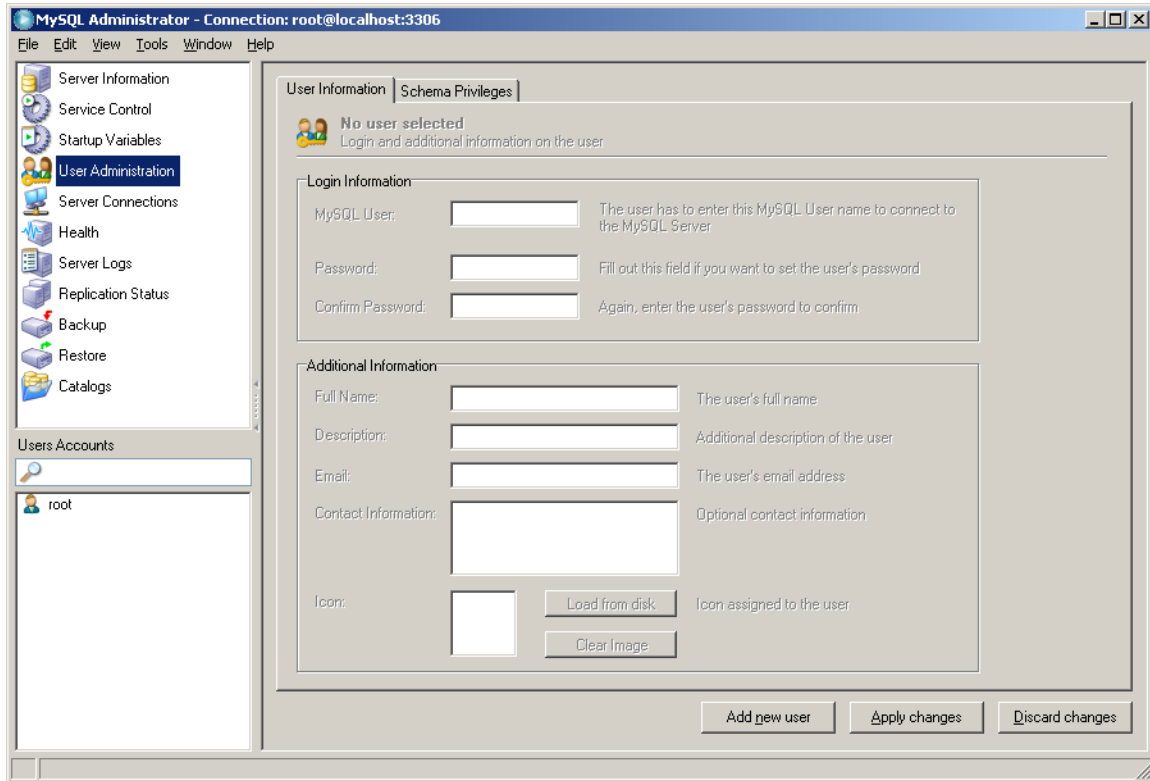

Select the “Add new user” button.


Set the “MySQL User” field to “WinSIP” (this is case sensitive).

Do not set a password for this user.

Confirm that you wish to not set a password for this user by skipping the “Confirm Password” field.


Press the “Apply Changes” button.

The screen should now appear as below (note the new user “WinSIP” in the bottom list on the left).

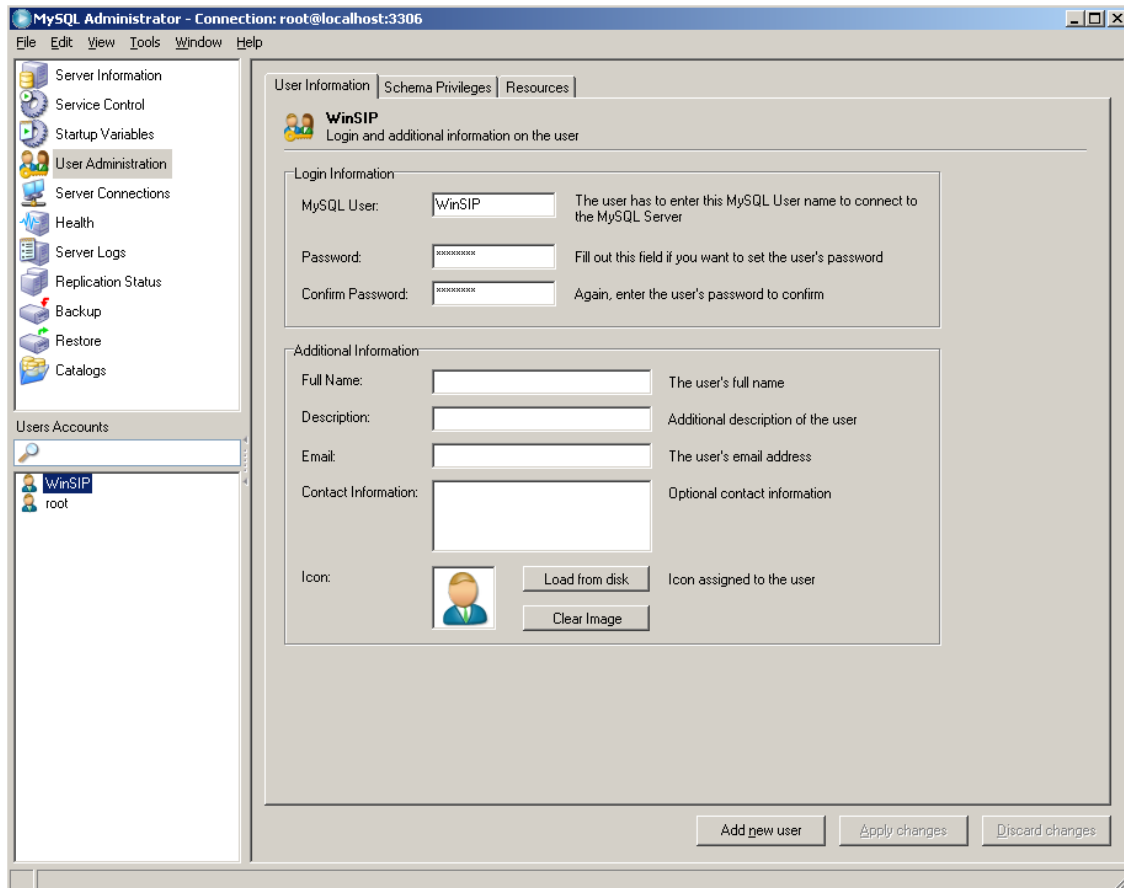

The next step is to set the schema privileges for the new “WinSIP” user.


Select the tab labeled “Schema Privileges” and the following screen will appear:

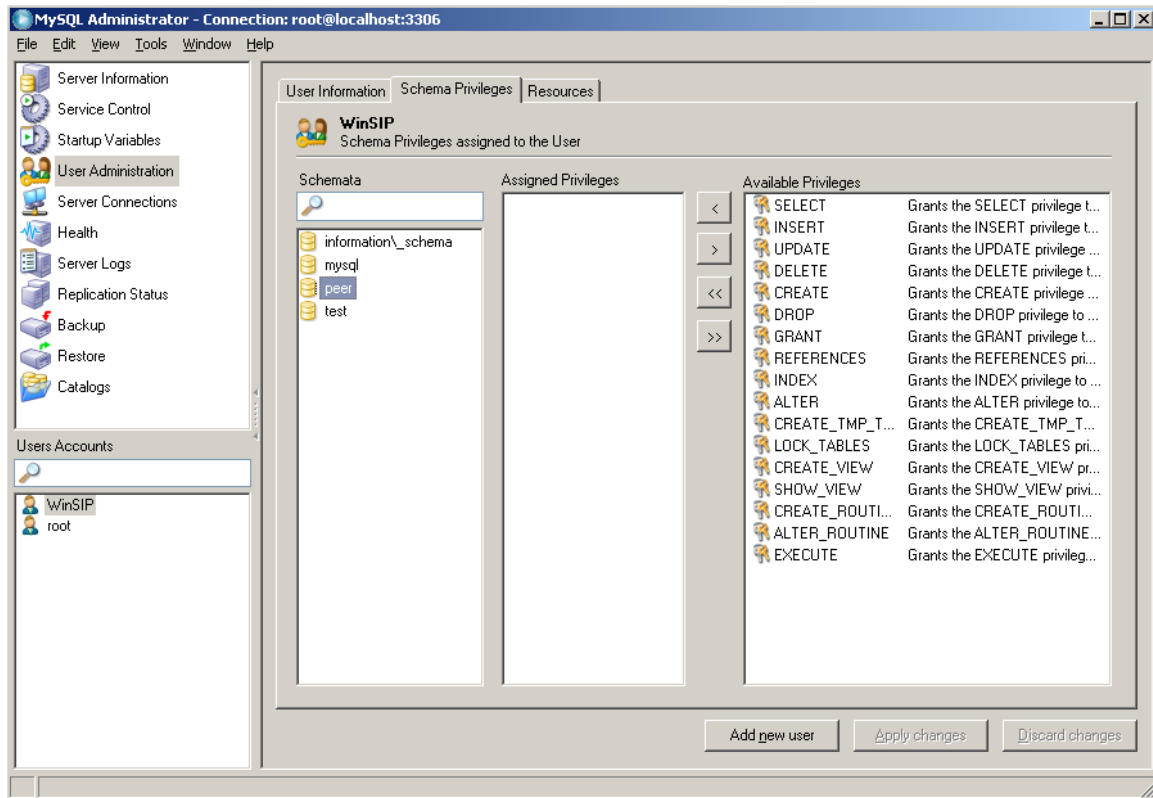

Select the Schema “peer” from the “Schemata” column.


Click on each of the following privileges, “SELECT”, “INSERT”, “UPDATE”, and “DELETE”. Use the “<” button to move each of the privileges to the “Assigned Privileges” column.

The screen should appear as below:

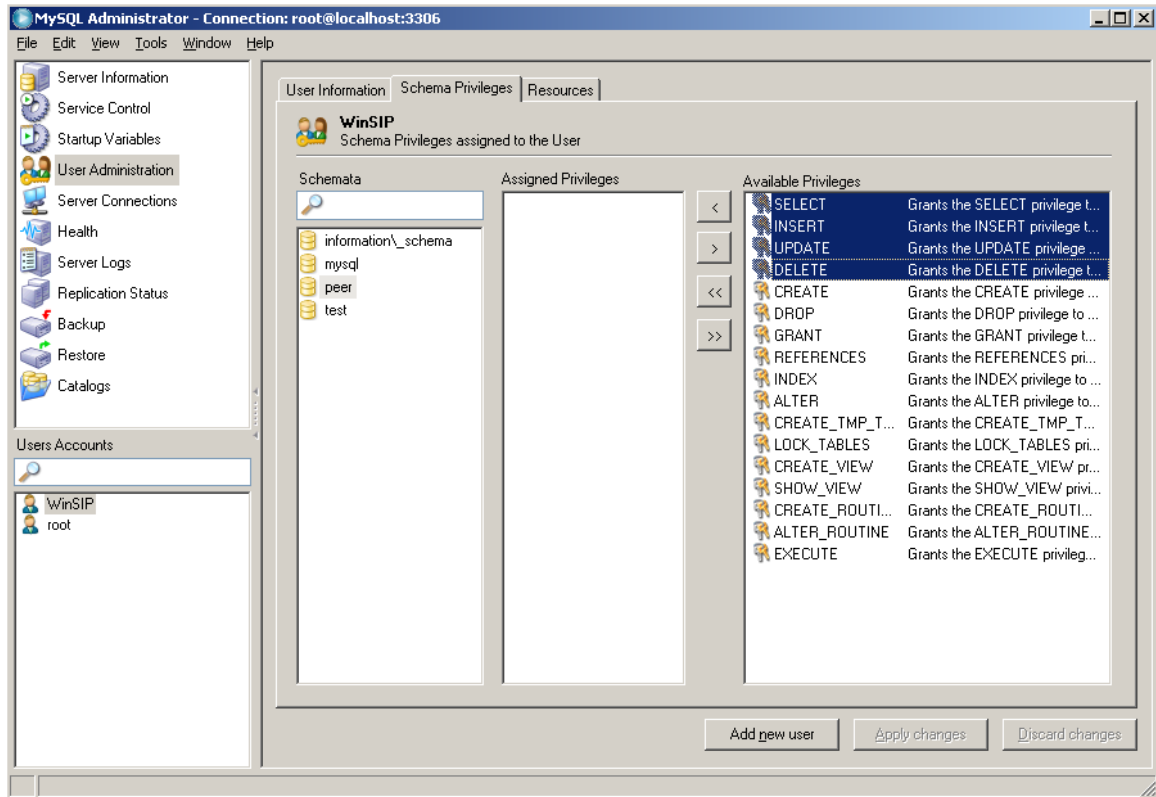

Press the button labeled "<" to assign the privileges.

The screen will appear as below:

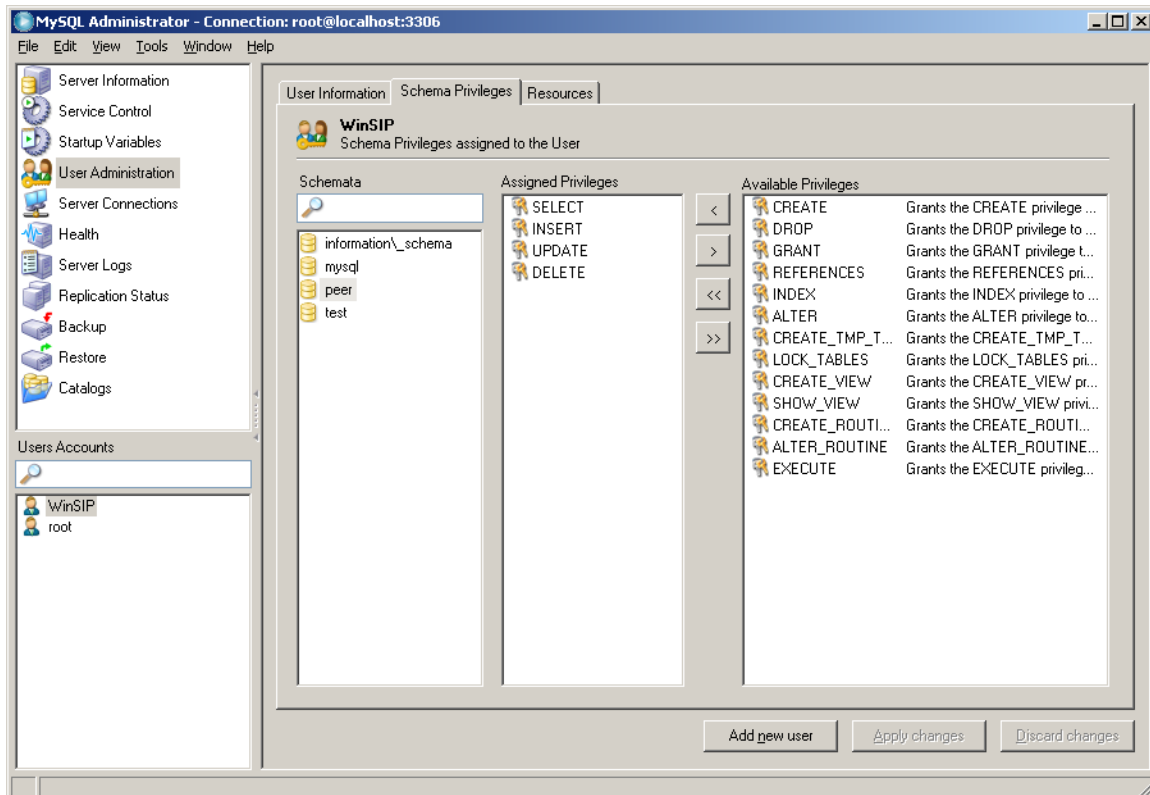

Press the “Apply changes” button.

The database is now fully configured.

You may close the MySQL Administrator.

Touchstone Technologies, Inc.
1500 Industry Road
Suites H
Hatfield, PA. 19044

www.touchstone-inc.com

Copyright 2002, 2013 Touchstone Technologies Inc.
All Rights Reserved